DRIVER AIRBAG (Continued)

WARNING: TO AVOID PERSONAL INJURY OR DEATH, THE DRIVER AIRBAG TRIM COVER MUST NEVER BE PAINTED. REPLACEMENT TRIM COVERS ARE SERVICED IN THE ORIGINAL COLORS. PAINT MAY CHANGE THE WAY IN WHICH THE MATERIAL OF THE TRIM COVER RESPONDS TO AN AIRBAG DEPLOYMENT. FAILURE TO OBSERVE THIS WARNING COULD RESULT IN OCCUPANT INJURIES UPON AIRBAG DEPLOYMENT.

NOTE: If the horn switch and tray have been removed from the sewn pouch in the airbag cushion retaining strap, be certain that they are properly reinstalled with the horn switch feed and ground pigtail wires properly oriented before assembling the trim cover onto the airbag housing. (Refer to 8 - ELECTRICAL/HORN/HORN SWITCH - INSTALLATION).

(1) Place the new driver airbag trim cover on a suitable work surface with the airbag receptacle facing up. Be certain to take the proper precautions to prevent the trim cover from receiving cosmetic damage during the following procedures.

(2) Carefully position the driver airbag into the trim cover receptacle. Be certain that the horn switch feed and ground pigtail wires are not pinched between the airbag housing and the trim cover locking blocks.

(3) Engage the upper and lower trim cover locking blocks with the lip of the driver airbag housing, then engage the locking blocks on each side of the trim cover with the lip of the housing. Be certain that each of the locking blocks is fully engaged on the lip of the airbag housing (Fig. 26).

(4) Reinstall the horn switch ground pigtail wire eyelet terminal over the upper right inflator stud on the back of the driver airbag housing.

(5) Reinstall the upper and lower airbag trim cover retainers over the inflator studs on the back of the driver airbag housing. Be certain that the tabs on each retainer are engaged in the slots of the upper and lower trim cover locking blocks (Fig. 25).

(6) Install and tighten the four nuts that secure the trim cover retainers to the inflator studs on the back of the driver airbag housing. Tighten the nuts to 7 N·m (60 in. lbs.).

(7) Engage the horn switch feed pigtail wire connector retainer in the mounting hole in the upper trim cover retainer.

(8) Reinstall the driver airbag onto the steering wheel. (Refer to 8 - ELECTRICAL/RESTRAINTS/ DRIVER AIRBAG - INSTALLATION).

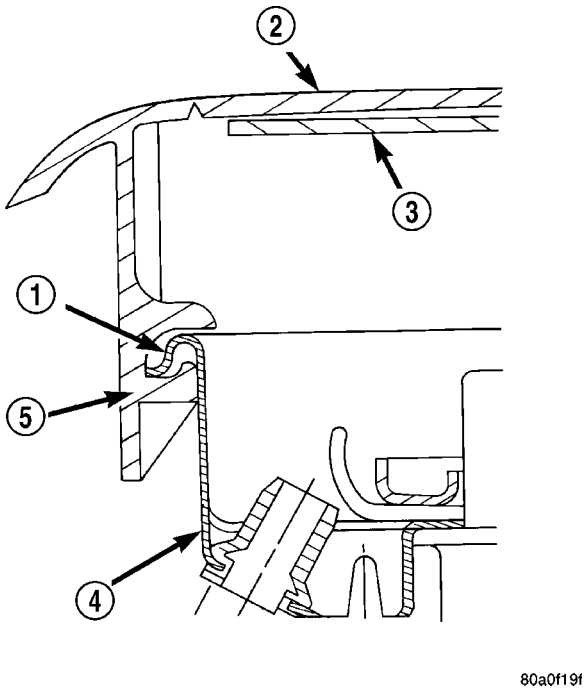

Fig. 26 Driver Airbag Trim Cover Locking Blocks Engaged

1 - LIP
2 - TRIM COVER
3 - HORN SWITCH
4 - AIRBAG HOUSING
5 - LOCKING BLOCK

INSTALLATION

The following procedure is for replacement of a faulty or damaged driver airbag. If the airbag is faulty or damaged, but not deployed, review the recommended procedures for handling non-deployed supplemental restraints. (Refer to 8 - ELECTRICAL/ RESTRAINTS - STANDARD PROCEDURE - HANDLING NON-DEPLOYED SUPPLEMENTAL RESTRAINTS). If the driver airbag has been deployed, review the recommended procedures for service after a supplemental restraint deployment before removing the airbag from the vehicle. (Refer to 8 - ELECTRICAL/RESTRAINTS - STANDARD PROCEDURE - SERVICE AFTER A SUPPLEMENTAL RESTRAINT DEPLOYMENT).