FRONT SEAT BELT BUCKLE

REMOVAL

The seat belt buckle on the driver's side front seat for all models also includes a seat belt switch. (Refer to 8 - ELECTRICAL/RESTRAINTS/SEAT BELT SWITCH - DESCRIPTION).

WARNING: TO AVOID PERSONAL INJURY OR DEATH, DURING AND FOLLOWING ANY SEAT BELT OR CHILD RESTRAINT ANCHOR SERVICE, CAREFULLY INSPECT ALL SEAT BELTS, BUCKLES, MOUNTING HARDWARE, RETRACTORS, TETHER STRAPS, AND ANCHORS FOR PROPER INSTALLATION, OPERATION, OR DAMAGE. REPLACE ANY BELT THAT IS CUT, FRAYED, OR TORN. STRAIGHTEN ANY BELT THAT IS TWISTED. TIGHTEN ANY LOOSE FASTENERS. REPLACE ANY BELT THAT HAS A DAMAGED OR INOPERATIVE BUCKLE OR RETRACTOR. REPLACE ANY BELT THAT HAS A BENT OR DAMAGED LATCH PLATE OR ANCHOR PLATE. REPLACE ANY CHILD RESTRAINT ANCHOR OR THE UNIT TO WHICH THE ANCHOR IS INTEGRAL THAT HAS BEEN BENT OR DAMAGED. NEVER ATTEMPT TO REPAIR A SEAT BELT OR CHILD RESTRAINT COMPONENT. ALWAYS REPLACE DAMAGED OR FAULTY SEAT BELT AND CHILD RESTRAINT COMPONENTS WITH THE CORRECT, NEW AND UNUSED REPLACEMENT PARTS LISTED IN THE DAIMLERCHRYSLER MOPAR PARTS CATALOG.

(1) On the driver side only, disconnect the seat belt switch pigtail wire connector from the body wire harness connector for the seat belt switch (Fig. 29).

(2) Remove the screw that secures the seat belt buckle lower anchor to the bracket on the rear of the upper inner front seat track (Fig. 30).

(3) Remove the front seat belt buckle from the front seat track bracket.

INSTALLATION

The seat belt buckle on the driver's side front seat for all models also includes a seat belt switch. The seat belt buckle on the driver's side front seat for all models also includes a seat belt switch. (Refer to 8 - ELECTRICAL/RESTRAINTS/SEAT BELT SWITCH - DESCRIPTION).

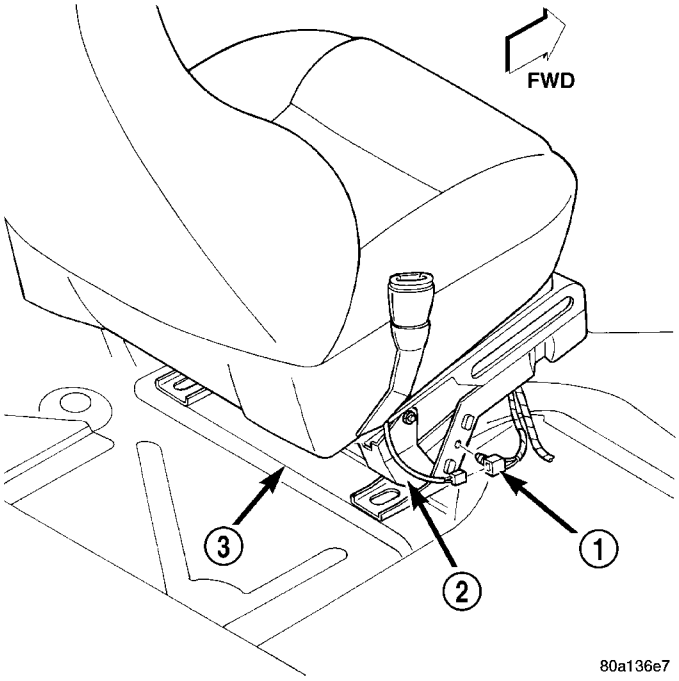

Fig. 29 Seat Belt Switch

1 - WIRE HARNESS CONNECTOR
2 - DRIVER SEAT RISER
4 - FLOOR PANEL

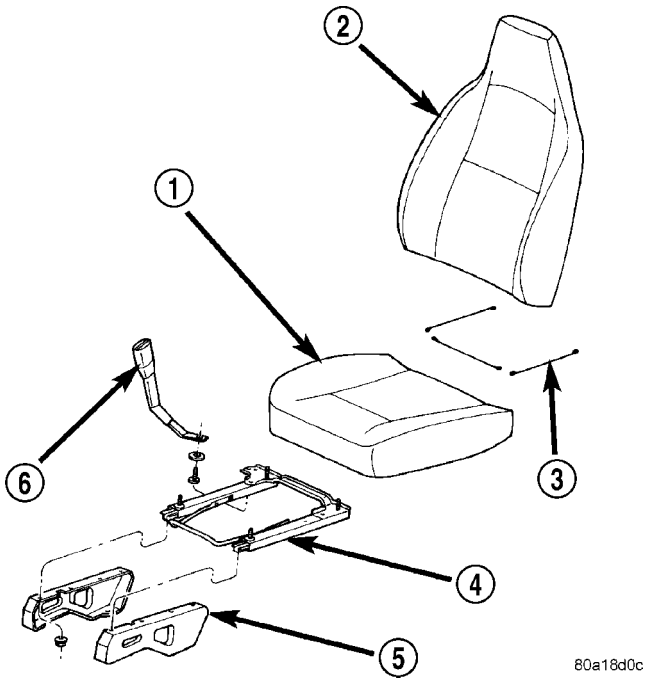

Fig. 30 Seat Belt Buckle

1 - SEAT CUSHION
2 - SEAT BACK
3 - TRIM ATTACHMENT WIRES
4 - SEAT TRACK
5 - SEAT RISER
6 - SEATBELT BUCKLE