PASSENGER AIRBAG ON/OFF SWITCH

DESCRIPTION

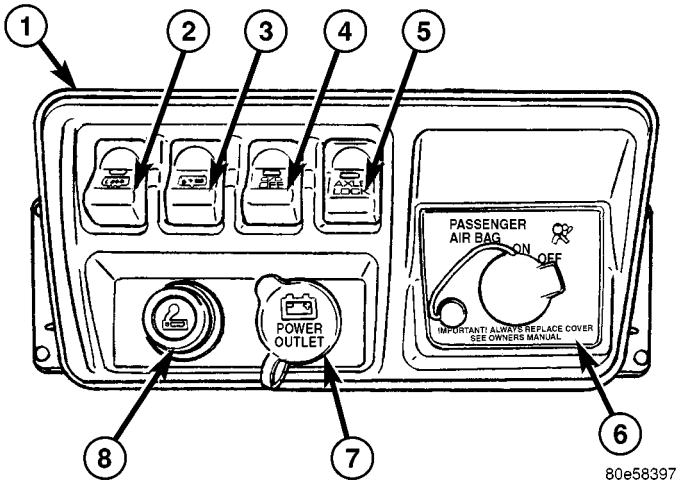

Fig. 35 Accessory Switch Bezel

1 - ACCESSORY SWITCH BEZEL
2 - REAR WINDOW DEFOGGER SWITCH (HARDTOP ONLY)
3 - REAR WIPER/WASHER SWITCH (HARDTOP ONLY)
4 - OVERDRIVE-OFF SWITCH (AUTOMATIC TRANSMISSION ONLY)
5 - AXLE LOCK SWITCH (OFF ROAD PACKAGE ONLY)
6 - PASSENGER AIRBAG ON/OFF SWITCH (WITHOUT REAR SEAT ONLY)
7 - ACCESSORY POWER OUTLET
8 - CIGAR LIGHTER

The passenger airbag on/off switch is standard equipment on all versions of this model that are equipped with the dual front airbag system, but are not equipped with a rear seat (Fig. 35). This switch is a two-position, resistor multiplexed switch with a single integral red Light-Emitting Diode (LED), and a non-coded key cylinder-type actuator. The switch is located on the passenger side end of the accessory switch bezel near the bottom of the instrument cluster center bezel to make the Off indicator visible to the front passenger seat occupant. When the switch is in its installed position, the only component visible through the dedicated opening of the accessory switch bezel is the key cylinder actuator. A small, tethered, molded plastic cap fits into the key cylinder actuator hole when the switch is not being used. The switch nomenclature and the Off indicator lens are integral to the accessory switch bezel. The text of the ″Off″ indicator is illuminated in amber when the Off position is selected with the ignition switch in the On position, while the On position of the switch is designated by text imprinted upon the accessory switch bezel, but is not illuminated. The remainder of the switch is concealed behind the accessory switch bezel.

The passenger airbag on/off switch housing is constructed of molded plastic and has three integral mounting tabs (Fig. 36). These mounting tabs are used to secure the switch to the back of the molded plastic accessory switch bezel with three small screws. The accessory switch bezel is secured to the instrument panel with four screws. A molded plastic connector receptacle on the back of the switch housing connects the switch to the vehicle electrical system through a dedicated take out of the body wire harness. The molded plastic harness connector insulator is keyed and latched to ensure proper and secure switch electrical connections. The passenger airbag on/off switch cannot be adjusted or repaired and, if faulty or damaged, the switch must be replaced.

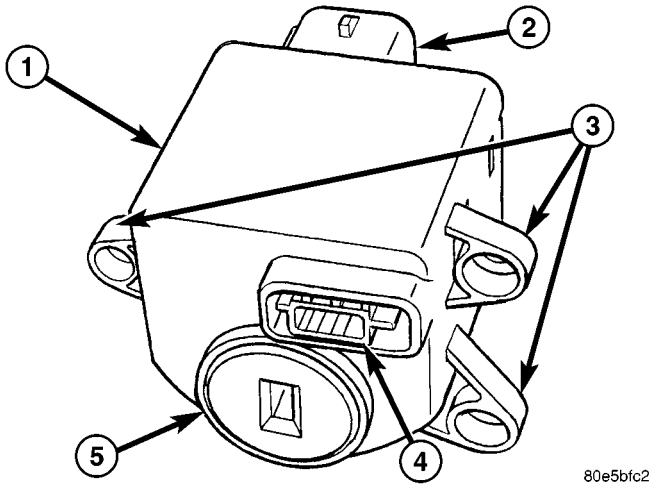

Fig. 36 Passenger Airbag On/Off Switch

1 - HOUSING
2 - CONNECTOR RECEPTACLE
3 - MOUNTING TAB (3)
4 - OFF INDICATOR
5 - KEY CYLINDER ACTUATOR

OPERATION

The passenger airbag on/off switch allows the customer to turn the passenger airbag function On or Off to accommodate certain uses of the right front seating position where airbag protection may not be desired. See the owner's manual in the vehicle glove box for specific recommendations on when to enable or disable the passenger airbag. The Off indicator of the switch will be illuminated whenever the switch is turned to the Off position and the ignition switch is in the On position.

The ignition key is the only key or object that should ever be inserted into the key cylinder actuator of the switch. The on/off switch requires only a partial key insertion to fully depress a spring-loaded locking plunger. The spring-loaded locking plunger prevents the user from leaving the key in the switch. The key will be automatically ejected when force is