PASSENGER AIRBAG ON/OFF SWITCH (Continued)

not applied. To actuate the passenger airbag on/off switch, insert the ignition key into the switch key actuator far enough to fully depress the plunger, then rotate the actuator to the desired switch position. When the switch key actuator is rotated to its clockwise stop (the key actuator slot will be aligned with the Off indicator), the Off indicator is illuminated and the passenger airbag is disabled. When the switch is rotated to its counterclockwise stop (the key actuator slot will be in a vertical position), the Off indicator will be extinguished and the passenger airbag is enabled.

The passenger airbag on/off switch connects one of two internal resistors in series between the passenger airbag mux switch sense and passenger airbag mux switch return circuits of the Airbag Control Module (ACM). The ACM continually monitors the resistance in these circuits to determine the switch position that has been selected. When the switch is in the Off position, the ACM provides a ground input to the switch through the passenger airbag indicator driver circuit, which energizes the Light-Emitting Diode (LED) that illuminates the Off indicator of the switch.

The ACM will also illuminate the Off indicator of the switch for about seven seconds each time the ignition switch is turned to the On position as a bulb test. The ACM will store a Diagnostic Trouble Code (DTC) for any fault it detects in the passenger airbag on/off switch or Off indicator circuits, and will illuminate the airbag indicator in the instrument cluster if a fault is detected. For proper diagnosis of the passenger airbag on/off switch or the ACM, a DRBIII® scan tool is required. Refer to the appropriate diagnostic information.

REMOVAL

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

(1) Disconnect and isolate the battery negative cable. Wait two minutes for the system capacitor to discharge before further service.

(2) Remove the passenger airbag on/off switch and accessory switch bezel from the instrument panel as a unit. (Refer to 23 - BODY/INSTRUMENT PANEL/ ACCESSORY SWITCH BEZEL - REMOVAL).

(3) From the back of the accessory switch bezel, remove the three screws that secure the passenger airbag on/off switch to the back of the bezel (Fig. 37).

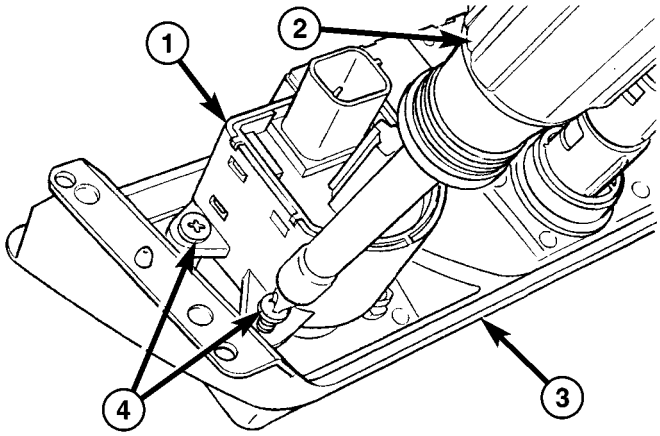

Fig. 37 Passenger Airbag On/Off Switch Remove/ Install

1 - PASSENGER AIRBAG ON/OFF SWITCH
2 - SCREW DRIVER
3 - ACCESSORY SWITCH BEZEL
4 - SCREW (3)

(4) Remove the passenger airbag on/off switch from the accessory switch bezel.

INSTALLATION

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

(1) Position the passenger airbag on/off switch to the back of the accessory switch bezel (Fig. 37).

(2) Install and tighten the three screws that secure the passenger airbag on/off switch to the back of the accessory switch bezel. Tighten the screws to 2 N·m (20 in. lbs.).