REAR SEAT BELT BUCKLE (Continued)

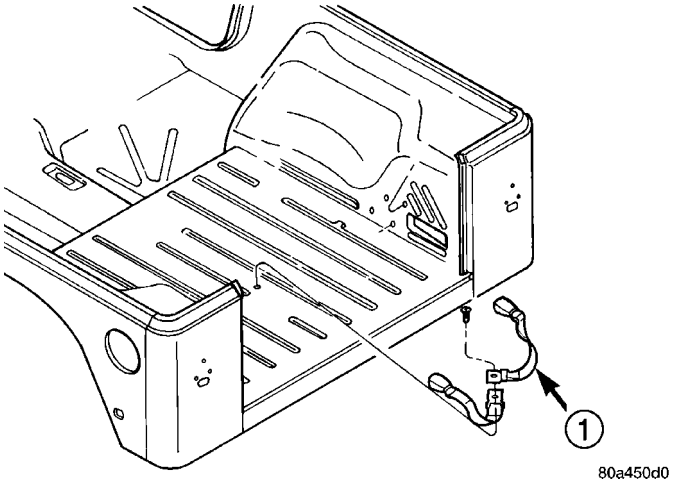

Fig. 40 Rear Seat Belt Buckles Remove/Install

1 - REAR SEAT BELT BUCKLE UNIT

INSTALLATION

WARNING: TO AVOID PERSONAL INJURY OR DEATH, DURING AND FOLLOWING ANY SEAT BELT OR CHILD RESTRAINT ANCHOR SERVICE, CAREFULLY INSPECT ALL SEAT BELTS, BUCKLES, MOUNTING HARDWARE, RETRACTORS, TETHER STRAPS, AND ANCHORS FOR PROPER INSTALLATION, OPERATION, OR DAMAGE. REPLACE ANY BELT THAT IS CUT, FRAYED, OR TORN. STRAIGHTEN ANY BELT THAT IS TWISTED. TIGHTEN ANY LOOSE FASTENERS. REPLACE ANY BELT THAT HAS A DAMAGED OR INOPERATIVE BUCKLE OR RETRACTOR. REPLACE ANY BELT THAT HAS A BENT OR DAMAGED LATCH PLATE OR ANCHOR PLATE. REPLACE ANY CHILD RESTRAINT ANCHOR OR THE UNIT TO WHICH THE ANCHOR IS INTEGRAL THAT HAS BEEN BENT OR DAMAGED. NEVER ATTEMPT TO REPAIR A SEAT BELT OR CHILD RESTRAINT COMPONENT. ALWAYS REPLACE DAMAGED OR FAULTY SEAT BELT AND CHILD RESTRAINT COMPONENTS WITH THE CORRECT, NEW AND UNUSED REPLACEMENT PARTS LISTED IN THE DAIMLERCHRYSLER MOPAR PARTS CATALOG.

(1) Lift the rear cargo area carpet far enough to position the rear seat belt buckle unit onto the rear cargo floor panel through one of the clearance slots in the carpet.

(2) Working through one of the clearance slots in the rear cargo area carpet, install and tighten the screw that secures the anchor of the rear seat belt buckle unit to the rear cargo floor panel (Fig. 40). Tighten the screw to 43 N·m (32 ft. lbs.).

(3) Tumble the folded rear seat cushion and back unit rearward onto the rear cargo floor panel.

(4) Slide both rear seat belt buckle units between the seat cushion and the seat back.

(5) Unfold the rear seat back from the seat cushion until the seat back latch is fully engaged.

SEAT BELT SWITCH

DESCRIPTION

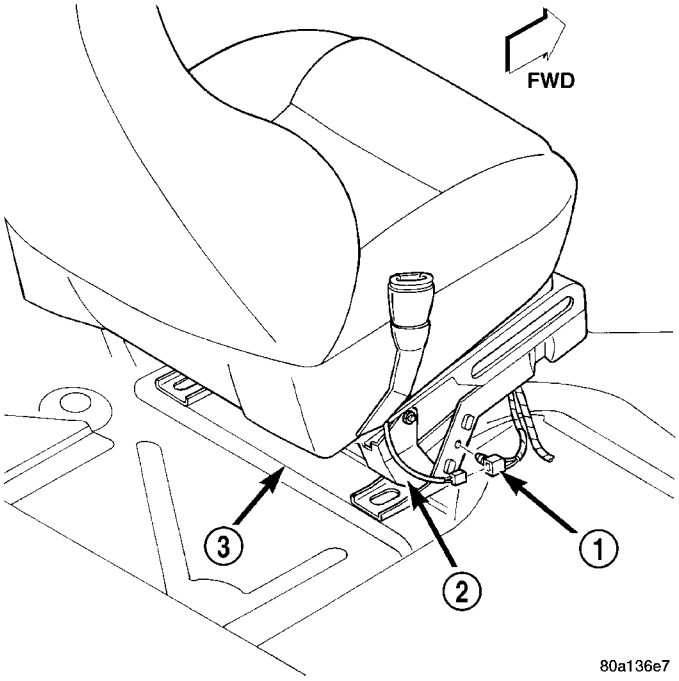

Fig. 41 Seat Belt Switch

1 - WIRE HARNESS CONNECTOR
2 - DRIVER SEAT RISER
4 - FLOOR PANEL

The seat belt switch is a small, normally closed, single pole, single throw, leaf contact, momentary switch. Only one seat belt switch is installed in the vehicle, and it is integral to the buckle of the driver side front seat belt buckle-half, located on the inboard side of the driver side front seat track (Fig. 41). The seat belt switch is connected to the vehicle electrical system through a two-wire pigtail wire and connector on the seat belt buckle-half, which is connected to a wire harness connector and take out of the body wire harness routed along the left side of the body sill in the passenger compartment.

The seat belt switch cannot be adjusted or repaired and, if faulty or damaged, the entire driver side front seat belt buckle-half unit must be replaced.

OPERATION

The seat belt switch is designed to control a path to ground for the seat belt switch sense input of the ElectroMechanical Instrument Cluster (EMIC). When