CABLE

DESCRIPTION

The speed control servo cable is connected between the speed control vacuum servo diaphragm and the throttle body control linkage.

OPERATION

This cable causes the throttle control linkage to open or close the throttle valve in response to movement of the vacuum servo diaphragm.

REMOVAL

2.4L

(1) Disconnect negative battery cable at battery.

(2) Hold throttle in wide open position. While held in this position, slide throttle control cable pin (Fig. 1) from throttle body bellcrank. Also slide servo cable pin from throttle body bellcrank.

(3) Using a pick or small screwdriver, press release tab (Fig. 1) to release plastic cable mount from bracket. **Press on tab only enough to release cable from bracket. If tab is pressed too much, it will be broken.** To remove throttle cable from throttle body bracket, slide cable towards front of vehicle.

(4) After removing throttle control cable at throttle body, slide servo cable from throttle body.

(5) If necessary, disconnect opposite end of servo cable at servo. Refer to Servo Removal/Installation.

4.0L

(1) Disconnect negative battery cable at battery.

(2) Using finger pressure only, remove cable connector by pushing connector off the throttle body bellcrank pin (Fig. 2). **DO NOT try to pull cable connector off perpendicular to the bellcrank pin. Connector will be broken.**

(3) Two release tabs are located on sides of speed control cable at cable bracket (Fig. 2). Squeeze tabs together and push cable out of bracket.

(4) Unclip cable from cable guide at valve cover.

(5) If necessary, disconnect opposite end of servo cable at servo. Refer to Servo Removal/Installation.

INSTALLATION

2.4L

(1) Install end of cable to speed control servo. Refer to Servo Removal/Installation.

(2) Slide speed control cable plastic mount into throttle body bracket.

(3) Install speed control cable connector onto throttle body bellcrank pin (push rearward to snap into location).

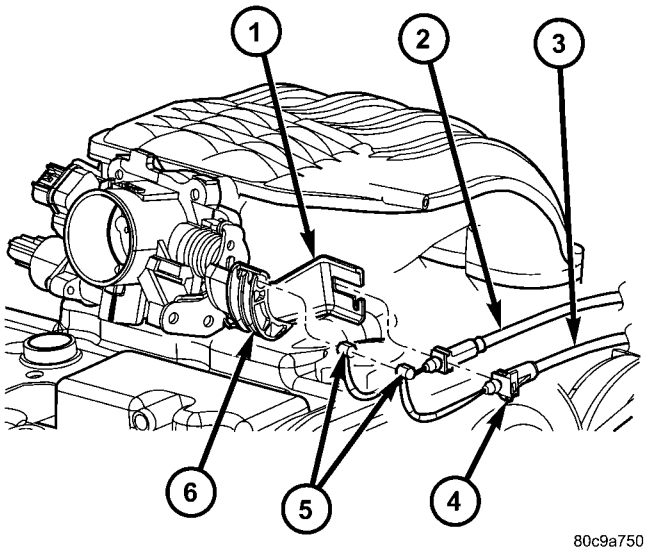

Fig. 1 SERVO CABLE AT THROTTLE BODY - 2.4L

1 - MOUNTING BRACKET
2 - SPEED CONTROL CABLE
3 - THROTTLE CABLE
4 - RELEASE TAB
5 - CABLE PINS
6 - BELLCRANK

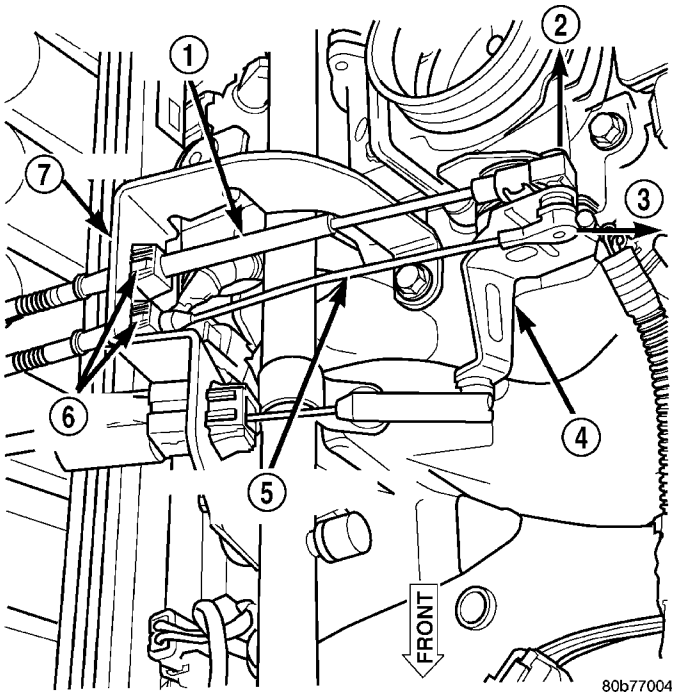

Fig. 2 SERVO CABLE AT THROTTLE BODY - 4.0L

1 - ACCELERATOR CABLE
2 - OFF
3 - OFF
4 - THROTTLE BODY BELLCRANK
5 - SPEED CONTROL CABLE
6 - RELEASE TABS
7 - BRACKET