SERVO (Continued)

(6) Remove 2 mounting nuts holding servo cable sleeve to bracket (Fig. 4).

(7) Pull speed control cable sleeve and servo away from servo mounting bracket to expose cable retaining clip (Fig. 4) and remove clip. Note: The servo mounting bracket displayed in (Fig. 4) is a typical bracket and may/may not be applicable to this model vehicle.

(8) Remove servo from mounting bracket. While removing, note orientation of servo to bracket.

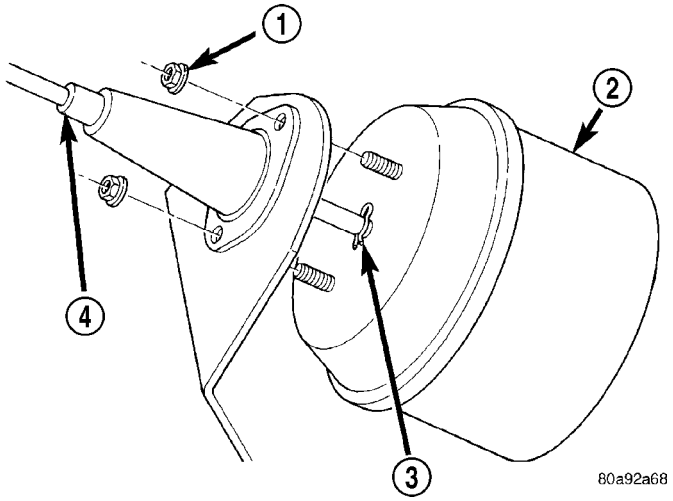

Fig. 4 SERVO CABLE CLIP REMOVE/INSTALL - TYPICAL

1 - SERVO MOUNTING NUTS (2)
2 - SERVO
3 - CABLE RETAINING CLIP
4 - SERVO CABLE AND SLEEVE

INSTALLATION

(1) Position servo to mounting bracket.

(2) Align hole in cable connector with hole in servo pin. Install cable-to-servo retaining clip.

(3) Insert servo mounting studs through holes in servo mounting bracket.

(4) Install servo mounting nuts and tighten to 8.5 N·m (75 in. lbs.).

(5) Connect vacuum line at servo.

(6) Connect electrical connector at servo.

(7) Connect servo cable to throttle body. Refer to Cable Removal/Installation.

(8) Connect negative battery cable to battery.

(9) Before starting engine, operate accelerator pedal to check for any binding.

SWITCH

DESCRIPTION

There are two separate switch pods that operate the speed control system. The steering-wheel-mounted switches use multiplexed circuits to provide inputs to the PCM for ON, OFF, RESUME, ACCELERATE, SET, DECEL and CANCEL modes. Refer to the owner's manual for more information on speed control switch functions and setting procedures.

The individual switches cannot be repaired. If one switch fails, the entire switch module must be replaced.

OPERATION

When speed control is selected by depressing the ON, OFF switch, the PCM allows a set speed to be stored in its RAM for speed control. To store a set speed, depress the SET switch while the vehicle is moving at a speed between approximately 35 and 85 mph. In order for the speed control to engage, the brakes cannot be applied, nor can the gear selector be indicating the transmission is in Park or Neutral.

The speed control can be disengaged manually by:

- Stepping on the brake pedal
- Depressing the OFF switch
- Depressing the CANCEL switch.

The speed control can be disengaged also by any of the following conditions:

- An indication of Park or Neutral
- The VSS signal increases at a rate of 10 mph per second (indicates that the co-efficient of friction between the road surface and tires is extremely low)
- Depressing the clutch pedal.
- Excessive engine rpm (indicates that the transmission may be in a low gear)
- The VSS signal decreases at a rate of 10 mph per second (indicates that the vehicle may have decelerated at an extremely high rate)
- If the actual speed is not within 20 mph of the set speed

The previous disengagement conditions are programmed for added safety.

Once the speed control has been disengaged, depressing the ACCEL switch restores the vehicle to the target speed that was stored in the PCM's RAM.