FRONT WIPERS/WASHERS (Continued)

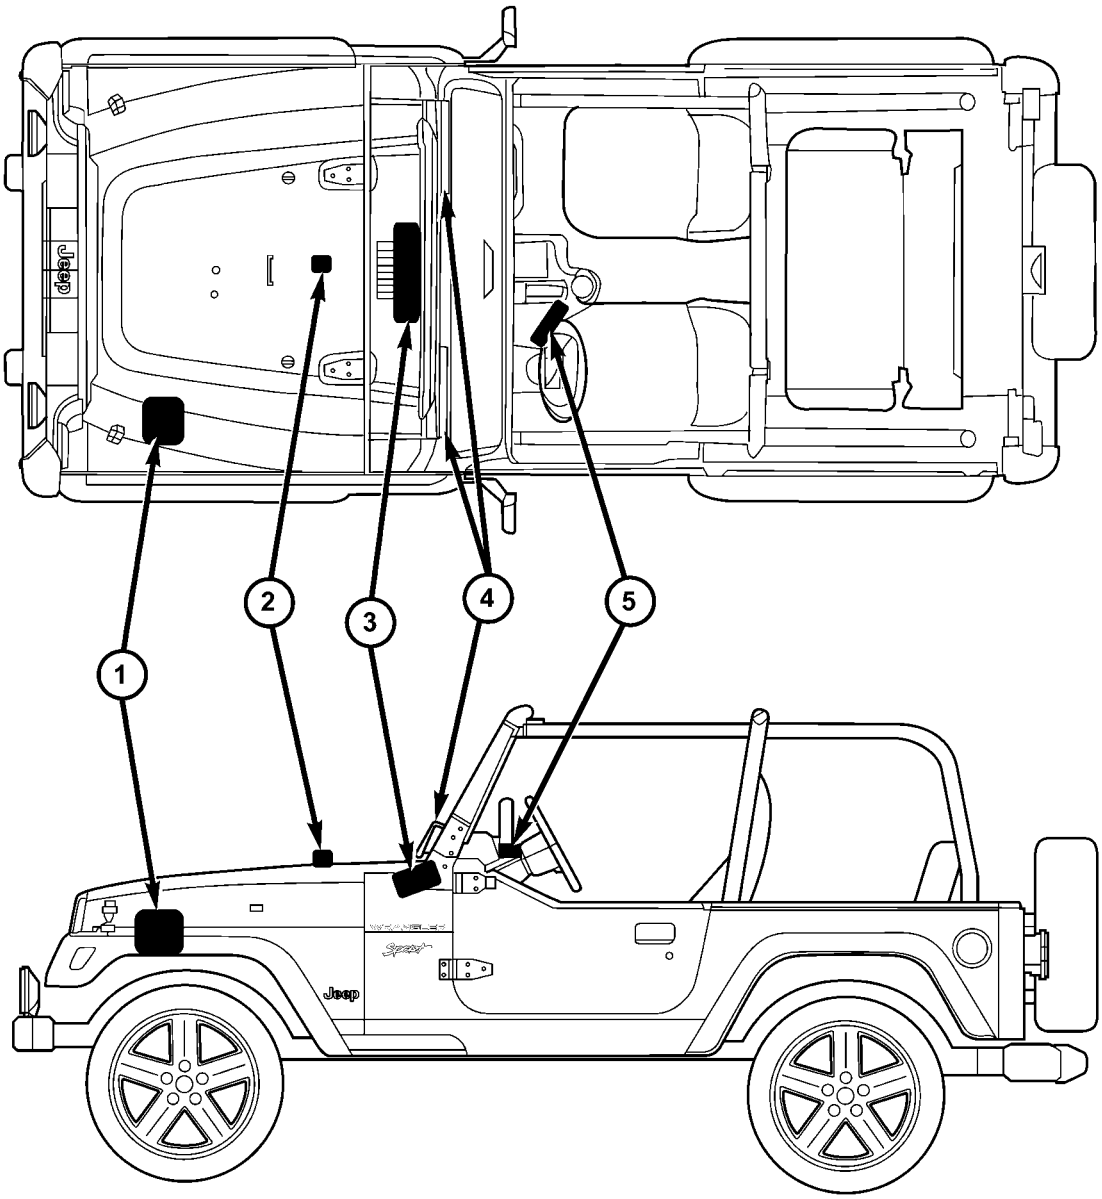

Fig. 1 Front Wiper & Washer System

1 - WASHER RESERVOIR, PUMP/MOTOR
2 - FRONT WASHER NOZZLE
3 - FRONT WIPER MODULE
4 - FRONT WIPER ARM & BLADE (2)
5 - RIGHT MULTI-FUNCTION SWITCH

- **Front Washer Nozzle** - The single fluidic front washer nozzle is secured by an integral latch feature to a dedicated opening near the rear of the hood panel. The washer plumbing fitting for the washer nozzle is concealed beneath the hood panel.
- **Front Washer Pump/Motor** - The front washer pump/motor unit is located in a dedicated hole on the lower inboard side of the washer reservoir, on the top of the left front wheel house in the engine compartment. The front washer pump/motor unit is located below and forward of the optional rear washer pump/motor unit mounting hole.
- **Front Washer Plumbing** - The plumbing for the front washer system consists of rubber hoses and molded plastic fittings. The plumbing is routed along the left side of the engine compartment from the washer reservoir, and up the cowl panel to the hood panel rear reinforcement. Then along the hood panel rear reinforcement to the front washer nozzle fitting.
- **Front Wiper Arm** - The two front wiper arms are secured with integral latches to the serrated ends