FRONT CHECK VALVE (Continued)

INSTALLATION

(1) Position the front check valve in the engine compartment.

(2) With the directional arrow on the check valve pointed in the direction of the system flow, reconnect the washer supply hose from the reservoir to the barbed inlet nipple of the front check valve (Fig. 6).

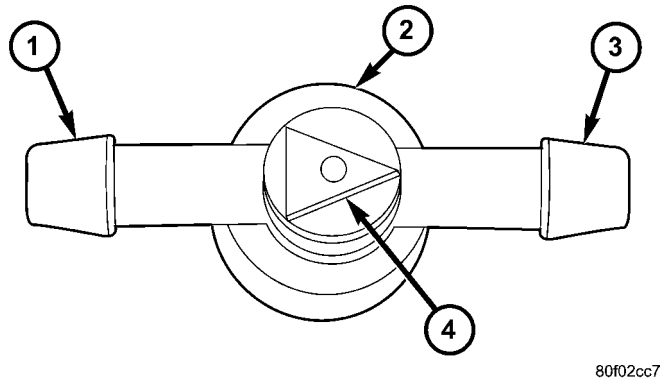

Fig. 6 Check Valve

1 - INLET NIPPLE
2 - CHECK VALVE
3 - OUTLET NIPPLE
4 - FLOW DIRECTION ARROW

(3) Reconnect the washer supply hose from the front washer nozzle to the barbed outlet nipple of the front check valve.

(4) Check that the washer supply hoses are properly routed and are not pinched.

(5) Close and latch the hood.

FRONT WASHER HOSES/ TUBES

DESCRIPTION

The front washer plumbing consists of a small diameter rubber front washer hose that is routed from the barbed outlet nipple of the electric front washer pump/motor unit on the washer reservoir around the front of the reservoir to the top of the left front fender wheel house. The hose is secured by six plastic tie wraps to the headlamp and dash wire harness and routed with the harness to the top dash panel near the center of the engine compartment (Fig. 7).

Near the center of the dash panel the front washer hose is routed to the inner rear hood panel reinforcement. Two molded plastic routing clips secure the front washer hose to the underside of the hood panel reinforcement. The front washer hose is connected to the barbed inlet nipple of the front washer check valve near the inner center hood panel reinforcement. A short piece of washer hose then connects the barbed outlet nipple of the front washer check valve to the barbed nipple of the front washer nozzle on the underside of the hood panel.

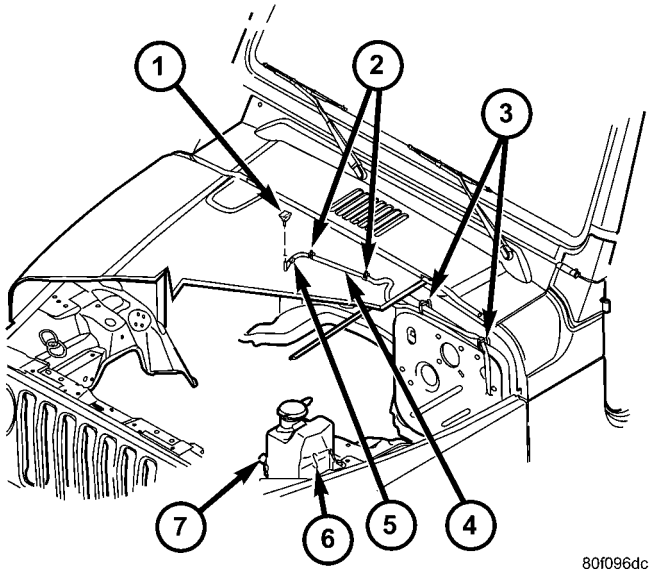

Fig. 7 Front Washer Plumbing

1 - FRONT WASHER NOZZLE
2 - CLIP (2)
3 - HARNESS CLIP (2)
4 - WASHER SUPPLY HOSE
5 - FRONT CHECK VALVE
6 - WASHER RESERVOIR
7 - FRONT WASHER PUMP/MOTOR

Washer hose is available for service only as roll stock, which must then be cut to length. Molded plastic washer hose fittings cannot be repaired. If these fittings are faulty or damaged, they must be replaced.

OPERATION

Washer fluid in the washer reservoir is pressurized and fed by the front washer pump/motor through the front washer system plumbing and fittings to the front washer check valve and the front washer nozzle. Whenever routing the washer hose or a wire harness containing a washer hose, it must be routed away from hot, sharp, or moving parts; and, sharp bends that might pinch the hose must be avoided.

FRONT WASHER NOZZLE

DESCRIPTION

The molded black plastic front washer nozzle has an integral latch feature that secures it in a dedicated mounting hole located at the center near the rear edge of the hood panel (Fig. 8). The washer nozzle is constructed in two pieces. The nozzle housing includes the domed hood that is visible on the outer surface of the hood panel, and the integral latch and