FRONT WIPER ARM (Continued)

blade will remain off the glass with the latch in this position.

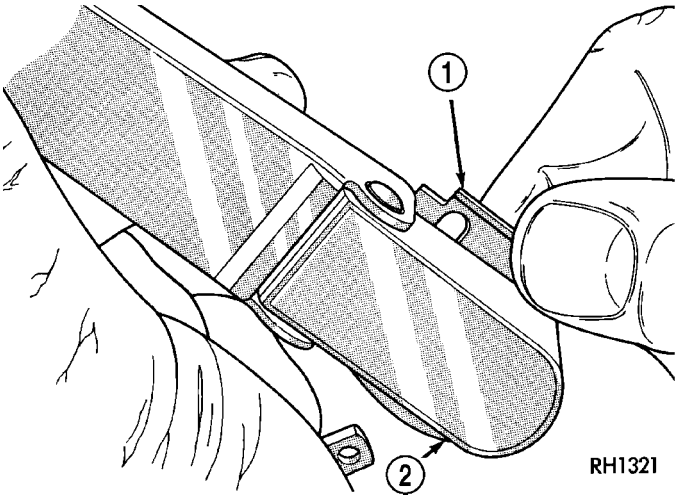

Fig. 13 Front Wiper Arm Remove/Install

1 - LATCH
2 - WIPER ARM PIVOT END

CAUTION: The use of a screwdriver or other prying tool to remove a wiper arm may distort it. This distortion could allow the arm to come off of the wiper pivot during wiper operation, regardless of how carefully it is reinstalled.

(2) Using a slight rocking motion, remove the front wiper arm pivot end from the wiper pivot driver.

INSTALLATION

NOTE: Be certain that the wiper motor is in the park position before attempting to install the wiper arms. Turn the ignition switch to the On position and move the right multi-function switch control stalk to its Off position. If the wiper pivots move, wait until they stop moving, then turn the ignition switch back to the Off position. The wiper motor is now in its park position.

(1) The front wiper arms must be indexed to the wiper pivots with the wiper motor in the park position to be properly installed (Fig. 14). Position the front wiper arm pivot ends onto the wiper pivot drivers so that the tip of the wiper blade is on the upper edge of the lower windshield blackout area, + 15 millimeters/– 0 millimeter (+ 0.59 inch/– 0 inch).

(2) Once the wiper arm is indexed to the wiper pivot, lift the wiper arm away from the windshield slightly to relieve the spring tension on the latch plate, then push the latch into the locked position (Fig. 13). Gently lower the wiper arm until the wiper blade is in position on the windshield glass.

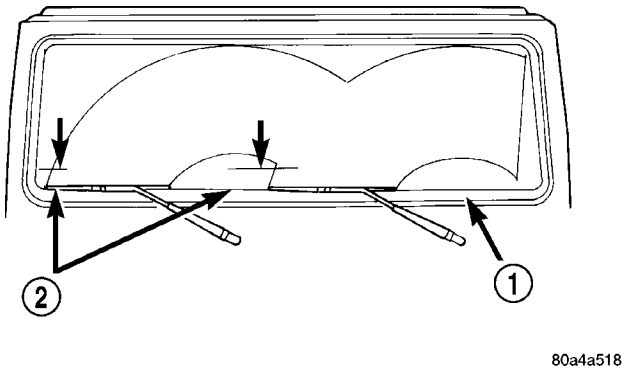

Fig. 14 Front Wiper Arm Installation

1 - WINDSHIELD BLACKOUT AREA
2 - PARK BLADE ON UPPER EDGE OF BLACKOUT AREA
+15 mm – 0 mm (+0.59 in. – 0 in.)

(3) Wet the windshield glass, then operate the front wipers. Move the right multi-function switch control stalk to the Off position, then check for correct wiper arm position. Repeat the adjustment as required.

FRONT WIPER BLADE

DESCRIPTION

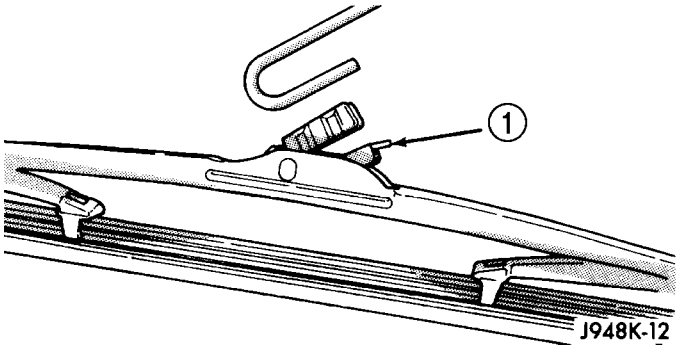

Fig. 15 Wiper Blade - Typical

1 - RELEASE TAB

Each front wiper blade is secured by an integral latching pivot block to the hook formation on the tip of each front wiper arm, and rests on the glass near the base of the windshield when the wipers are not in operation (Fig. 15). The wiper blade consists of the following components:

- **Superstructure** - The superstructure includes several stamped steel bridges and links with claw formations that grip the wiper blade element. Also included in this unit is the latching, molded plastic pivot block that secures the superstructure to the wiper arm. All of the metal components of the wiper blade have a satin black finish applied.