FRONT WIPER MODULE (Continued)

(5) Disconnect the body wire harness connector for the front wiper motor from the motor pigtail wire connector (Fig. 18).

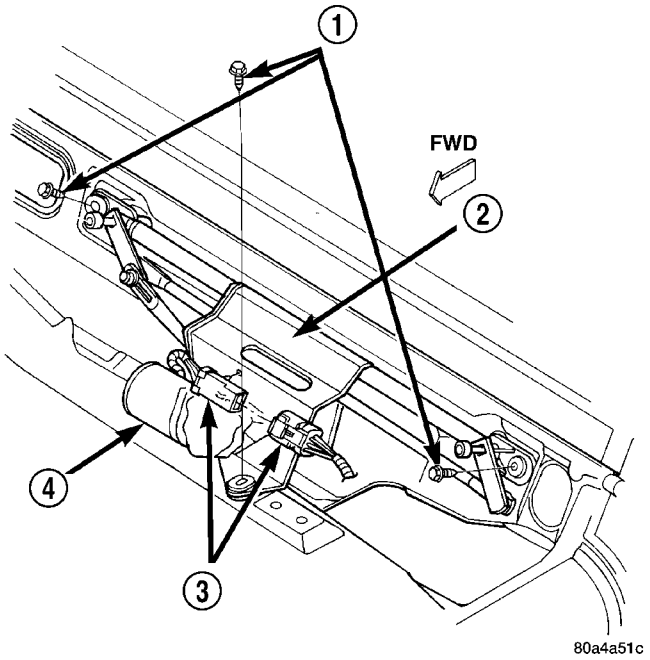

Fig. 18 Front Wiper Module Remove/Install

1 - SCREW (3)
2 - MODULE BRACKET
3 - WIRE HARNESS CONNECTOR
4 - WIPER MOTOR

(6) Remove the three screws that secure the front wiper module mounting bracket to the cowl plenum panel.

(7) Remove the front wiper module from the cowl plenum panel as a unit.

DISASSEMBLY

The front wiper motor and its rubber boot are available for service replacement. Following are the procedures for disassembling these components from the front wiper module unit.

(1) Remove the front wiper module from the cowl plenum. (Refer to 8 - ELECTRICAL/FRONT WIPERS/WASHERS/FRONT WIPER MODULE - REMOVAL).

(2) Release the retainer that secures the wiper motor pigtail wire connector to the front wiper module bracket.

(3) Turn the front wiper module over and remove the nut that secures the wiper motor crank arm to the wiper motor output shaft.

(4) Remove the three screws that secure the wiper motor to the front wiper module mounting bracket.

(5) Remove the wiper motor from the front wiper module bracket.

ASSEMBLY

The front wiper motor and its rubber boot are available for service replacement. Following are the procedures for reassembling these components onto the front wiper module unit.

(1) Position the wiper motor onto the front wiper module bracket.

(2) Install and tighten the three screws that secure the wiper motor to the front wiper module bracket. Tighten the screws to 8 N·m (70 in. lbs.).

(3) Position the wiper motor crank arm onto the front wiper motor output shaft.

(4) Install and tighten the nut that secures the wiper motor crank arm to the front wiper motor output shaft. Tighten the nut to 12 N·m (101 in. lbs.).

(5) Engage the wiper motor pigtail wire connector retainer in the locating hole on the front wiper module bracket.

(6) Reinstall the front wiper module into the cowl plenum. (Refer to 8 - ELECTRICAL/FRONT WIPERS/WASHERS/FRONT WIPER MODULE - INSTALLATION).

INSTALLATION

(1) Position the front wiper module into the cowl plenum as a unit (Fig. 18).

(2) Install and tighten the three screws that secure the front wiper module mounting bracket to the cowl plenum panel. Tighten the screws to 12 N·m (105 in. lbs.).

(3) Reconnect the body wire harness connector for the front wiper motor to the motor pigtail wire connector.

(4) Reinstall the cowl plenum cover/grille panel over the cowl plenum. (Refer to 23 - BODY/EXTERIOR/COWL GRILLE AND SCREEN - INSTALLATION).

(5) Reconnect the battery negative cable.

(6) Close and latch the hood.

(7) Reinstall the front wiper arms onto the wiper pivots. (Refer to 8 - ELECTRICAL/FRONT WIPERS/WASHERS/FRONT WIPER ARM - INSTALLATION).