RIGHT MULTI-FUNCTION SWITCH (Continued)

| RIGHT MULTI-FUNCTION SWITCH TESTS | |
|---|---|
| SWITCH POSITION | CONTINUITY BETWEEN PINS |
| OFF | 1 & 6 |
| *LOW | 4 & 6 |
| *MIST | 4 & 6 |
| HIGH | 4 & 5 |
| WASH | 3 & 4 |
| *DELAY | 1 & 6 |

*The intermittent wipe logic circuit within the right multi-function switch contains active electronic elements, which cannot be tested using conventional diagnostic tools. In addition, the function of the normally open contacts of the wiper relay internal to the switch cannot be tested properly unless the switch is connected to battery current (Pin 4) and ground (Pin 2). If all circuits and functions of the front wiper system and the right multi-function switch are operative except for the intermittent wipe, wipe-after-wash feature, and/or the front wipers will not park, replace the right multi-function switch with a known good unit and test system operation again.

(4) If the right multi-function switch fails any of the continuity checks, replace the faulty switch. If the switch is OK, test and repair the front wiper and washer system circuits between the right multi-function switch and the front wiper motor or the front washer pump/motor as required.

## REMOVAL

**WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.**

(1) Disconnect and isolate the battery negative cable.

(2) Remove the steering column opening cover from the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/STEERING COLUMN OPENING COVER - REMOVAL).

(3) From below the steering column, remove the two screws that secure the lower steering column shroud to the upper shroud (Fig. 21).

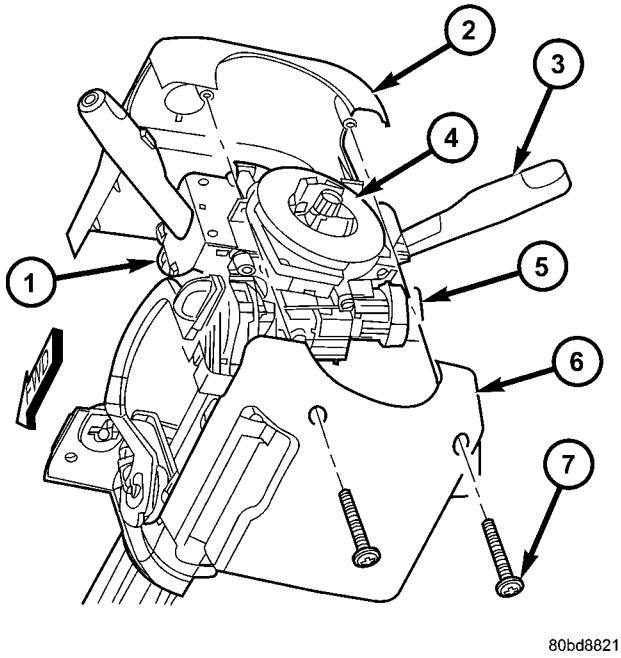


***Fig. 21 Steering Column Shrouds Remove/Install***

1 - LEFT MULTI-FUNCTION SWITCH
2 - UPPER SHROUD
3 - RIGHT MULTI-FUNCTION SWITCH
4 - CLOCKSPRING
5 - IGNITION LOCK CYLINDER HOUSING
6 - LOWER SHROUD
7 - SCREW (2)

(4) If the vehicle is equipped with the optional tilt steering column, move the tilt steering column to the fully lowered position and leave the tilt release lever in the released (down) position.

(5) Remove both the upper and lower shrouds from the steering column.

(6) Disconnect the body wire harness connector for the left multi-function switch from the connector receptacle on the back of the switch.

(7) Disconnect the body wire harness connector for the right multi-function switch from the connector receptacle on the back of the switch.

(8) Remove the two screws that secure the multi-function switch assembly to the upper steering column housing (Fig. 22).

(9) Remove the multi-function switch assembly from the upper steering column housing.

(10) Remove the two small screws that secure the right multi-function switch to the left multi-function switch mounting housing.

(11) Grasp the right multi-function switch control stalk firmly and pull the switch toward the right far enough to disengage the alignment pins on the top (1