RIGHT MULTI-FUNCTION SWITCH (Continued)

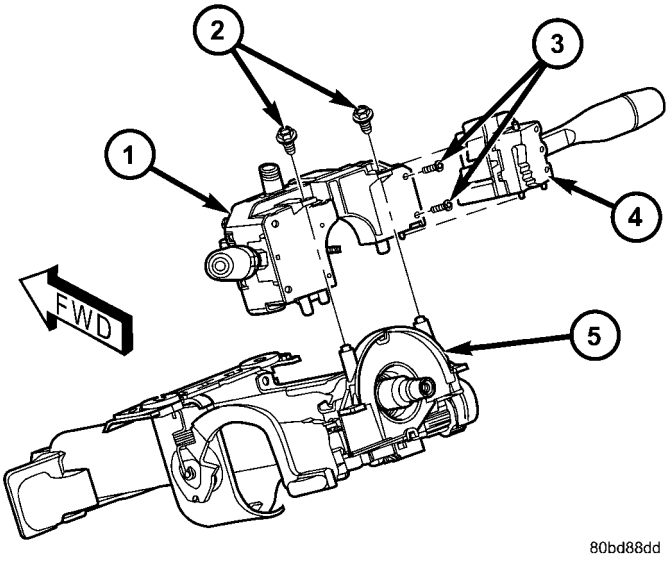

Fig. 22 Multi-Function Switch Remove/Install

1 - LEFT MULTI-FUNCTION SWITCH
2 - SCREW (2)
3 - SCREW (2)
4 - RIGHT MULTI-FUNCTION SWITCH
5 - UPPER STEERING COLUMN HOUSING

pin) and bottom (2 pins) of the right switch housing from the alignment ramps on the left switch mounting housing.

(12) Remove the right multi-function switch from the left multi-function switch mounting housing.

INSTALLATION

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

(1) Position the right multi-function switch to the mounting housing of the left multi-function switch.

(2) Grasp the right multi-function switch control stalk firmly and slide the switch to the left far enough to engage the alignment pins on the top (1 pin) and bottom (2 pins) of the right switch housing into the alignment ramps of the left multi-function switch mounting housing.

(3) Install and tighten the two small screws that secure the right multi-function switch to the left multi-function switch mounting housing (Fig. 22). Tighten the screws to 2 N·m (20 in. lbs.).

CAUTION: Before attempting to install the multi-function switch, be certain that the left switch control stalk is in the neutral turn signal position and the turn signal cancel actuator is in the retracted (neutral) position.

(4) Position the multi-function switch assembly onto the upper steering column housing.

(5) Install and tighten the two screws that secure the multi-function switch assembly to the upper steering column housing. Tighten the screws to 2 N·m (20 in. lbs.).

(6) Reconnect the body wire harness connector for the right multi-function switch to the connector receptacle on the back of the switch.

(7) Reconnect the body wire harness connector for the left multi-function switch to the connector receptacle on the back of the switch.

(8) Position both the upper and lower shrouds onto the steering column (Fig. 23). Be certain that the locating tabs for the left and right multi-function switch control stalk watershields are properly engaged in the openings of both the upper and lower shrouds.

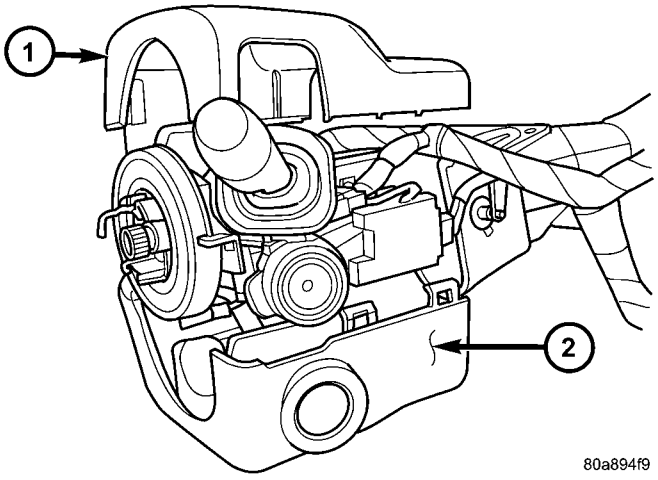

Fig. 23 Shroud Remove/Install

1 - UPPER SHROUD
2 - LOWER SHROUD

(9) From below the steering column, install and tighten the two screws that secure the lower steering column shroud to the upper shroud. Tighten the screws to 2 N·m (18 in. lbs.).

(10) If the vehicle is equipped with the optional tilt steering column, move the tilt steering column to the fully raised position and secure it in place by moving the tilt release lever back to the locked (up) position.