REAR WIPERS/WASHERS (Continued)

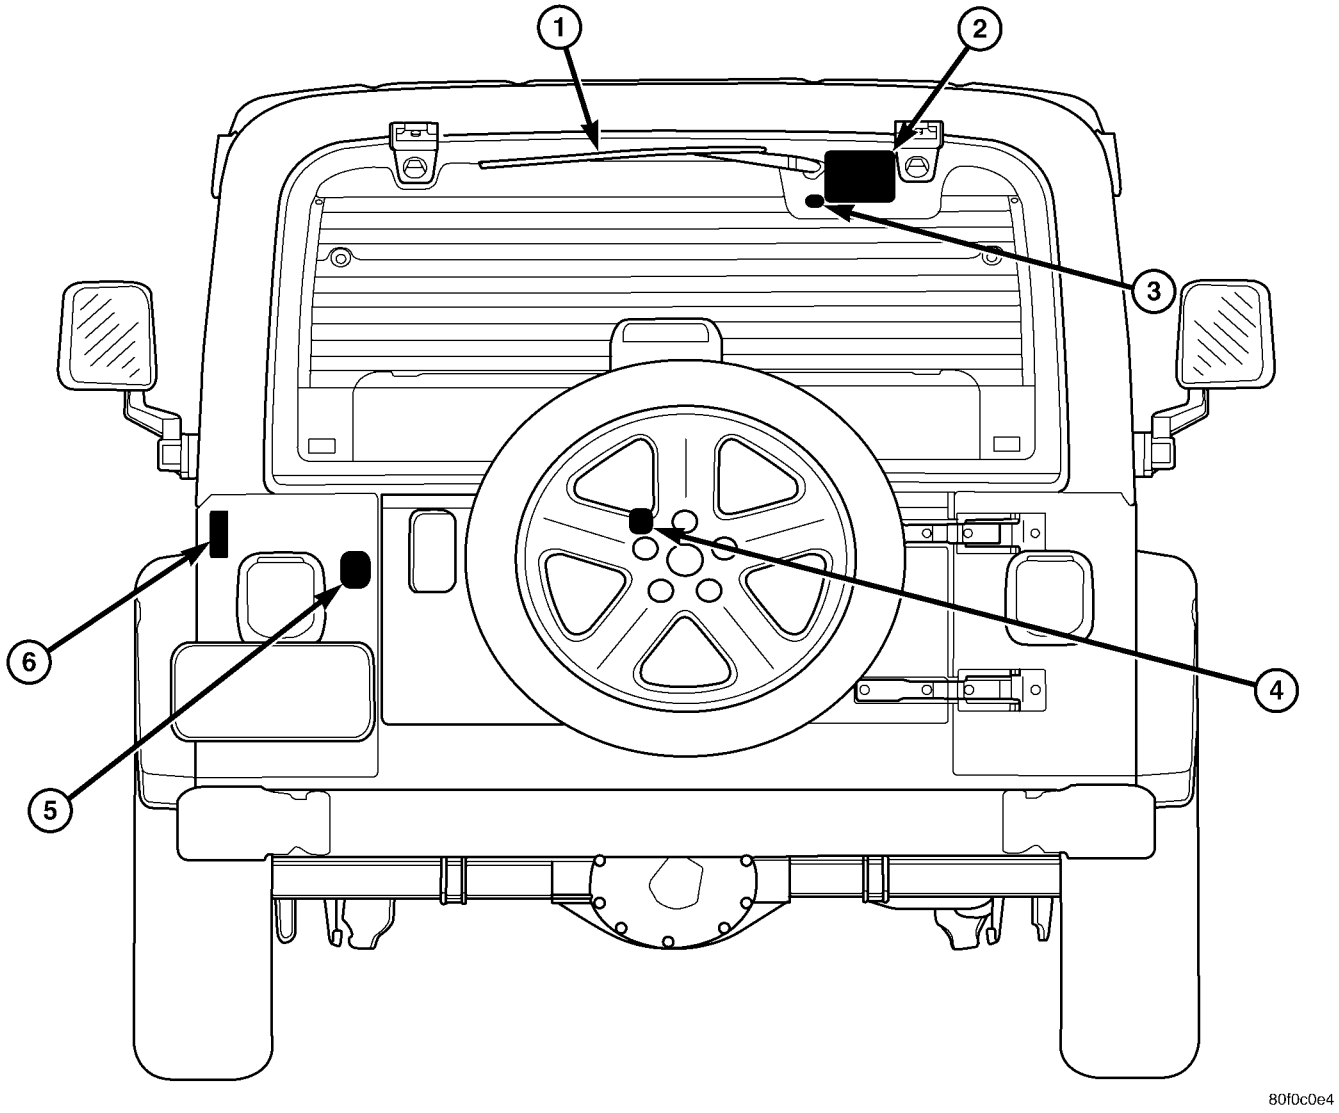

Fig. 1 Rear Wiper & Washer System

1 - WIPER ARM & BLADE
2 - WIPER MOTOR
3 - WASHER NOZZLE
4 - REAR WIPER/WASHER SWITCH
5 - REAR WASHER PUMP/MOTOR
6 - REAR WASHER HOSE CAP/CHECK VALVE

- **Rear Washer Pump/Motor** - The rear washer pump/motor unit is located in a dedicated hole on the lower inboard side of the washer reservoir, on the top of the left front fender wheel house in the engine compartment. The optional rear washer pump is located just behind and above the standard front washer pump/motor unit on the reservoir.
- **Rear Wiper and Washer Switch** - The rear wiper and washer switch is located in the accessory switch bezel near the bottom of the center stack area on the instrument panel. Only the switch rocker button is visible through the lower opening of the instrument panel center bezel, the remainder of the switch is concealed behind the accessory switch bezel within the instrument panel. The rear wiper and washer switch is dedicated to providing all of the driver controls for both the rear wiper and the rear washer systems.
- **Rear Wiper Arm** - The single rear wiper arm is secured by a nut directly to the rear wiper motor output shaft, which extends through a mounting hole in the liftglass inboard of the upper right liftglass hinge.
- **Rear Wiper Blade** - The single rear wiper blade is secured to the rear wiper arm with an integral latch, and is parked in a horizontal position near the top of the liftglass when the rear wiper system is not in operation.