REAR WASHER NOZZLE (Continued)

REMOVAL

(1) Remove the trim cover from the rear wiper motor on the inside of the liftglass. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER MOTOR TRIM COVER - REMOVAL).

(2) From the inside of the liftglass, disconnect the rear washer supply hose from the barbed nipple on the back of the rear washer nozzle (Fig. 9).

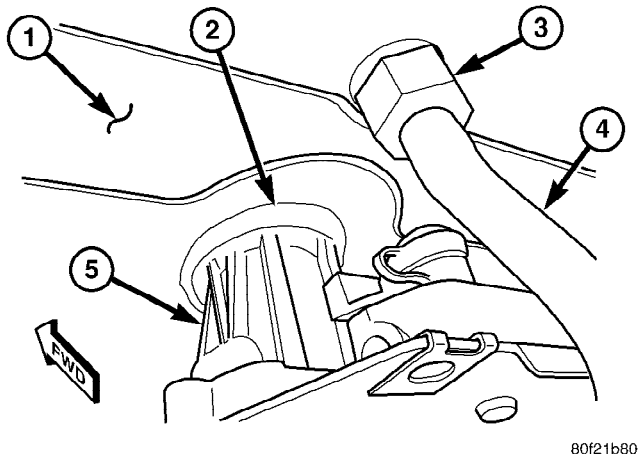

Fig. 9 Rear Washer Nozzle Remove/Install

1 - LIFTGLASS (INSIDE)
2 - GROMMET
3 - PLASTIC NUT
4 - REAR WASHER SUPPLY HOSE
5 - REAR WIPER MOTOR

(3) While holding the hood of the rear washer nozzle securely from the outside of the liftglass, remove the plastic nut that secures the threaded nipple of the rear washer nozzle to the inside of the liftglass.

(4) From the inside of the liftglass, push the nipple of the rear washer nozzle out through the mounting hole in the liftglass.

(5) Remove the rear washer nozzle and rubber gasket from the outside of the liftglass.

INSTALLATION

(1) Position the rear washer nozzle and rubber gasket to the outside of the liftglass with the orifice of the nozzle aimed at the nozzle alignment arrowhead visible on the outside of the glass.

(2) From the inside of the liftglass, install and tighten the plastic nut that secures the threaded nipple on the back of the rear washer nozzle to the inside of the liftglass (Fig. 9). Tighten the nut to 1 N·m (8 in. lbs.).

(3) Reconnect the rear washer supply hose to the barbed nipple of the rear washer nozzle.

(4) Reinstall the trim cover onto the rear wiper motor on the inside of the liftglass. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER MOTOR TRIM COVER - INSTALLATION).

REAR WASHER PUMP MOTOR

DESCRIPTION

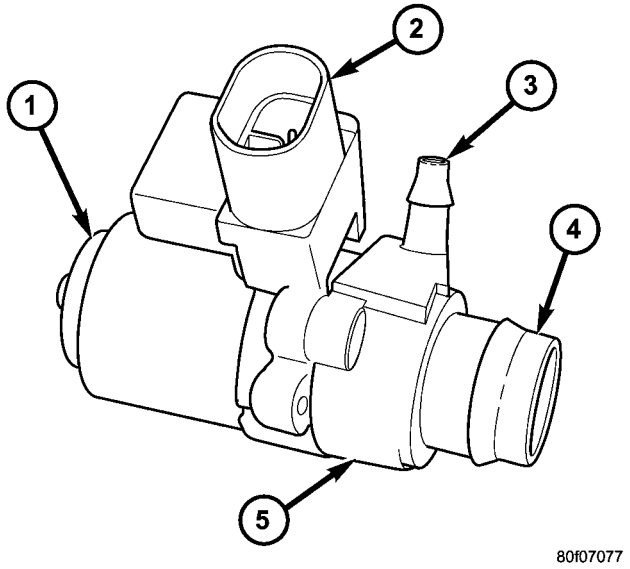

Fig. 10 Washer Pump/Motor

1 - MOTOR
2 - CONNECTOR RECEPTACLE
3 - OUTLET NIPPLE
4 - INLET NIPPLE
5 - PUMP

The rear washer pump/motor unit is located on the inboard side just behind and above the front washer pump/motor on the washer reservoir (Fig. 10). The washer reservoir is located on the top of the left front fender wheel house in the engine compartment. A small permanently lubricated and sealed electric motor is coupled to the rotor-type washer pump. A seal flange with a barbed inlet nipple on the pump housing passes through a rubber grommet seal installed in a dedicated mounting hole in the sump area near the bottom of the washer reservoir. The rear washer pump/motor unit is always mounted in the rearward-most upper mounting hole of the reservoir. An integral filter screen is located within the pump inlet nipple. When the pump is installed in the reservoir a barbed outlet nipple on the pump housing connects the unit to the washer system through the front washer supply hose.

The washer pump/motor unit is retained on the reservoir by the interference fit between the barbed pump inlet nipple and the grommet seal, which is a light press fit. An integral connector receptacle between the motor housing and the pump housing connects the unit to the vehicle electrical system. A small capacitor internal to the connector receptacle insulator is connected in parallel with the motor leads to control ElectroMagnetic Interference (EMI)