REAR WASHER PUMP MOTOR (Continued)

created by washer motor operation. The rear washer pump/motor unit cannot be repaired. If faulty or damaged, the entire washer pump/motor unit must be replaced.

OPERATION

The rear washer pump/motor unit features a small Direct Current (DC) electric motor. The motor is connected to the vehicle electrical system through a single take out and two-cavity connector of the body wire harness. The motor is grounded at all times through a take out of the body wire harness with a single eyelet terminal connector that is secured under a ground screw to the left cowl side inner panel below the instrument panel in the passenger compartment. The motor receives battery current through the closed contacts of the momentary rear washer switch circuitry within the rear wiper and washer switch unit only when the bottom of the switch rocker is pushed towards the instrument panel.

Washer fluid is gravity-fed from the washer reservoir to the inlet side of the washer pump. When the pump motor is energized, the motor spins the rotor within the rotor-type washer pump. The spinning pump rotor pressurizes the washer fluid and forces it through the pump outlet nipple, the rear washer plumbing, and the rear washer nozzle onto the liftglass. The rear washer pump/motor unit can be diagnosed using conventional diagnostic tools and methods.

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Disconnect the washer supply hose from the barbed outlet nipple of the rear washer pump/motor and allow the washer fluid from the washer reservoir to drain into a clean container for reuse (Fig. 11).

(3) Disconnect the body wire harness connector from the connector receptacle for the rear washer pump/motor.

(4) Using a trim stick or another suitable wide flat-bladed tool, gently pry the barbed inlet nipple of the rear washer pump/motor unit out of the rubber grommet seal in the washer reservoir. Care must be taken not to damage the washer reservoir.

(5) Remove the rear washer pump/motor unit from the washer reservoir.

(6) Remove the rubber grommet seal from the rear washer pump/motor mounting hole in the washer reservoir and discard.

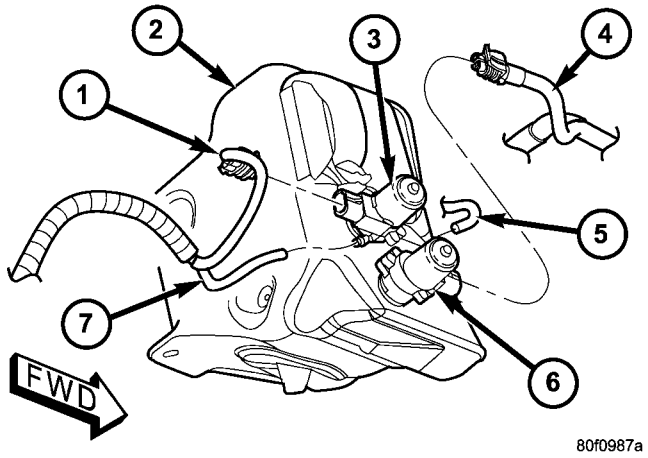

Fig. 11 Washer Pump/Motor Remove/Install

1 - REAR BODY WIRE HARNESS
2 - WASHER RESERVOIR
3 - REAR WASHER PUMP/MOTOR
4 - HEADLAMP & DASH WIRE HARNESS
5 - FRONT WASHER SUPPLY HOSE
6 - FRONT WASHER PUMP/MOTOR
7 - REAR WASHER SUPPLY HOSE

INSTALLATION

(1) Install a new rubber grommet seal into the rear washer pump/motor mounting hole of the washer reservoir.

(2) Position the rear washer pump/motor inlet nipple to the mounting hole in the washer reservoir (Fig. 11).

(3) Using hand pressure, firmly and evenly press on the rear washer pump/motor to engage the inlet nipple through the rubber grommet seal into the washer reservoir. Care must be taken not to damage the washer reservoir.

(4) Reconnect the body wire harness connector for the rear washer pump/motor to the washer pump/motor connector receptacle.

(5) Reconnect the rear washer supply hose to the barbed outlet nipple of the rear washer pump/motor.

(6) Refill the washer reservoir with the washer fluid drained from the reservoir during the removal procedure.

(7) Reconnect the battery negative cable.

REAR WIPER ARM

DESCRIPTION

The rear wiper arm is the rigid member located between the rear wiper motor output shaft that protrudes from the outside of the liftglass near the right liftglass hinge and the rear wiper blade (Fig. 12). This wiper arm features an over-center hinge that allows easy access to the liftglass for cleaning. The wiper arm has a die cast metal pivot end with a