REAR WIPER ARM (Continued)

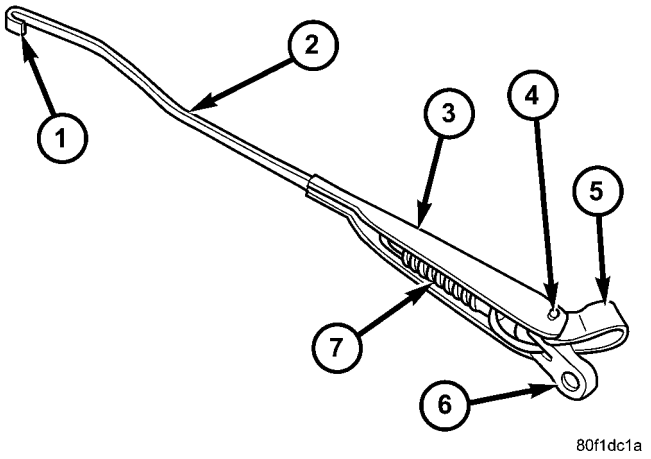

Fig. 12 Rear Wiper Arm

1 - HOOK
2 - STRAP
3 - CHANNEL
4 - HINGE PIN
5 - COVER
6 - PIVOT END
7 - TENSION SPRING

large tapered mounting hole at one end. A molded plastic pivot cover is secured loosely to and pivots on the wiper arm hinge pin to conceal the wiper arm retaining nut.

The wide end of a tapered, stamped steel channel is secured with a hinge pin to the pivot end of the wiper arm. One end of a long, rigid, stamped steel strap, with a small hole near its pivot end, is riveted and crimped within the narrow end of the stamped steel channel. The tip of the wiper blade end of this strap is bent back under itself to form a small hook. Concealed within the stamped steel channel, one end of a long spring is engaged with a wire hook on the underside of the die cast pivot end, while the other end of the spring is hooked through the small hole in the steel strap. The entire wiper arm has a satin black finish applied to all of its visible surfaces.

A wiper arm cannot be adjusted or repaired. If damaged or faulty, the entire wiper arm unit must be replaced.

OPERATION

The rear wiper arm is designed to mechanically transmit the motion from the rear wiper motor output shaft to the rear wiper blade. The wiper arm must be properly indexed to the motor output shaft in order to maintain the proper wiper blade travel on the glass. The tapered hole in the wiper arm pivot end interlocks with the serrations on the outer circumference of the tapered motor output shaft, allowing positive engagement and finite adjustment of this connection. A hex nut secures the wiper arm pivot end to the threads on the rear wiper motor output shaft and the pivot cover hinges and snaps over this connection for a neat appearance. The spring-loaded wiper arm hinge controls the down-force applied through the tip of the wiper arm to the wiper blade on the glass. The hook formation on the tip of the wiper arm provides a cradle for securing and latching the wiper blade pivot block to the wiper arm.

REMOVAL

(1) Lift the rear wiper arm pivot cover by lifting it at the rear wiper motor output shaft end of the arm (Fig. 13).

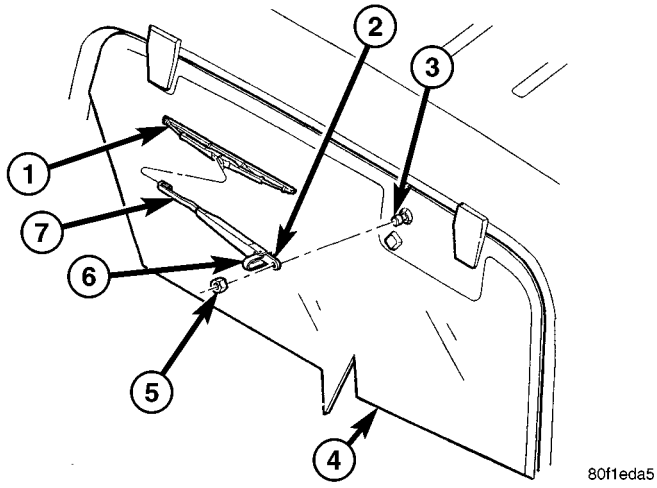

Fig. 13 Rear Wiper Arm Remove/Install

1 - LATCH
2 - WIPER ARM PIVOT END

(2) Remove the nut that secures the rear wiper arm to the rear wiper motor output shaft.

(3) Lift the rear wiper arm to its over-center position to hold the wiper blade off of the glass and relieve the spring tension on the wiper arm to rear wiper motor output shaft connection.

(4) If necessary, use a battery terminal puller to disengage the wiper arm from the rear wiper motor output shaft splines (Fig. 14).

(5) Remove the rear wiper arm pivot end from the motor output shaft.

INSTALLATION

NOTE: Be certain that the rear wiper motor is in the park position before attempting to install the wiper arm. Turn the ignition switch to the On position and move the rear wiper and washer switch rocker to its Off position. If the wiper motor output shaft moves, wait until it stops moving, then turn the ignition switch back to the Off position. The wiper motor is now in its park position.