REAR WIPER BLADE (Continued)

adjusted or repaired. If faulty, worn, or damaged the entire wiper blade unit must be replaced.

OPERATION

The rear wiper blade is moved back and forth across the glass by the wiper arm when the rear wiper system is in operation. The wiper blade superstructure is the flexible frame that grips the wiper blade element and evenly distributes the force of the spring-loaded wiper arm along the length of the element. The combination of the wiper arm force and the flexibility of the superstructure makes the element conform to and maintain proper contact with the liftglass, even as the blade is moved over the varied curvature found across the glass surface.

The wiper element flexor provides the claws of the blade superstructure with a rigid, yet flexible component on the element which can be gripped. The rubber element is designed to be stiff enough to maintain an even cleaning edge as it is drawn across the glass, but resilient enough to conform to the glass surface and flip from one cleaning edge to the other each time the wiper blade changes directions.

REMOVAL

NOTE: The notched end of the wiper element flexor should always be oriented towards the end of the wiper blade that is nearest to the rear wiper motor output shaft.

(1) Lift the rear wiper arm to raise the wiper blade and element off of the liftglass.

(2) To remove the wiper blade from the wiper arm, push the pivot block latch release tab under the tip of the arm and slide the blade away from the tip towards the rear wiper motor output shaft end of the arm (Fig. 17).

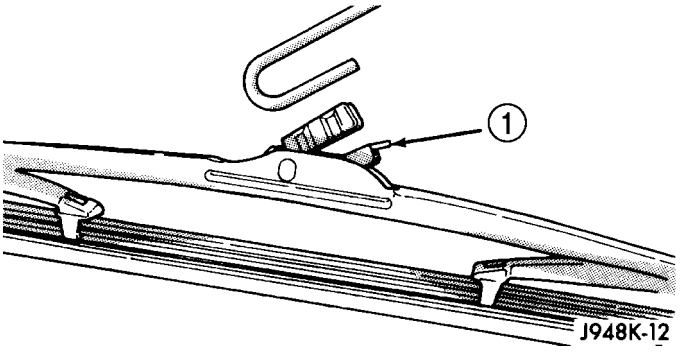

Fig. 17 Wiper Blade Remove/Install - Typical

1 - RELEASE TAB

(3) Slide the rear wiper blade away from the tip of the arm towards the pivot end of the arm far enough to disengage the pivot block from the hook formation on the end of the arm.

(4) Extract the hook formation on the tip of the wiper arm from the opening in the wiper blade superstructure ahead of the wiper blade pivot block/latch unit.

CAUTION: Do not allow the wiper arm to spring back against the liftglass without the wiper blade in place or the glass may be damaged.

(5) Gently lower the wiper arm tip onto the glass.

INSTALLATION

NOTE: The notched end of the wiper element flexor should always be oriented towards the end of the wiper blade that is nearest to the rear wiper motor output shaft.

(1) Lift the rear wiper arm off of the liftglass.

(2) Position the rear wiper blade near the hook formation on the tip of the arm with the notched end of the wiper element flexor oriented towards the end of the wiper arm that is nearest to the rear wiper motor output shaft.

(3) Insert the hook formation on the tip of the wiper arm through the opening in the wiper blade superstructure ahead of the wiper blade pivot block/latch unit far enough to engage the pivot block with the hook (Fig. 17).

(4) Slide the wiper blade pivot block/latch up into the hook formation on the tip of the wiper arm until the latch release tab snaps into its locked position.

(5) Gently lower the wiper blade onto the liftglass.

REAR WIPER MOTOR

DESCRIPTION

The rear wiper motor is concealed behind a molded plastic trim cover on the inside of the liftglass near the right liftglass hinge at the top of the glass. A large blackout area of the liftglass conceals the unit from the exterior of the vehicle. The end of the motor output shaft that protrudes through a large rubber grommet in the liftglass to drive the rear wiper arm and blade is the only visible component of the rear wiper motor (Fig. 18). A large flat washer and a nut secure and seal the motor output shaft to the outside of the liftglass, while a rubber insulator in a slot on the outboard upper corner of the motor bracket is secured by a stud and nut to the inside of the liftglass near the right liftglass hinge. The connector of a short pigtail harness is secured to a tab on the back of the motor bracket, and connects the rear wiper motor to the vehicle electrical system through a dedicated take out and connector of the hardtop