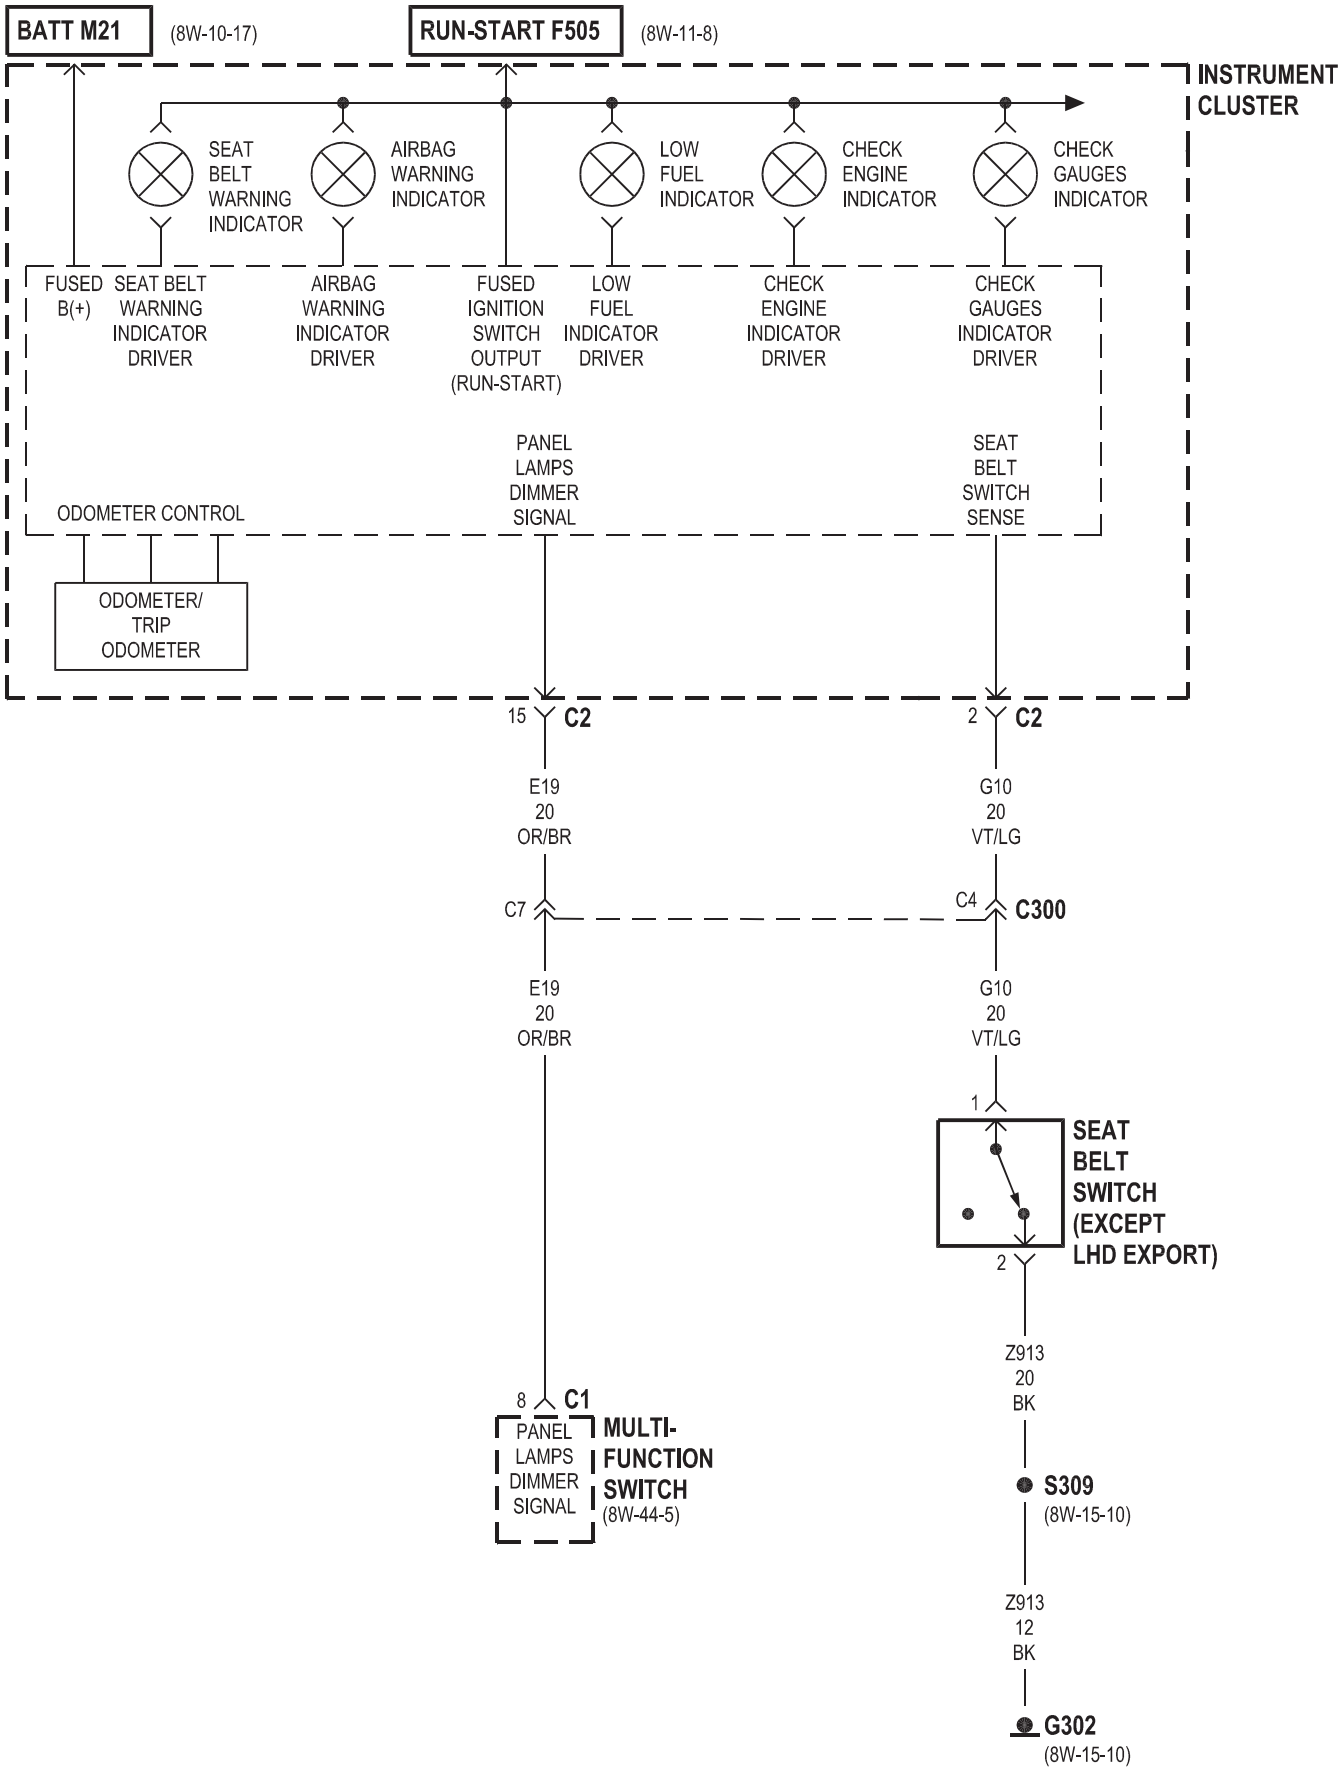

BATT M21
(8W-10-17)
RUN-START F505
(8W-11-8)
INSTRUMENT CLUSTER
SEAT BELT WARNING INDICATOR
AIRBAG WARNING INDICATOR
LOW FUEL INDICATOR
CHECK ENGINE INDICATOR
CHECK GAUGES INDICATOR
FUSED B(+)
SEAT BELT WARNING INDICATOR DRIVER
AIRBAG WARNING INDICATOR DRIVER
FUSED IGNITION SWITCH OUTPUT (RUN-START)
LOW FUEL INDICATOR DRIVER
CHECK ENGINE INDICATOR DRIVER
CHECK GAUGES INDICATOR DRIVER
ODOMETER CONTROL
PANEL LAMPS DIMMER SIGNAL
SEAT BELT SWITCH SENSE
ODOMETER/ TRIP ODOMETER
15 C2
2 C2
E19 20 OR/BR
G10 20 VT/LG
C7
C4 C300
E19 20 OR/BR
G10 20 VT/LG
1
SEAT BELT SWITCH (EXCEPT LHD EXPORT)
2
Z913 20 BK
8 C1
PANEL LAMPS DIMMER SIGNAL
MULTI-FUNCTION SWITCH
(8W-44-5)
S309
(8W-15-10)
Z913 12 BK
G302
(8W-15-10)