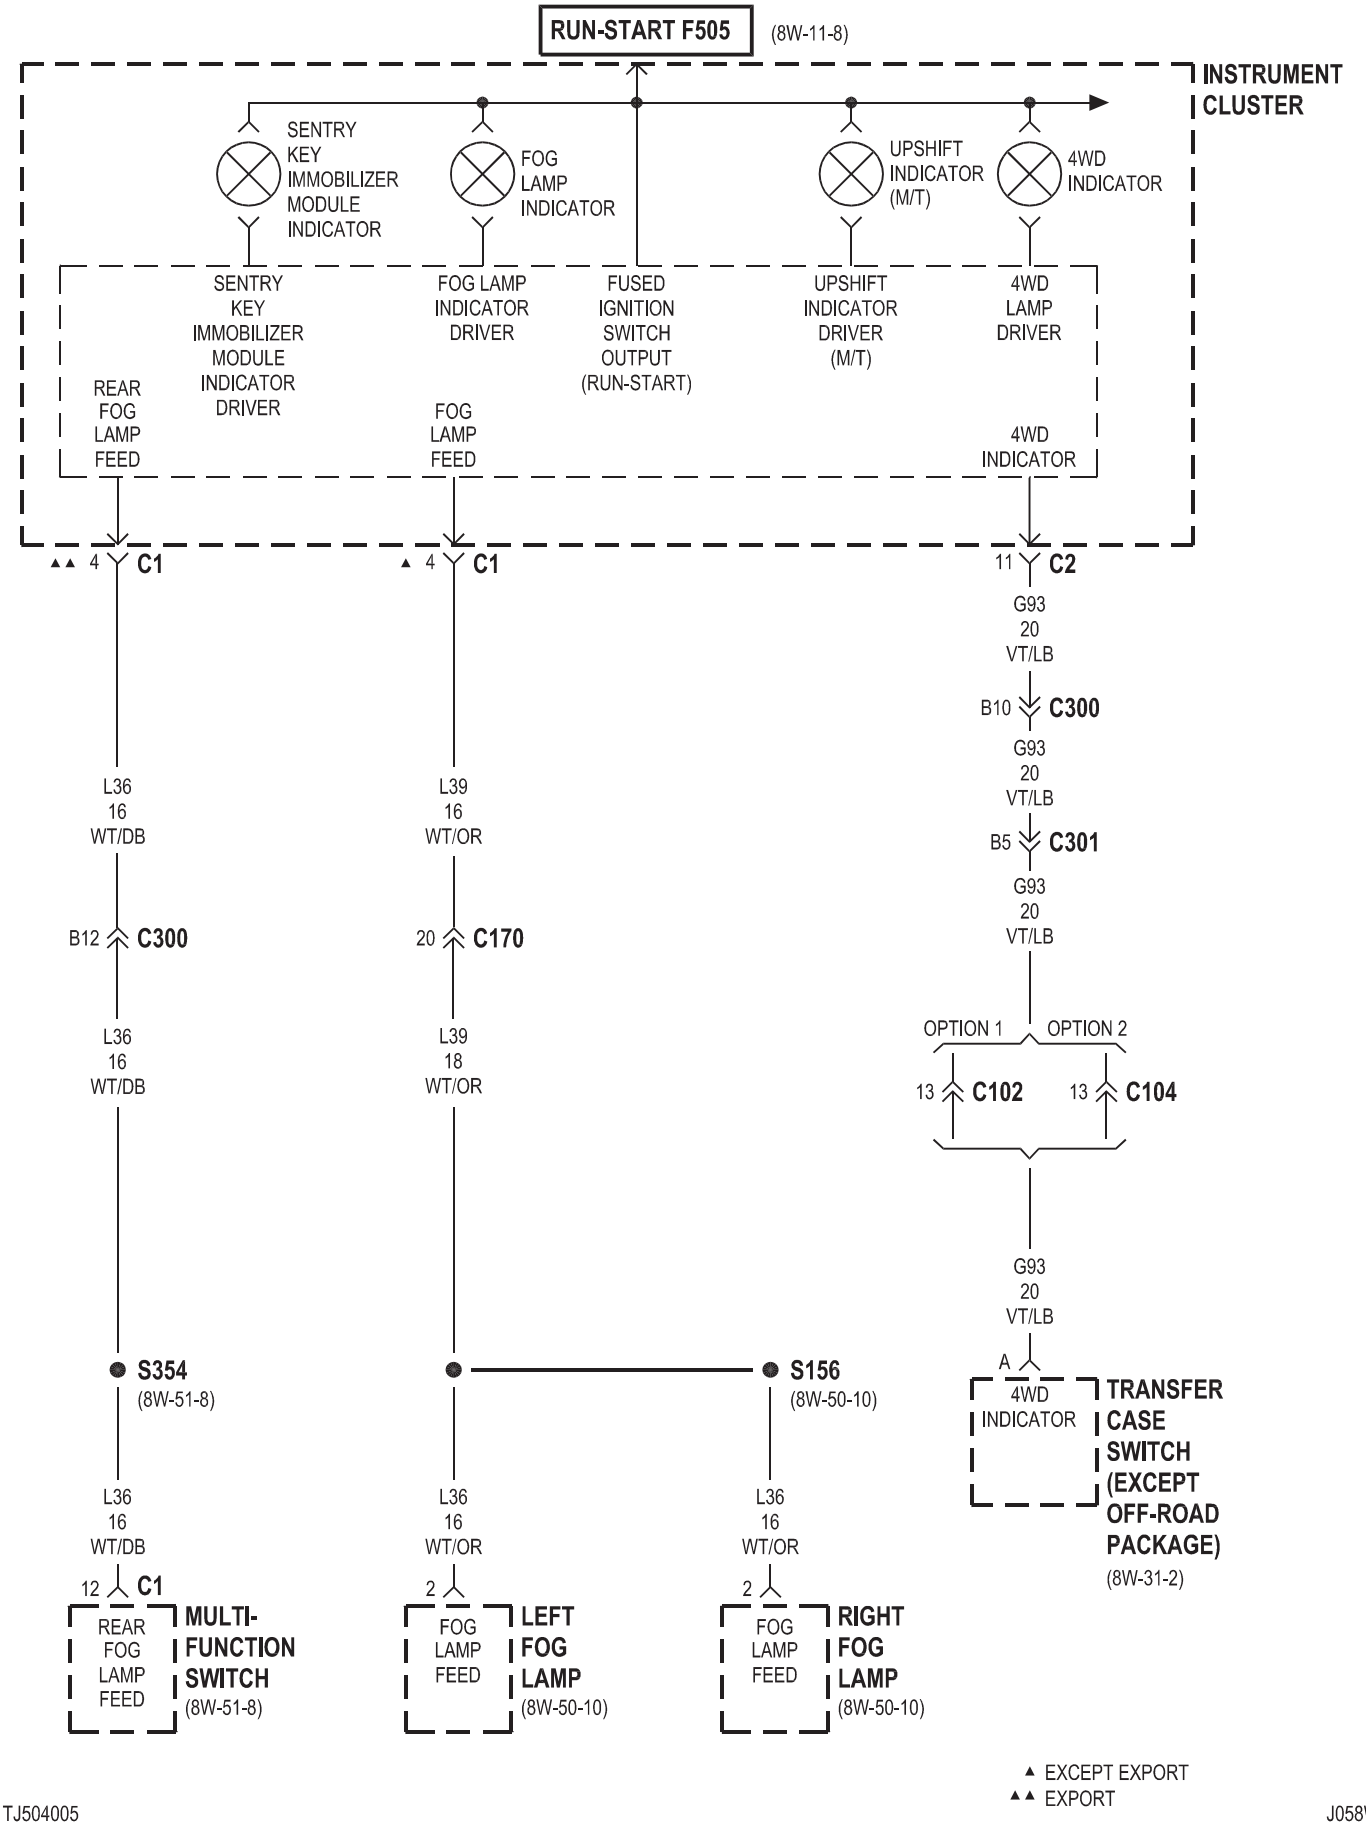

RUN-START F505
(8W-11-8)
INSTRUMENT CLUSTER
SENTRY KEY IMMOBILIZER MODULE INDICATOR
FOG LAMP INDICATOR
UPSHIFT INDICATOR (M/T)
4WD INDICATOR
SENTRY KEY IMMOBILIZER MODULE INDICATOR DRIVER
FOG LAMP INDICATOR DRIVER
FUSED IGNITION SWITCH OUTPUT (RUN-START)
UPSHIFT INDICATOR DRIVER (M/T)
4WD LAMP DRIVER
REAR FOG LAMP FEED
FOG LAMP FEED
4WD INDICATOR
▲▲ 4 C1
▲ 4 C1
11 C2
G93 20 VT/LB
B10 C300
G93 20 VT/LB
B5 C301
G93 20 VT/LB
L36 16 WT/DB
L39 16 WT/OR
B12 C300
20 C170
L36 16 WT/DB
L39 18 WT/OR
OPTION 1
OPTION 2
13 C102
13 C104
G93 20 VT/LB
A
S354
(8W-51-8)
S156
(8W-50-10)
4WD INDICATOR
TRANSFER CASE SWITCH (EXCEPT OFF-ROAD PACKAGE)
(8W-31-2)
L36 16 WT/DB
L36 16 WT/OR
L36 16 WT/OR
12 C1
2
2
REAR FOG LAMP FEED
MULTI-FUNCTION SWITCH
(8W-51-8)
FOG LAMP FEED
LEFT FOG LAMP
(8W-50-10)
FOG LAMP FEED
RIGHT FOG LAMP
(8W-50-10)
▲ EXCEPT EXPORT
▲▲ EXPORT