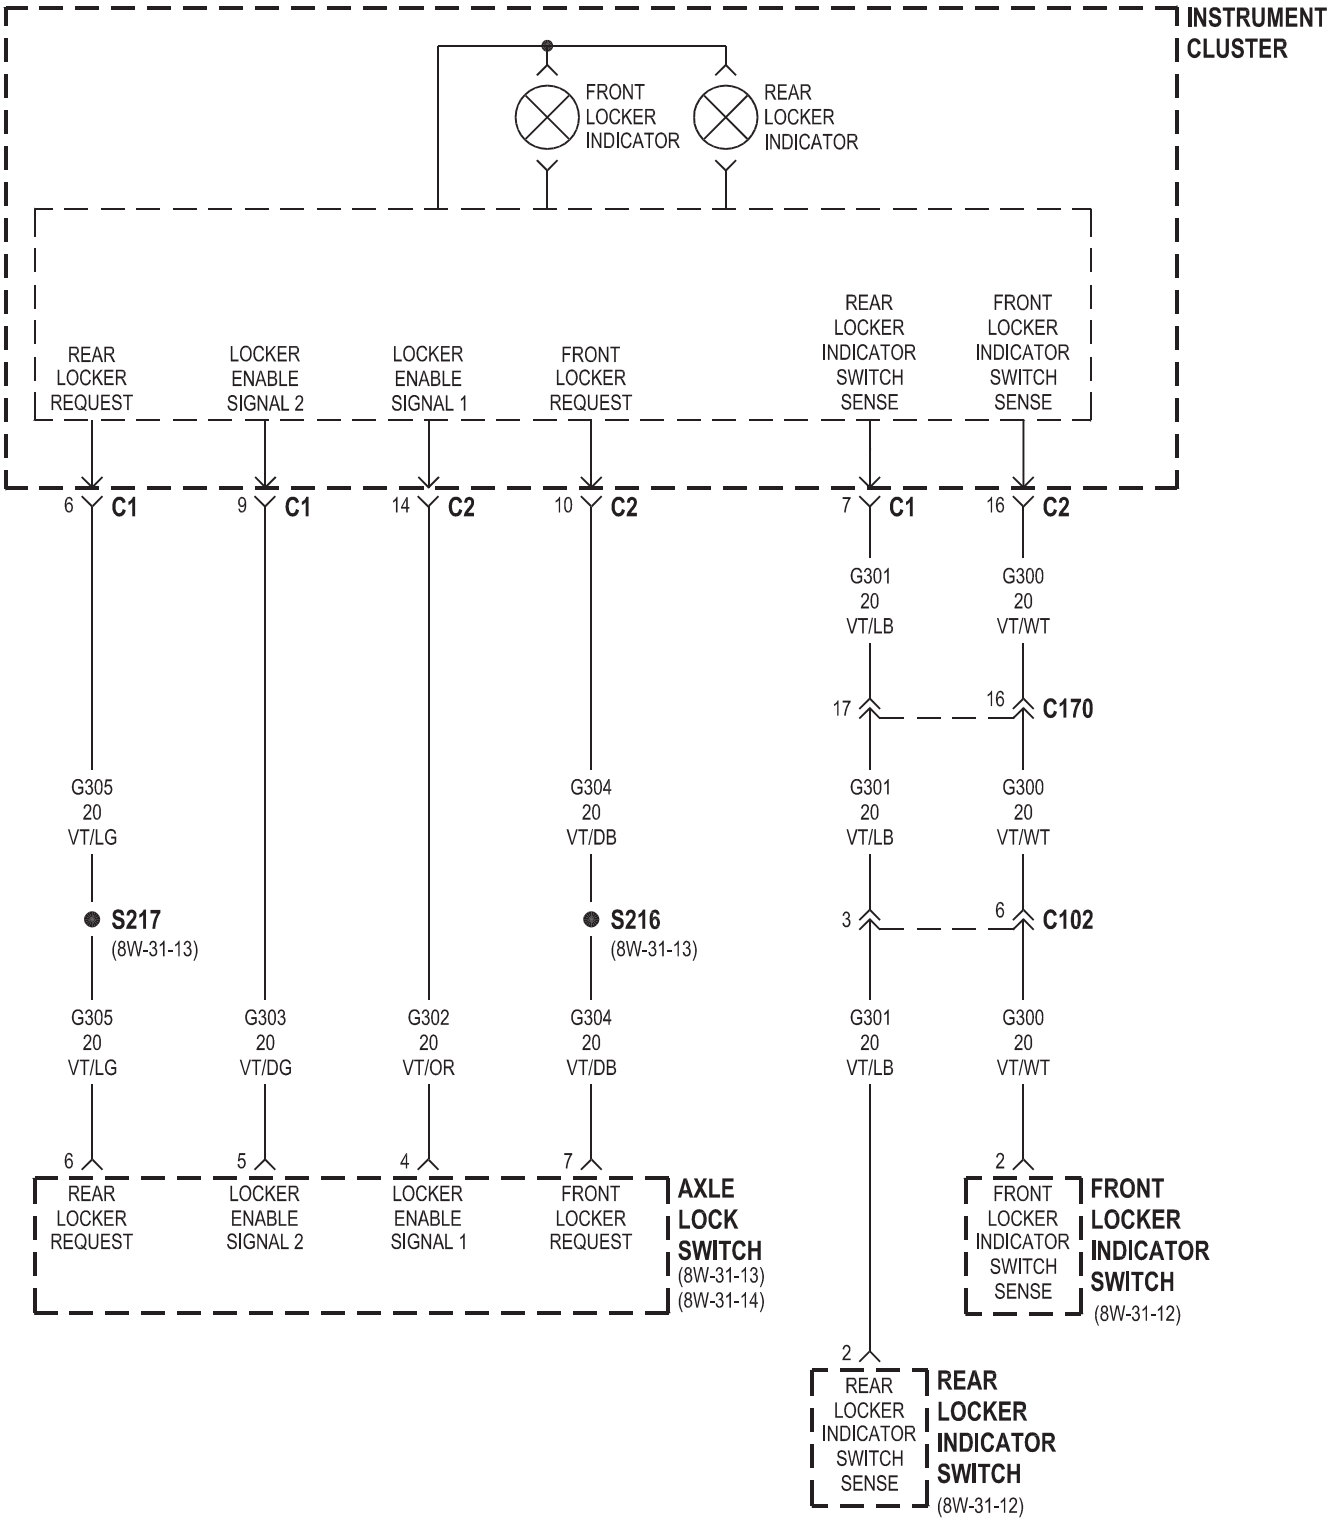

INSTRUMENT CLUSTER
FRONT LOCKER INDICATOR
REAR LOCKER INDICATOR
REAR LOCKER REQUEST
LOCKER ENABLE SIGNAL 2
LOCKER ENABLE SIGNAL 1
FRONT LOCKER REQUEST
REAR LOCKER INDICATOR SWITCH SENSE
FRONT LOCKER INDICATOR SWITCH SENSE
6 C1
9 C1
14 C2
10 C2
7 C1
16 C2
G305 20 VT/LG
G304 20 VT/DB
G301 20 VT/LB
G300 20 VT/WT
17
16 C170
3
6 C102
S217 (8W-31-13)
S216 (8W-31-13)
G305 20 VT/LG
G303 20 VT/DG
G302 20 VT/OR
G304 20 VT/DB
G301 20 VT/LB
G300 20 VT/WT
6
5
4
7
2
REAR LOCKER REQUEST
LOCKER ENABLE SIGNAL 2
LOCKER ENABLE SIGNAL 1
FRONT LOCKER REQUEST
AXLE LOCK SWITCH (8W-31-13) (8W-31-14)
FRONT LOCKER INDICATOR SWITCH SENSE
FRONT LOCKER INDICATOR SWITCH (8W-31-12)
2
REAR LOCKER INDICATOR SWITCH SENSE
REAR LOCKER INDICATOR SWITCH (8W-31-12)