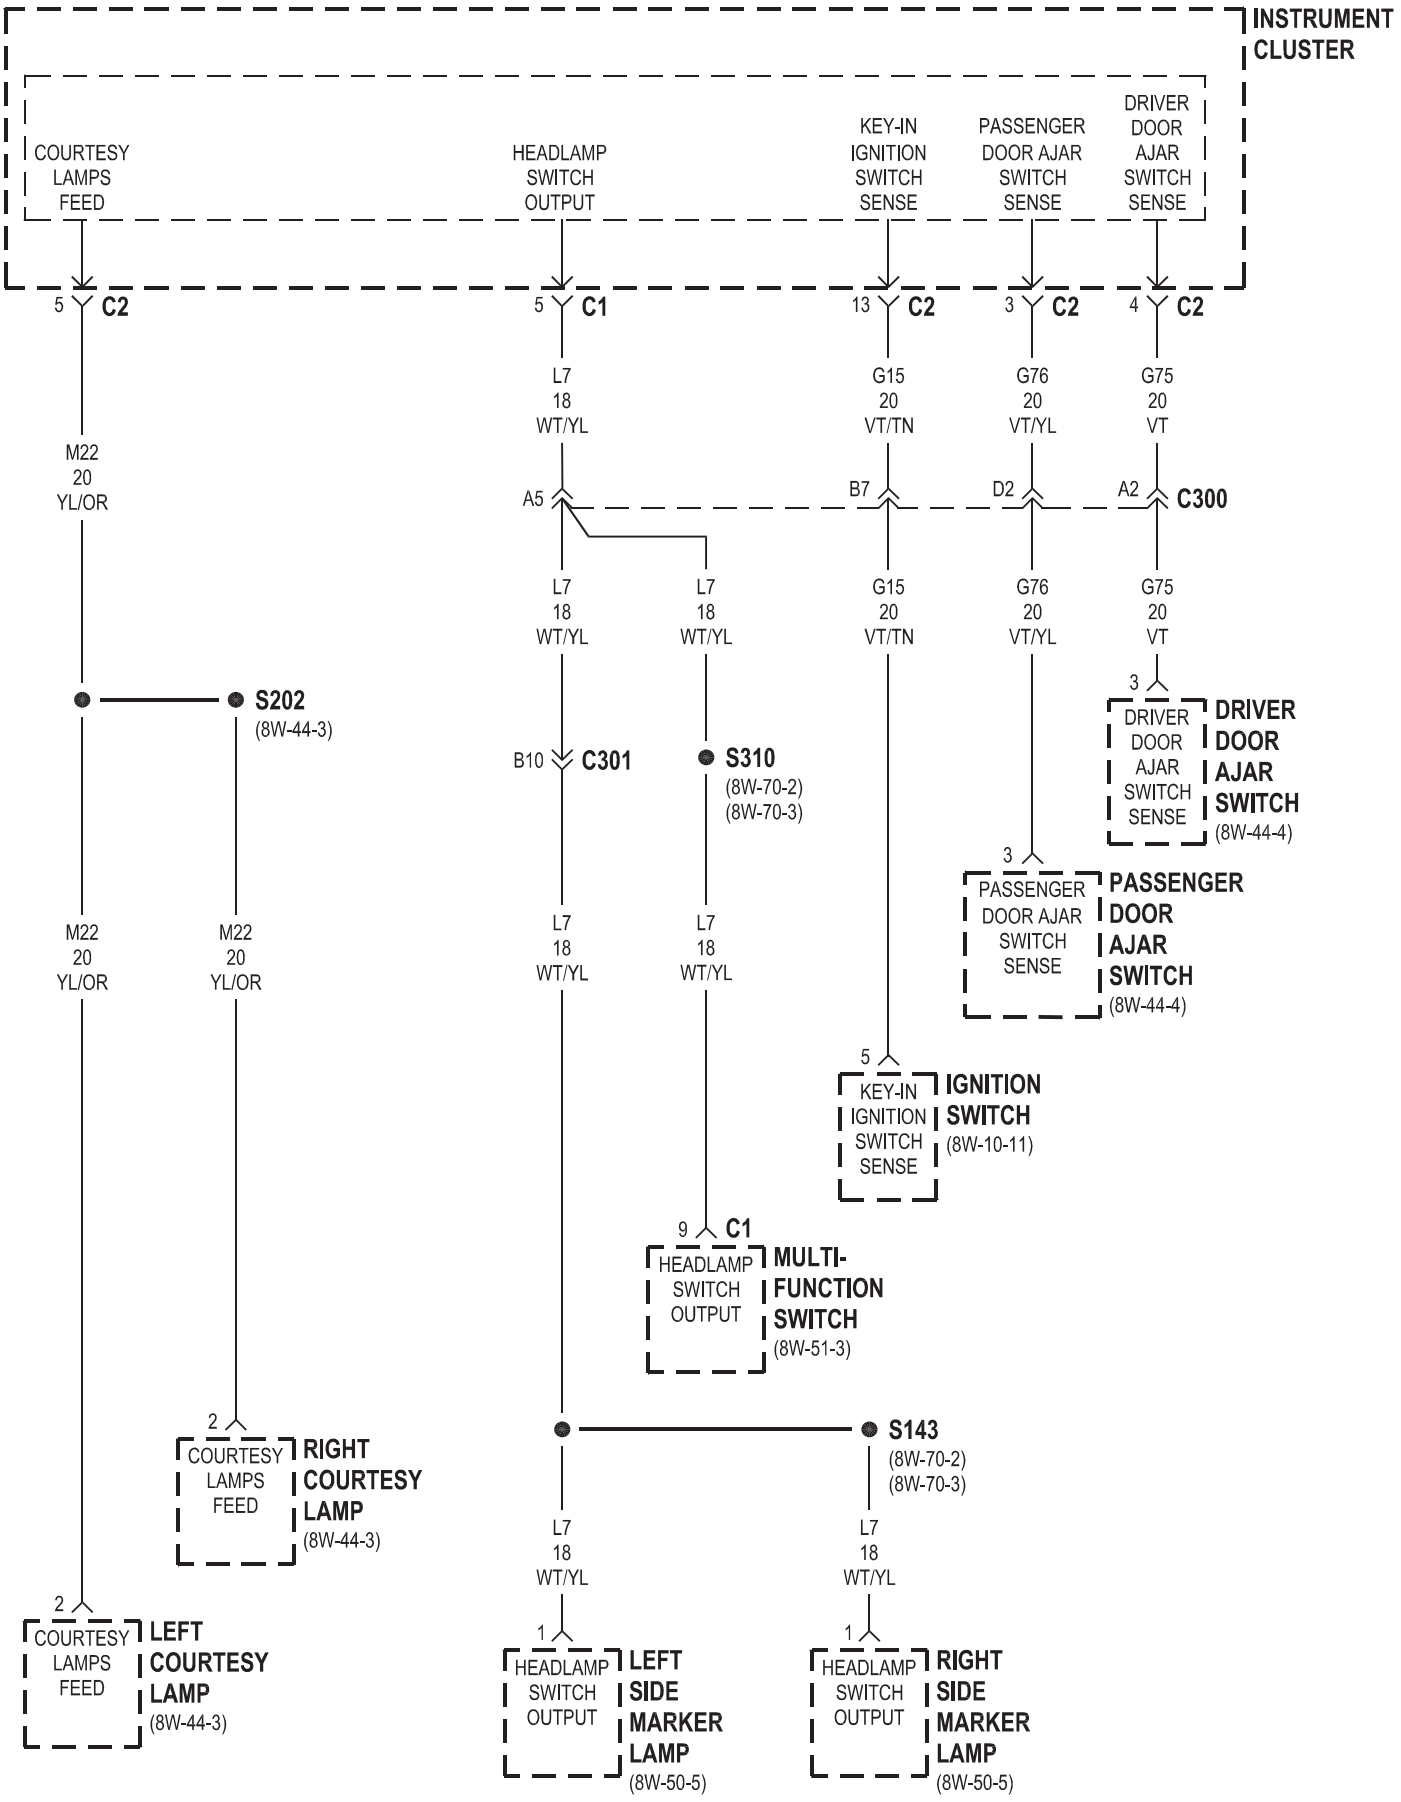

INSTRUMENT CLUSTER
COURTESY LAMPS FEED
HEADLAMP SWITCH OUTPUT
KEY-IN IGNITION SWITCH SENSE
PASSENGER DOOR AJAR SWITCH SENSE
DRIVER DOOR AJAR SWITCH SENSE
5 C2
5 C1
13 C2
3 C2
4 C2
L7 18 WT/YL
G15 20 VT/TN
G76 20 VT/YL
G75 20 VT
M22 20 YL/OR
A5
B7
D2
A2 C300
S202 (8W-44-3)
B10 C301
S310 (8W-70-2) (8W-70-3)
3 DRIVER DOOR AJAR SWITCH SENSE DRIVER DOOR AJAR SWITCH (8W-44-4)
3 PASSENGER DOOR AJAR SWITCH SENSE PASSENGER DOOR AJAR SWITCH (8W-44-4)
5 KEY-IN IGNITION SWITCH SENSE IGNITION SWITCH (8W-10-11)
9 C1 HEADLAMP SWITCH OUTPUT MULTI-FUNCTION SWITCH (8W-51-3)
2 COURTESY LAMPS FEED RIGHT COURTESY LAMP (8W-44-3)
S143 (8W-70-2) (8W-70-3)
2 COURTESY LAMPS FEED LEFT COURTESY LAMP (8W-44-3)
1 HEADLAMP SWITCH OUTPUT LEFT SIDE MARKER LAMP (8W-50-5)
1 HEADLAMP SWITCH OUTPUT RIGHT SIDE MARKER LAMP (8W-50-5)