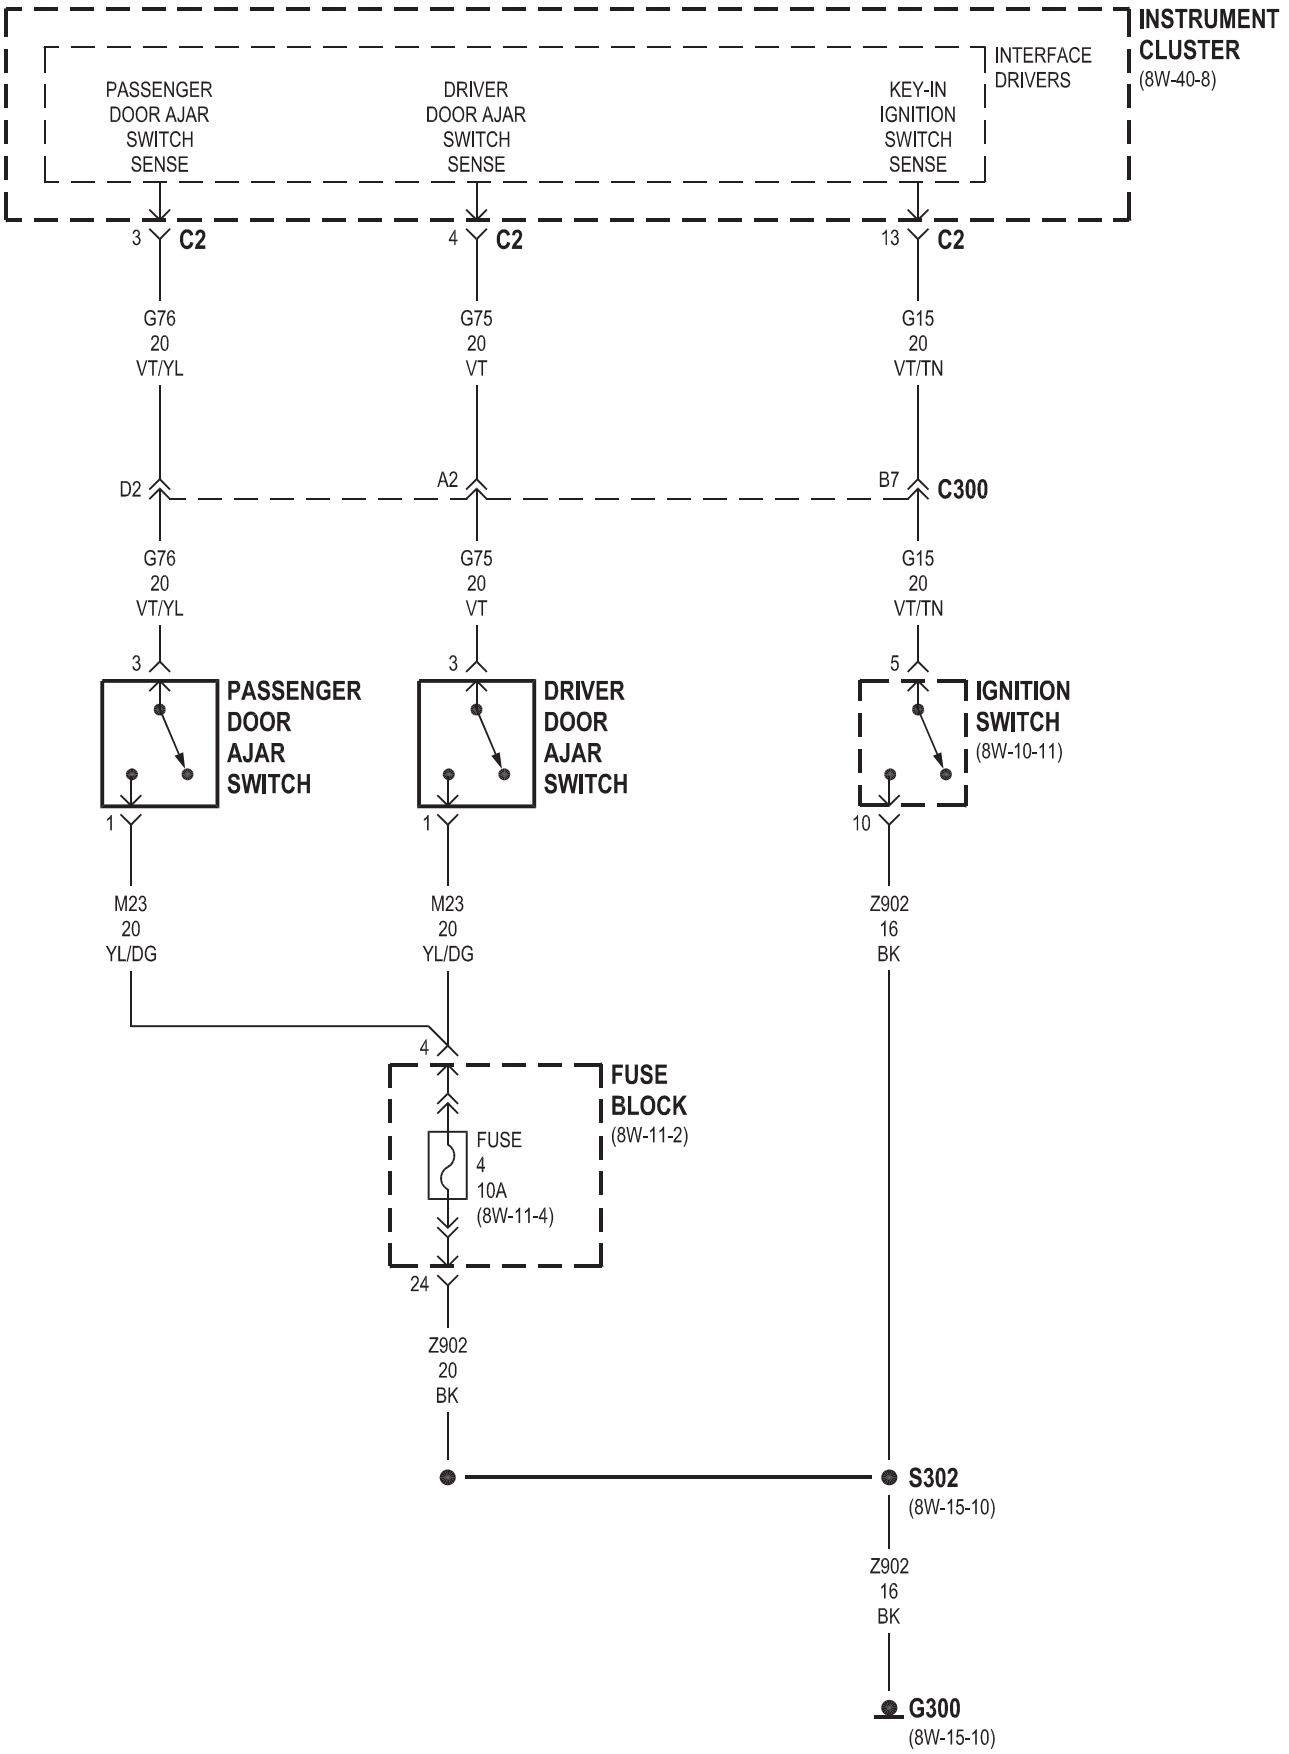

INSTRUMENT CLUSTER
(8W-40-8)
INTERFACE DRIVERS
PASSENGER DOOR AJAR SWITCH SENSE
DRIVER DOOR AJAR SWITCH SENSE
KEY-IN IGNITION SWITCH SENSE
3 C2
4 C2
13 C2
G76 20 VT/YL
G75 20 VT
G15 20 VT/TN
D2
A2
B7 C300
G76 20 VT/YL
G75 20 VT
G15 20 VT/TN
3
3
5
PASSENGER DOOR AJAR SWITCH
DRIVER DOOR AJAR SWITCH
IGNITION SWITCH
(8W-10-11)
1
1
10
M23 20 YL/DG
M23 20 YL/DG
Z902 16 BK
4
FUSE BLOCK
(8W-11-2)
FUSE 4 10A
(8W-11-4)
24
Z902 20 BK
S302
(8W-15-10)
Z902 16 BK
G300
(8W-15-10)