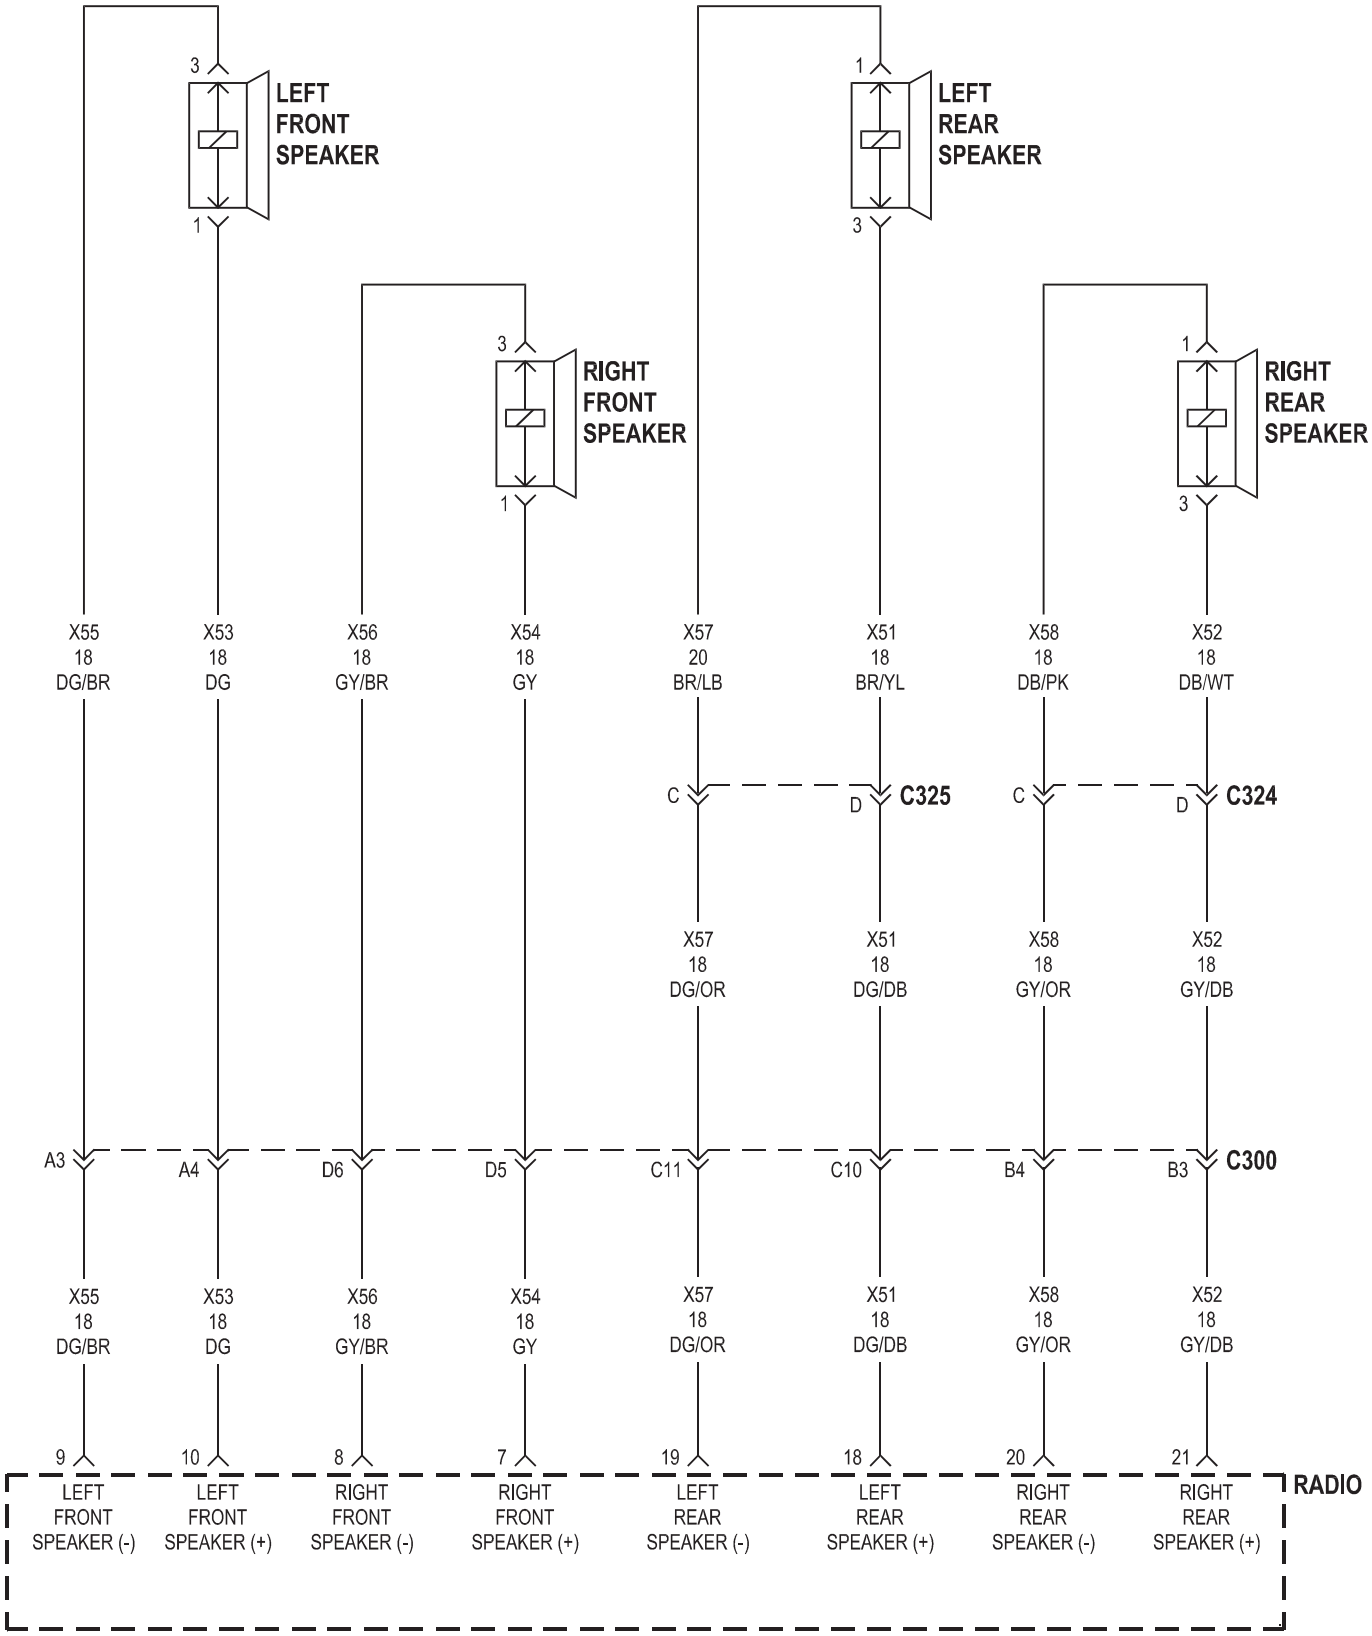

LEFT FRONT SPEAKER
LEFT REAR SPEAKER
RIGHT FRONT SPEAKER
RIGHT REAR SPEAKER
X55 18 DG/BR
X53 18 DG
X56 18 GY/BR
X54 18 GY
X57 20 BR/LB
X51 18 BR/YL
X58 18 DB/PK
X52 18 DB/WT
C325
C324
X57 18 DG/OR
X51 18 DG/DB
X58 18 GY/OR
X52 18 GY/DB
C300
A3
A4
D6
D5
C11
C10
B4
B3
9
10
8
7
19
18
20
21
LEFT FRONT SPEAKER (-)
LEFT FRONT SPEAKER (+)
RIGHT FRONT SPEAKER (-)
RIGHT FRONT SPEAKER (+)
LEFT REAR SPEAKER (-)
LEFT REAR SPEAKER (+)
RIGHT REAR SPEAKER (-)
RIGHT REAR SPEAKER (+)
RADIO