

BLOWER MOTOR RESISTOR BLOCK

BLOWER MOTOR RESISTOR BLOCK - 4 WAY

CAV	CIRCUIT	FUNCTION
1	C71 14TN (EXCEPT HEATER ONLY)	BLOWER MOTOR LOW DRIVER
1	C4 14TN (HEATER ONLY)	BLOWER MOTOR LOW DRIVER
2	C72 14LG (EXCEPT HEATER ONLY)	BLOWER MOTOR M1 DRIVER
2	C5 14LG (HEATER ONLY)	BLOWER MOTOR M1 DRIVER
3	C73 14LB (EXCEPT HEATER ONLY)	BLOWER MOTOR M2 DRIVER
3	C6 14LB (HEATER ONLY)	BLOWER MOTOR M2 DRIVER
4	C75 12BK/TN (EXCEPT HEATER ONLY)	BLOWER MOTOR HIGH DRIVER
4	C7 12BK/TN (HEATER ONLY)	BLOWER MOTOR HIGH DRIVER

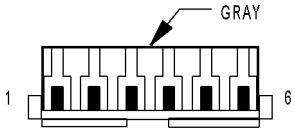

BRAKE LAMP SWITCH

BRAKE LAMP SWITCH - GRAY 6 WAY

CAV	CIRCUIT	FUNCTION
1	B15 20DG/WT	BRAKE SWITCH NO. 1 SIGNAL
1	B15 20DG/WT	BRAKE SWITCH NO. 1 SIGNAL
2	Z249 20BK/OR	GROUND
3	V32 20VT/YL (EXCEPT POSTAL)	S/C SUPPLY
4	V30 20VT/WT (EXCEPT POSTAL)	S/C BRAKE SWITCH OUTPUT
5	A103 18GY/RD	FUSED B(+)
6	L50 18WT/TN	BRAKE LAMP SWITCH OUTPUT

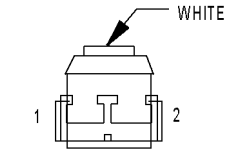

BRAKE TRANSMISSION SHIFT INTERLOCK SOLENOID

BRAKE TRANSMISSION SHIFT INTERLOCK SOLENOID - WHITE 2 WAY

CAV	CIRCUIT	FUNCTION
1	B15 20DG/WT	BRAKE SWITCH NO. 1 SIGNAL
2	F505 20PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-START)



BRAKE WARNING INDICATOR SWITCH

BRAKE WARNING INDICATOR SWITCH - BLACK 2 WAY

CAV	CIRCUIT	FUNCTION
1	G9 20GY/BK	BRAKE WARNING INDICATOR DRIVER
2	B83 20DG/WT	BRAKE PRESSURE SENSOR SUPPLY