

FUEL INJECTOR NO. 1 (2.4L)

FUEL INJECTOR NO. 1 (2.4L) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	F142 16PK/GY	ASD RELAY OUTPUT
2	K11 16BR/YL	INJECTOR CONTROL NO. 1

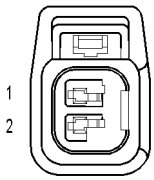

FUEL INJECTOR NO. 1 (4.0L)

FUEL INJECTOR NO. 1 (4.0L) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	K334 18BR	ASD RELAY OUTPUT
2	K11 18BR/YL	INJECTOR CONTROL NO. 1



FUEL INJECTOR NO. 2 (2.4L)

FUEL INJECTOR NO. 2 (2.4L) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	F142 16PK/GY	ASD RELAY OUTPUT
2	K12 16BR/DB	INJECTOR CONTROL NO. 2

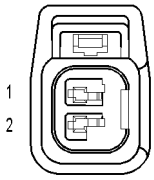

FUEL INJECTOR NO. 2 (4.0L)

FUEL INJECTOR NO. 2 (4.0L) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	K334 18BR	ASD RELAY OUTPUT
2	K12 18BR/DB	INJECTOR CONTROL NO. 2



FUEL INJECTOR NO. 3 (2.4L)

FUEL INJECTOR NO. 3 (2.4L) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	F142 16PK/GY	ASD RELAY OUTPUT
2	K13 16BR/LB	INJECTOR CONTROL NO. 3