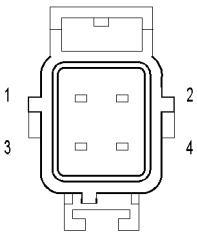

OXYGEN SENSOR 2/1 UPSTREAM (4.0L)

OXYGEN SENSOR 2/1 UPSTREAM (4.0L) - 4 WAY

CAV	CIRCUIT	FUNCTION
1	K199 18BR/VT	O2 2/1 HEATER CONTROL
2	Z42 18BK/LG	GROUND
3	K902 18BR/DG	O2 RETURN (UPSTREAM)
4	K43 18DB/LG	O2 2/1 SIGNAL

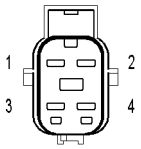

OXYGEN SENSOR 2/2 DOWNSTREAM (4.0L)

OXYGEN SENSOR 2/2 DOWNSTREAM (4.0L) - 4 WAY

CAV	CIRCUIT	FUNCTION
1	K399 18BR/GY	O2 2/2 HEATER CONTROL
2	Z43 18BK/LB	GROUND
3	K904 18BD/DG	O2 RETURN (DOWNSTREAM)
4	K243 18BR	O2 2/2 SIGNAL

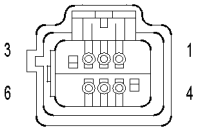

PASSENGER AIRBAG ON-OFF SWITCH (LHD)

PASSENGER AIRBAG ON-OFF SWITCH (LHD) - 6 WAY

CAV	CIRCUIT	FUNCTION
1	F201 18PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
2	G104 18VT/GY	PASSENGER AIRBAG INDICATOR DRIVER
3	R106 18LG/LB	PASSENGER AIRBAG MUX SWITCH SENSE
4	-	-
5	-	-
6	R104 18LB/LG	PASSENGER AIRBAG MUX SWITCH RETURN

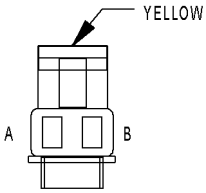

PASSENGER AIRBAG SQUIB 1

PASSENGER AIRBAG SQUIB 1 - YELLOW 2 WAY

CAV	CIRCUIT	FUNCTION
A	R42 18LB/BR	PASSENGER SQUIB 1 LINE 1
B	R44 18LB/OR	PASSENGER SQUIB 1 LINE 2