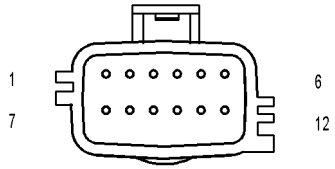

SUBWOOFER

SUBWOOFER - 12 WAY

CAV	CIRCUIT	FUNCTION
1	X54 18GY	RIGHT FRONT SPEAKER (+)
2	X56 18GY/BR	RIGHT FRONT SPEAKER (-)
3	X53 18DG	LEFT FRONT SPEAKER (+)
4	X55 18DG/BR	LEFT FRONT SPEAKER (-)
5	X60 20GY/OR	RADIO 12V OUTPUT
6	X13 16BK/RD	FUSED B(+)
7	X52 18GY/DB	RIGHT REAR SPEAKER (+)
8	X58 18GY/OR	RIGHT REAR SPEAKER (-)
9	X51 18DG/DB	LEFT REAR SPEAKER (+)
10	X57 18DG/OR	LEFT REAR SPEAKER (-)
11	-	-
12	Z513 16BK	GROUND

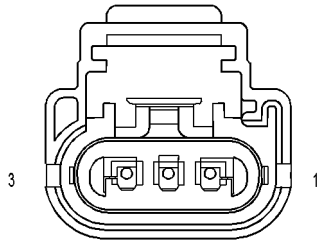

THROTTLE POSITION SENSOR (2.4L)

THROTTLE POSITION SENSOR (2.4L) - 3 WAY

CAV	CIRCUIT	FUNCTION
1	F855 20PK/YL	5 VOLT SUPPLY
2	K900 20DB/DG	SENSOR GROUND
3	K22 20BR/OR	TP NO. 1 SIGNAL

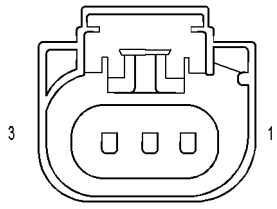

THROTTLE POSITION SENSOR (4.0L)

THROTTLE POSITION SENSOR (4.0L) - 3 WAY

CAV	CIRCUIT	FUNCTION
1	F855 20PK/YL	5 VOLT SUPPLY
2	K900 20DB/DG	SENSOR GROUND
3	K22 18BR/OR	TP NO. 1 SIGNAL

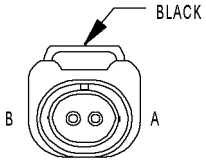

TORQUE CONVERTER CLUTCH SOLENOID

TORQUE CONVERTER CLUTCH SOLENOID - BLACK 2 WAY

CAV	CIRCUIT	FUNCTION
A	F12 20RD/LG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
B	T23 18OR/LG	TRANSMISSION LOW/OVERDRIVE SOLENOID