CONNECTOR/GROUND/SPLICE LOCATION (Continued)

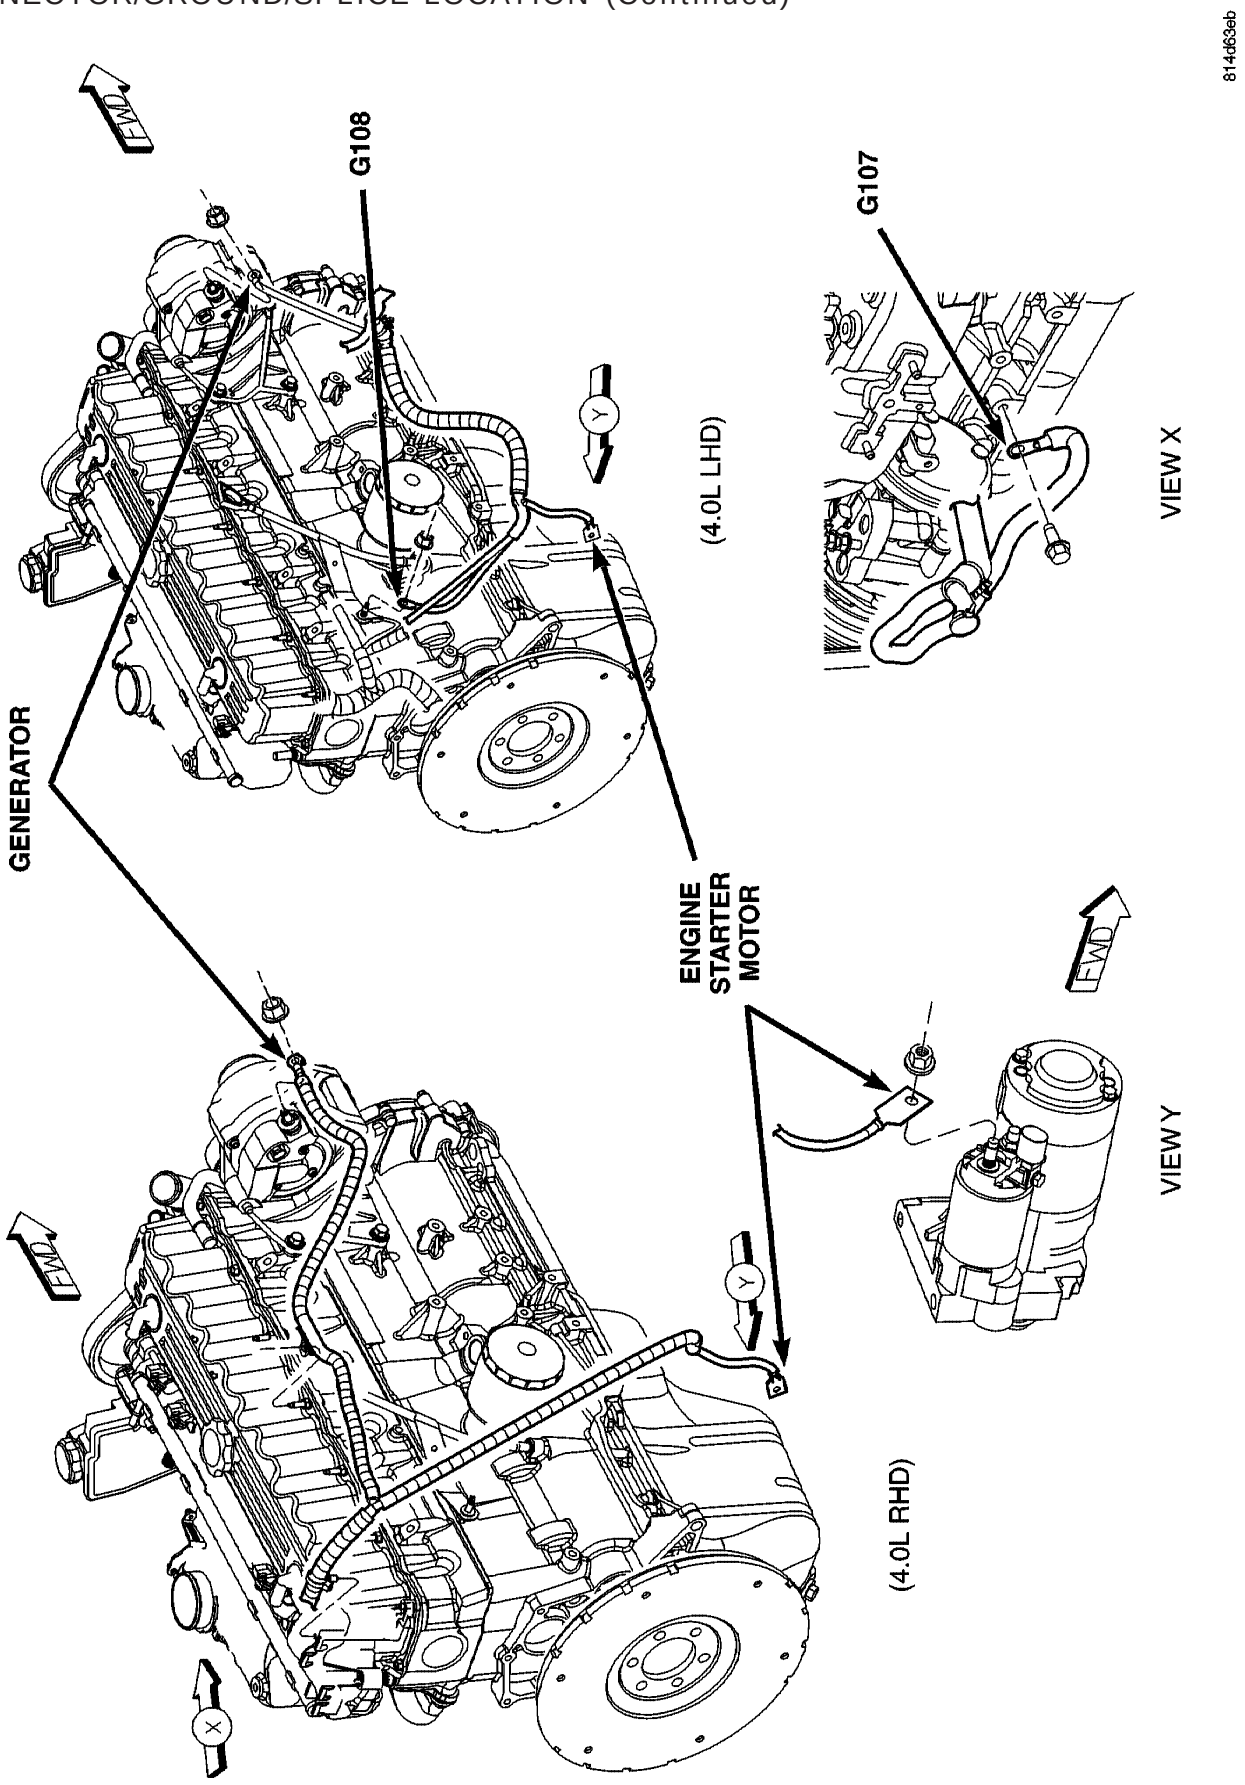



*Fig. 8 -4.0 L ENGINE STARTER & GENERATOR*