CONNECTOR/GROUND/SPLICE LOCATION (Continued)

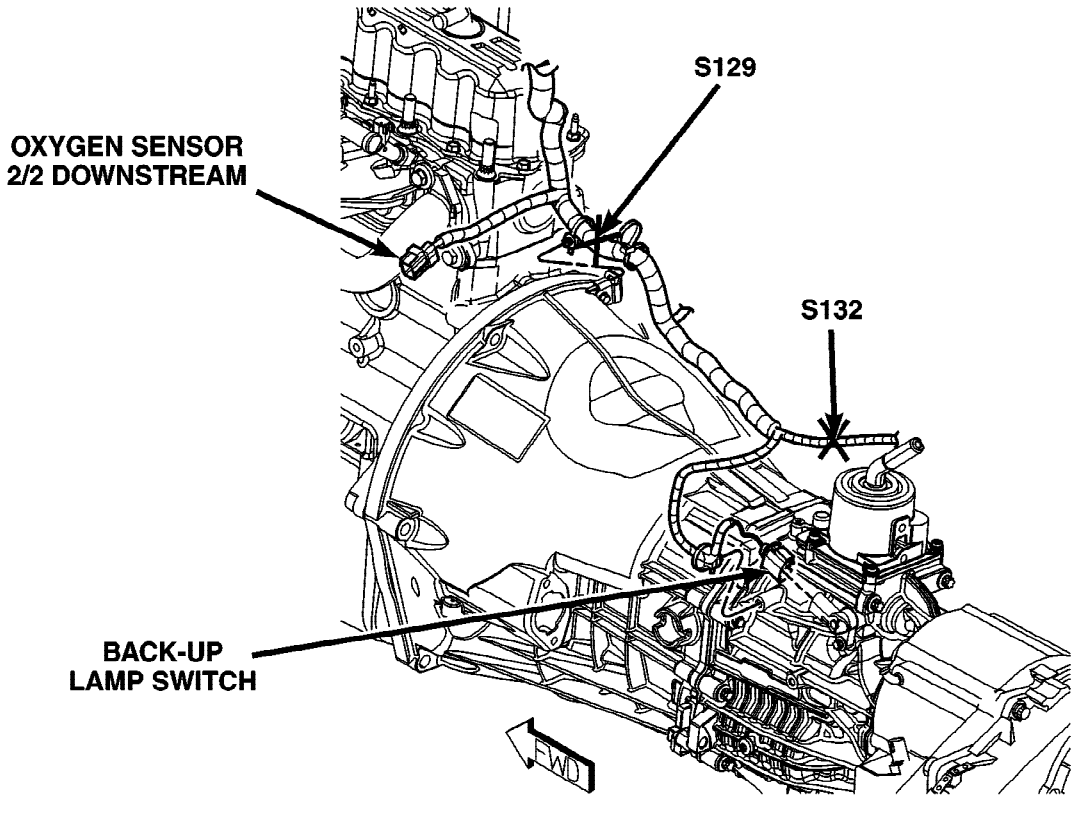


Fig. 35 -4.0 L MANUAL TRANSMISSION