CONNECTOR/GROUND/SPLICE LOCATION (Continued)

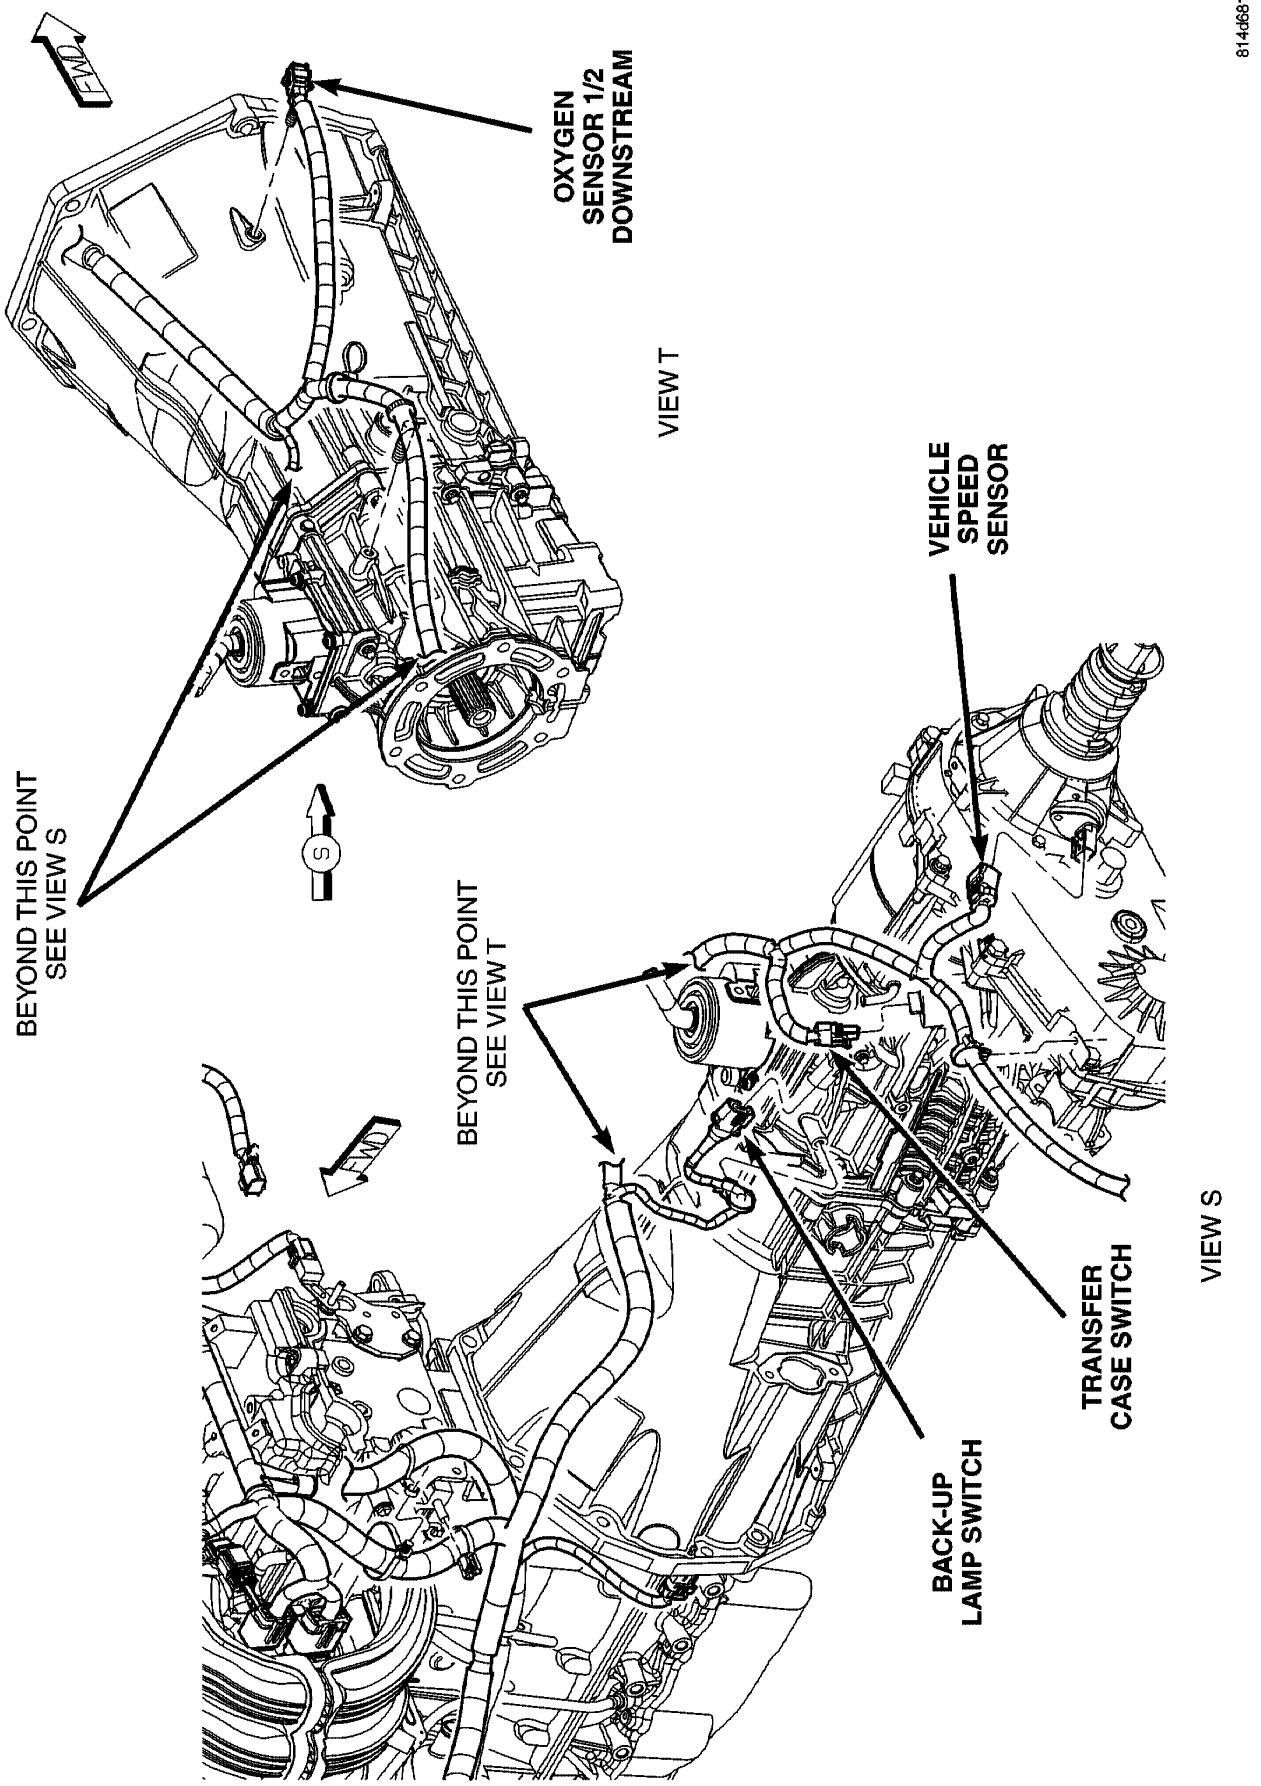


Fig. 37 -2.4 L MANUAL TRANSMISSION