CIGAR LIGHTER OUTLET (Continued)

shell. If OK, replace the faulty cigar lighter knob and element. If not OK, go to Step 3.

(3) Turn the ignition switch to the Off position. Disconnect and isolate the battery negative cable. Remove the instrument panel accessory switch bezel. Check for continuity between the ground circuit cavity #3 of the cigar lighter wire harness connector and a good ground. There should be continuity. If OK, go to Step 4. If not OK, repair the open ground circuit to ground as required.

(4) Connect the battery negative cable. Turn the ignition switch to the Accessory or On positions. Check for battery voltage at cavity #1 of the cigar lighter wire harness connector. If OK, replace the faulty accessory switch bezel unit. If not OK, check for blown fuse in the fuseblock (f19) or in the PDC (f13). If fuse is blown check for short circuit. Repair the circuit as required and replace blown fuse.

FUSE BLOCK

DESCRIPTION

An electrical fuseblock module is mounted on the dash panel in the passenger compartment of the vehicle (Fig. 1). The fuseblock module serves to distribute electrical current to many of the accessory systems in the vehicle. The fuseblock module houses up to twenty blade-type mini fuses.

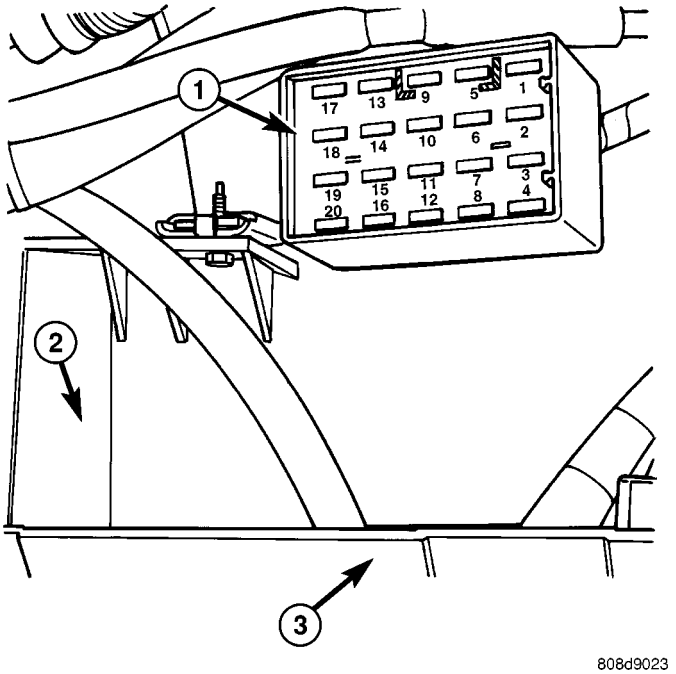

Fig. 1 Fuseblock Module Location

1 - FUSE BLOCK
2 - HEATER CASE
3 - GLOVE BOX OPENING

The molded plastic fuseblock module housing has an integral mounting bracket that is secured with two screws to a bracket welded on the dash panel just above the heater and air conditioner housing. The glove box is rolled down from the instrument panel for service access of the fuseblock module fuses. An adhesive-backed fuse layout map (Fig. 2)is located on the outside of the glove box bin (Fig. 3) to ensure proper fuse identification.

FRT WIPE (25A) 17	TURN SIG (10A) 13	AIRBAG (10A) 9	AIRBAG (10A) 5	PARK LPS SKIM (20A) 1
CIGAR LIGHTER (20A) 18	RADIO (10A) 14	CLUSTER (10A) 10	REAR WIPE (20A) 6	STOP LPS (20A) 2
SPARE FUSE (20A) 19	HBL SW (10A) 15	SOLENOIDS DRL (10A) 11	BACK-UP LP ABS (10A) 7	SUB-WOOFER SYSTEM (20A) 3
TRANS SEE OWNERS MANUAL (20A) 20	HEADLAMP AIM SW (10A) 16	PDC RELAYS SKIM (10A) 12	HEVAC (BLOWER FAN) (10A) 8	DOOR SW DEFEAT (10A) 4
56009391AL				

80d9ff50

Fig. 2 Fuseblock Label

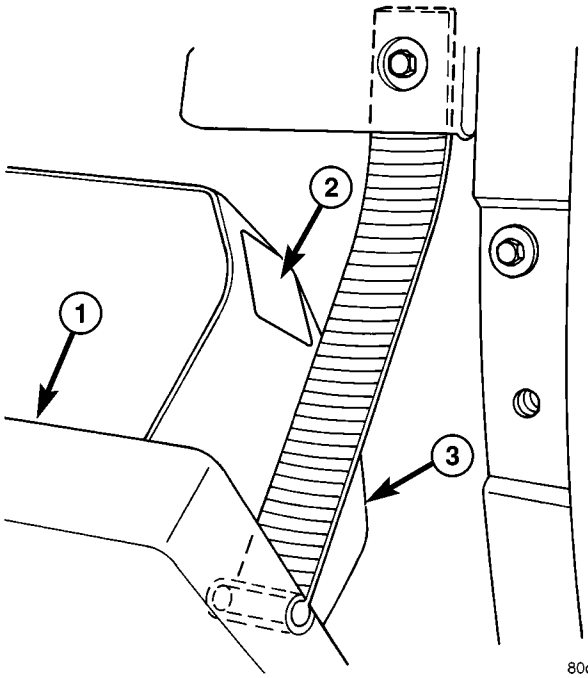

Fig. 3 Fuseblock Label Location

1 - GLOVE BOX DOOR
2 - FUSEBLOCK LABEL
3 - GLOVE BOX BIN