FUSE BLOCK (Continued)

The fuseblock module is integral to the body wire harness. If any internal circuit or the fuseblock module housing is faulty or damaged, the entire fuseblock module and body harness unit must be replaced.

OPERATION

All of the circuits entering and leaving the fuseblock module do so through the body wire harness. Internal connection of all of the fuseblock module circuits is accomplished by an intricate combination of hard wiring and bus bars. Refer to **Wiring Diagrams** for the location of complete fuseblock module circuit diagrams.

REMOVAL

The fuseblock module is serviced as a unit with the body wire harness. If any internal circuit of the fuseblock module or if the fuseblock module housing is faulty or damaged, the entire fuseblock module and the body wire harness unit must be replaced.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument panel assembly from the dash panel (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL ASSEMBLY - REMOVAL).

(3) Disconnect each of the body wire harness connectors. Refer to **Connector Locations** in Wiring for the location of the body wire harness connector locations.

(4) Remove all of the fasteners that secure each of the body wire harness ground eyelets to the vehicle body and chassis components. Refer to **Connector Locations** in Wiring for the location of the body wire harness ground locations.

(5) Disengage each of the retainers that secure the body wire harness to the vehicle body and chassis components. Refer to **Connector Locations** in Wiring for the location of the body wire harness retainer locations.

(6) Remove the two screws that secure the fuseblock module to the bracket on the dash panel (Fig. 4).

(7) Remove the fuseblock module and the body wire harness from the dash panel as a unit.

INSTALLATION

The fuseblock module is serviced as a unit with the body wire harness. If any internal circuit of the fuseblock module or if the fuseblock module housing is faulty or damaged, the entire fuseblock module and the body wire harness unit must be replaced.

NOTE: If the fuseblock module is being replaced with a new unit, be certain to transfer each of the fuses from the faulty fuseblock module to the proper cavities of the replacement fuseblock module. Refer to Fuse/Fuse Block in the index of this service manual for the location of complete fuseblock module circuit diagrams and cavity assignments.

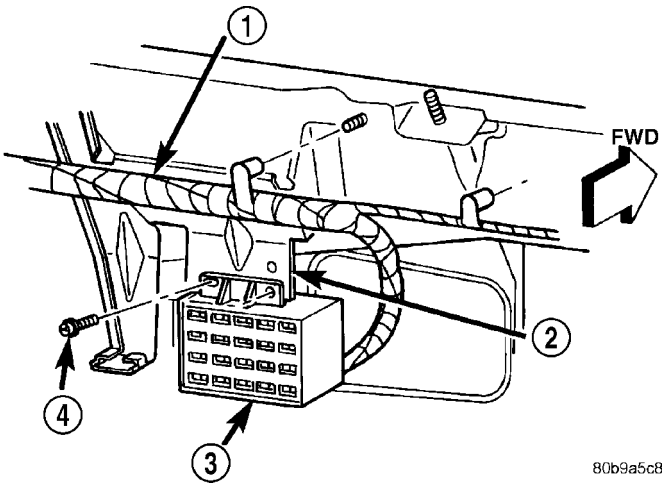

Fig. 4 Fuseblock Module Remove/Install

1 - BODY WIRE HARNESS
2 - BRACKET
3 - FUSEBLOCK MODULE
4 - SCREWS (2)

(1) Position the fuseblock module and the body wire harness onto the dash panel as a unit.

(2) Install and tighten the two screws that secure the fuseblock module to the bracket on the dash panel. Tighten the screws to 3.3 N·m (30 in. lbs.).

(3) Engage each of the retainers that secure the body wire harness to the vehicle body and chassis components. Refer to **Connector Locations** in Wiring for the location of the body wire harness retainer locations.

(4) Install all of the fasteners that secure each of the body wire harness ground eyelets to the vehicle body and chassis components. Refer to **Connector Locations** in Wiring for the location of the body wire harness ground eyelet locations.

(5) Reconnect each of the body wire harness connectors. Refer to **Connector Locations** in Wiring for the location of the body wire harness connector locations.

(6) Install the instrument panel assembly onto the dash panel (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL ASSEMBLY - INSTALLATION).

(7) Reconnect the battery negative cable.