POWER DISTRIBUTION CENTER (Continued)

PDC B(+) TERMINAL MODULE REMOVAL

(1) Remove the PDC housing lower cover.

(2) From the top of the PDC housing, use a small screwdriver or a terminal pick tool (Special Tool Kit 6680) to release the two latches that secure the B(+) terminal module in the PDC (Fig. 10).

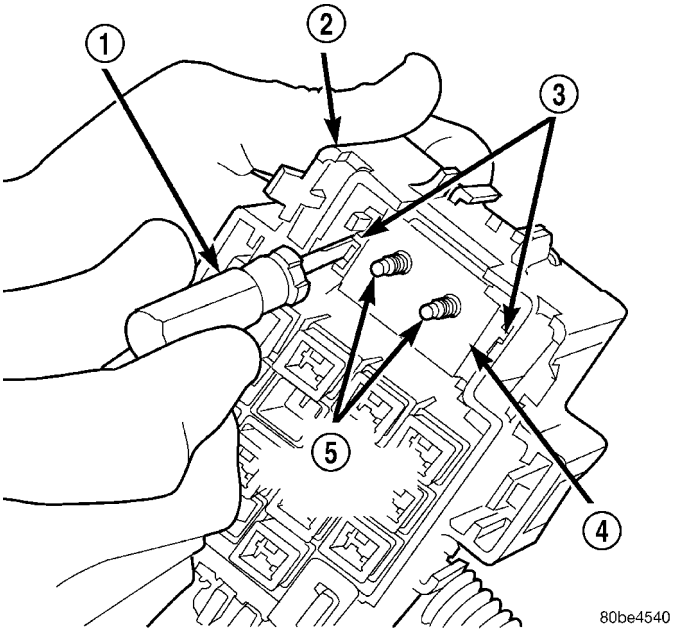

Fig. 10 PDC B(+) Terminal Module Latches

1 - FROM SPECIAL TOOL KIT 6680
2 - PDC HOUSING
3 - LATCHES
4 - BUS BAR
5 - B+ TERMINAL STUDS

(3) Gently and evenly press the two B(+) terminal studs down through the bus bar in the PDC.

(4) From the bottom of the PDC housing, remove the B(+) terminal module from the PDC (Fig. 11).

PDC RELAY WEDGE REMOVAL

(1) Remove the PDC housing lower cover.

(2) Remove each of the relays from the PDC relay wedge to be removed.

(3) From the bottom of the PDC housing, use a small screwdriver or a terminal pick tool (Special Tool Kit 6680) to release the two latches (yellow) that secure the relay wedge to the PDC relay cassette.

(4) From the top of the PDC housing, remove the relay wedge from the PDC relay cassette (Fig. 12).

PDC RELAY CASSETTE REMOVAL

(1) Remove the relay wedge from the PDC relay cassette to be removed.

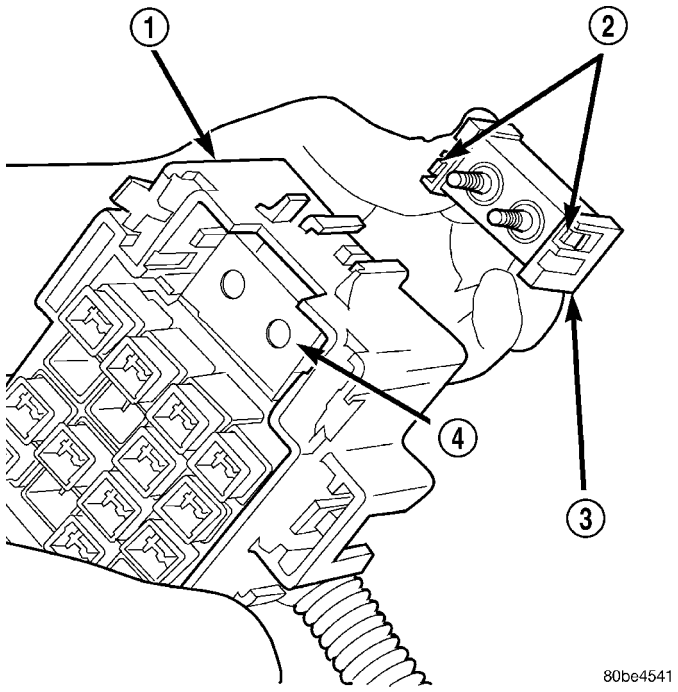

Fig. 11 PDC B(+) Terminal Module Remove/Install

1 - PDC HOUSING
2 - LATCHES
3 - B+ TERMINAL MODULE
4 - BUS BAR

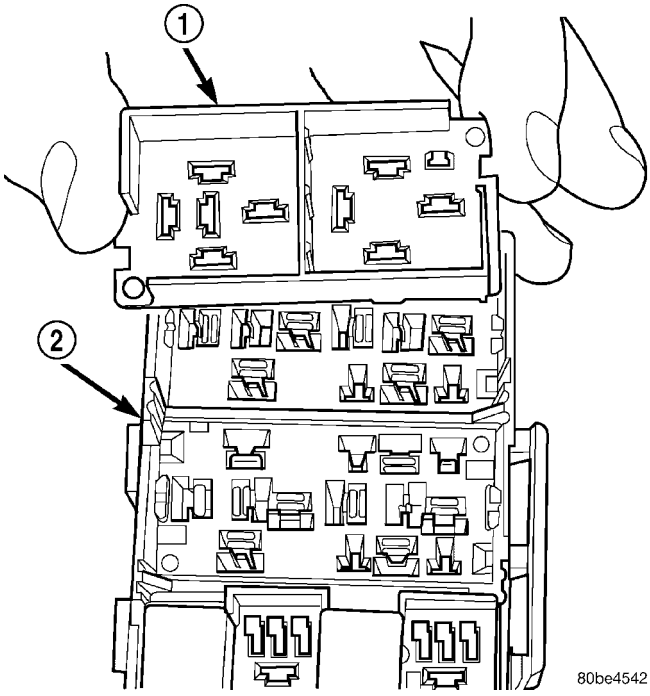

Fig. 12 PDC Relay Wedge Remove/Install - Typical

1 - RELAY WEDGE
2 - PDC HOUSING