POWER DISTRIBUTION CENTER (Continued)

erator output take out onto the PDC B(+) terminal studs.

(4) Install and tighten the two nuts that secure the eyelet terminal of the battery positive cable take out and the engine wire harness generator output take out to the B(+) terminal studs. Tighten the nuts to 11.3 N·m (100 in. lbs.).

(5) Engage the tabs on the lower edge of the B(+) terminal stud cover in the slots on the back of the PDC housing, then engage the latch on the top of the cover with the latch receptacle on the PDC housing.

(6) Engage each of the retainers that secure the dash wire harness to the vehicle body and chassis components. Refer to **Connector Locations** in the index of this service manual for the location of more information on the dash wire harness retainer locations.

(7) Install all of the fasteners that secure each of the dash wire harness ground eyelets to the vehicle body and chassis components. Refer to **Connector Locations** in the index of this service manual for the location of more information on the ground eyelet locations.

(8) Reconnect each of the dash wire harness connectors. Refer to **Connector Locations** in the index of this service manual for the location of more information on the dash wire harness connector locations.

(9) Reconnect the battery negative cable.

POWER DISTRIBUTION CENTER SUPPORT BRACKET

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the Power Distribution Center (PDC) from the PDC bracket (Refer to 8 - ELECTRICAL/ POWER DISTRIBUTION/POWER DISTRIBUTION CENTER - REMOVAL).

(3) Remove the three screws that secure the PDC bracket to the right front inner fender (Fig. 16).

(4) Remove the PDC bracket from the right front inner fender.

INSTALLATION

(1) Position the PDC bracket onto the right front inner fender.

(2) Install and tighten the three screws that secure the PDC mounting bracket to the right front inner fender. Tighten the screws to 3.9 N·m (35 in. lbs.).

(3) Install the PDC onto the PDC bracket (Refer to 8 - ELECTRICAL/POWER DISTRIBUTION/POWER DISTRIBUTION CENTER - INSTALLATION).

(4) Reconnect the battery negative cable.

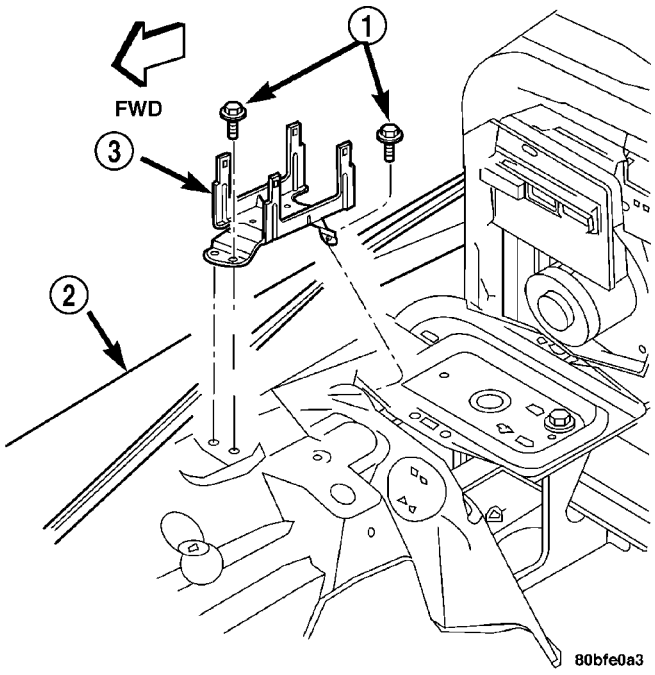

Fig. 16 PDC Bracket

1 - SCREWS (3)
2 - RIGHT FRONT FENDER
3 - PDC BRACKET

POWER OUTLET

DESCRIPTION

An instrument panel power outlet is standard factory installed equipment on this model. The power outlet is installed in the instrument panel accessory switch bezel, which is located near the bottom of the center bezel area below the heater and air conditioning controls. The power outlet base is secured by a snap fit within the instrument panel. A plastic protective cap snaps into the power outlet base when the power outlet is not being used, and hangs from the power outlet base mount by an integral bail strap while the power outlet is in use.

The power outlet receptacle unit and the accessory power outlet protective cap are available for service. The power outlet receptacle cannot be repaired and, if faulty or damaged, it must be replaced.

OPERATION

The power outlet base or receptacle shell is connected to ground, and an insulated contact in the bottom of the shell is connected to battery current. The power outlet receives battery voltage from a fuse in the Power Distribution Center at all times.

While the power outlet is very similar to a cigar lighter base unit, it does not include the two small spring-clip retainers inside the bottom of the receptacle shell that are used to secure the cigar lighter heating element to the insulated contact.