AIR CLEANER ELEMENT - 2.4L

REMOVAL - 2.4L

Housing removal is not necessary for element (filter) replacement.

(1) Disconnect air intake duct at front of element cover.

(2) Pry up spring clips (Fig. 5) from housing cover (spring clips retain cover to housing).

(3) Release housing cover from locating tabs located on housing, and remove cover.

(4) Remove air cleaner element (filter) from housing.

(5) Clean inside of housing before replacing element.

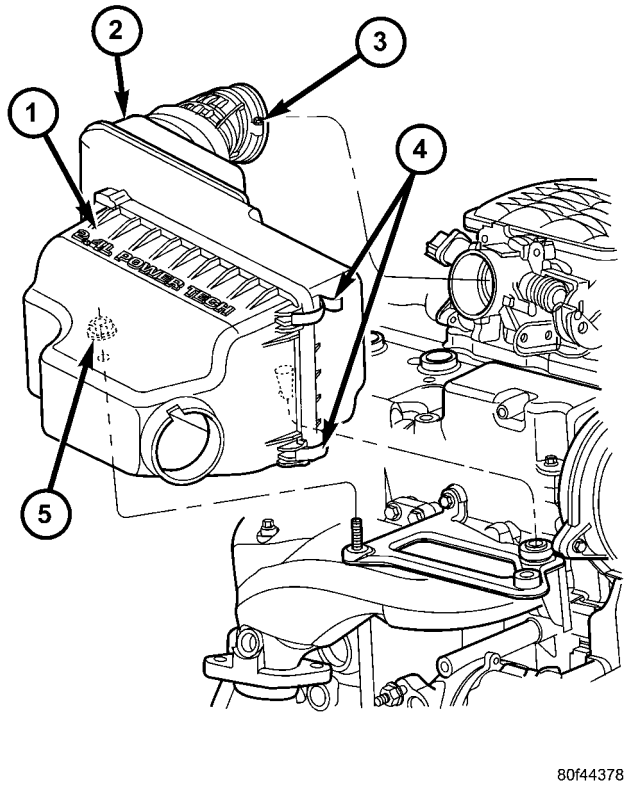

Fig. 5 AIR CLEANER ELEMENT - 2.4L

1 - COVER
2 - HOUSING
3 - CLAMP
4 - SPRING CLIPS
5 - HOUSING MOUNTING NUT

INSTALLATION - 2.4L

(1) Install element into housing.

(2) Position housing cover into housing locating tabs.

(3) Pry up spring clips and lock cover to housing.

(4) Connect air intake duct.

If any air filter, air resonator, air intake tubes or air filter housing clamps had been loosened or removed, tighten them to 5 N·m (40 in. lbs.) torque.

AIR CLEANER HOUSING

REMOVAL

(1)

(2) Disconnect air intake duct at front of element cover.

(3) Pry up spring clips from housing cover (spring clips retain cover to housing).

(4) Release housing cover from locating tabs located on housing, and remove cover. (Fig. 6)

(5) Remove air cleaner element (filter) from housing.

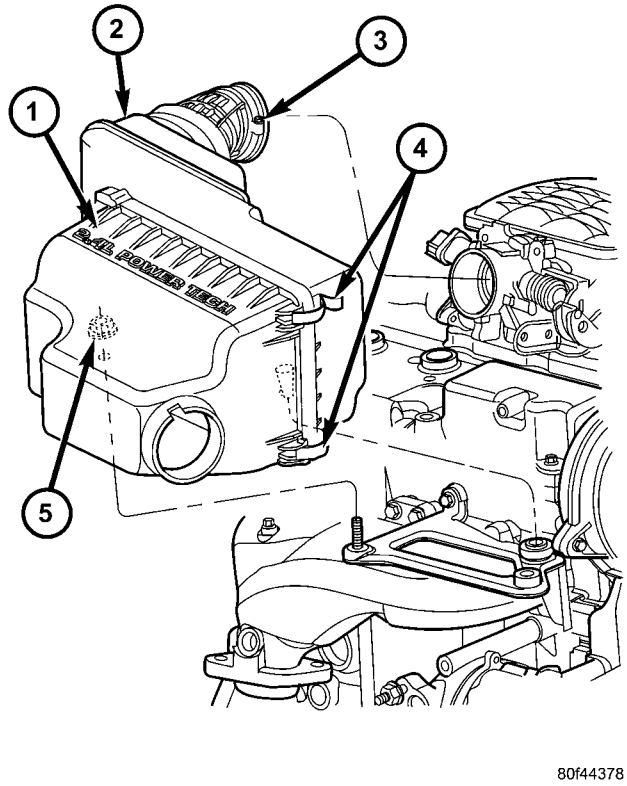

Fig. 6 AIR CLEANER ELEMENT - 2.4L

1 - COVER
2 - HOUSING
3 - CLAMP
4 - SPRING CLIPS
5 - HOUSING MOUNTING NUT

(6) Remove vent hose.

(7) Remove the housing mounting nut.

(8) Remove the air cleaner housing.