CAMSHAFT OIL SEAL(S) (Continued)

INSTALLATION

NOTE: Clean and inspect sensor and target ring for excessive wear. Clean sensor face and always install a new spacer pad.

(1) Shaft seal surface must be free of varnish, dirt or nicks. Polish with 400 grit paper if necessary.

(2) Install camshaft seals into cylinder head using Special Tool MD-998306 until flush with head (Fig. 16).

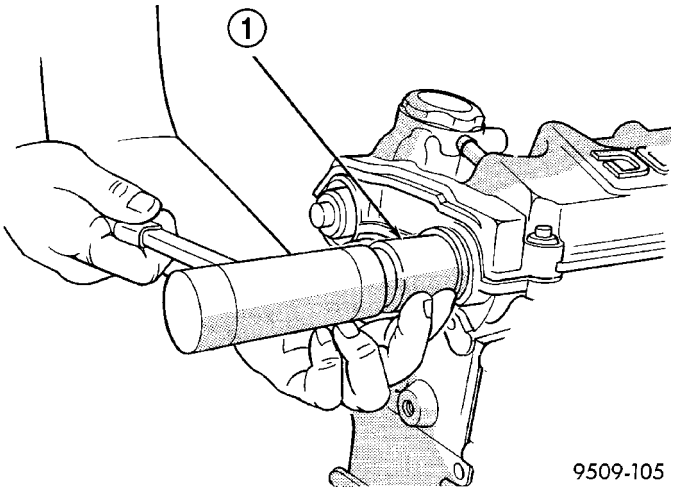

Fig. 16 Camshaft Seal - Installation

1 - SPECIAL TOOL MD 998306

(3) Install timing belt rear cover. (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT / CHAIN COVER(S) - INSTALLATION)

NOTE: Target ring tab should provide positive snap-on fit on the camshaft.

(4) Install exhaust camshaft target ring with the word **FRONT** facing forward.

(5) Install exhaust camshaft sensor.

(6) Install camshaft sprockets. Hold each sprocket with Special Tool 6847 and tighten center bolt to 101 N·m (75 ft. lbs.).

(7) Install timing belt and front covers. (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT/CHAIN AND SPROCKETS - INSTALLATION) (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT / CHAIN COVER(S) - INSTALLATION)

CAMSHAFT(S)

DESCRIPTION

Both nodular iron camshafts have six bearing journal surfaces and two cam lobes per cylinder (Fig. 17). Flanges at the rear journals control camshaft end play. Provision for a cam position sensor is located on the exhaust camshaft on the front of the cylinder head. A hydrodynamic oil seal is used for oil control at the front of the camshaft.

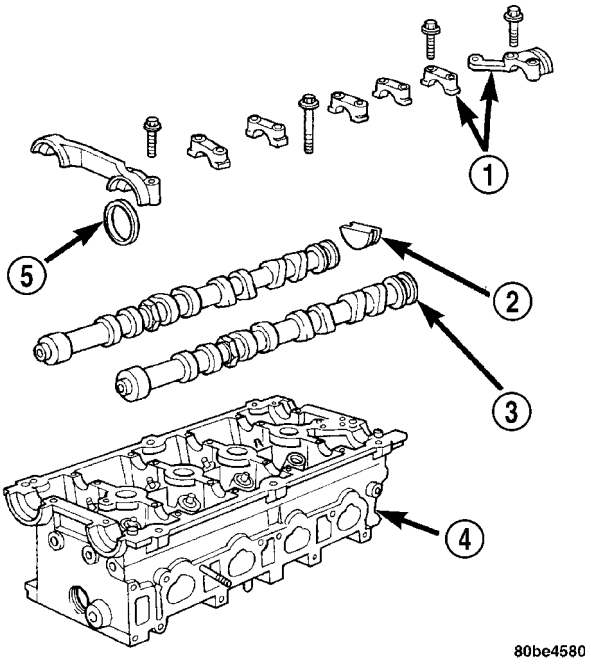

Fig. 17 Camshafts

1 - CAMSHAFT BEARING CAPS
2 - PLUG
3 - CAMSHAFT
4 - CYLINDER HEAD
5 - CAMSHAFT OIL SEAL

OPERATION

The camshaft is driven by the crankshaft via drive sprockets and belt. The camshaft has precisely machined lobes to provide accurate valve timing and duration.