CYLINDER HEAD COVER (Continued)

INSTALLATION

NOTE: Replace spark plug well seals and bolt assemblies when installing a new cylinder head cover gasket.

(1) Install new cylinder head cover gaskets and spark plug well seals (Fig. 24).

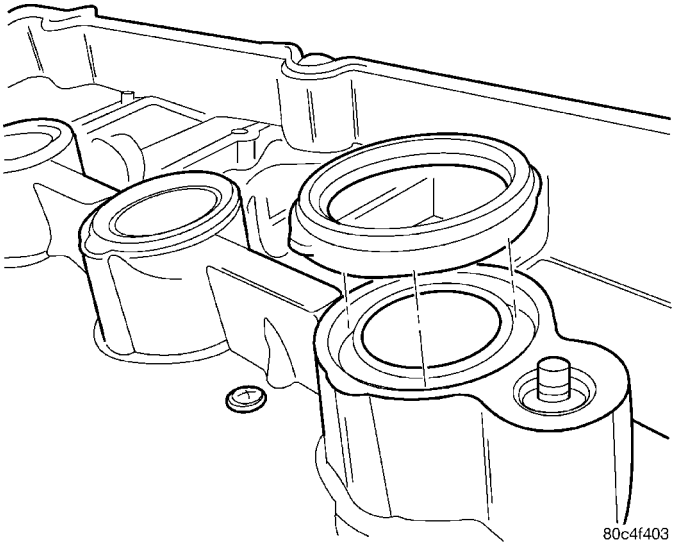

Fig. 24 Spark Plug Well Seals

(2) Replace cylinder head cover bolt assemblies (Fig. 25).

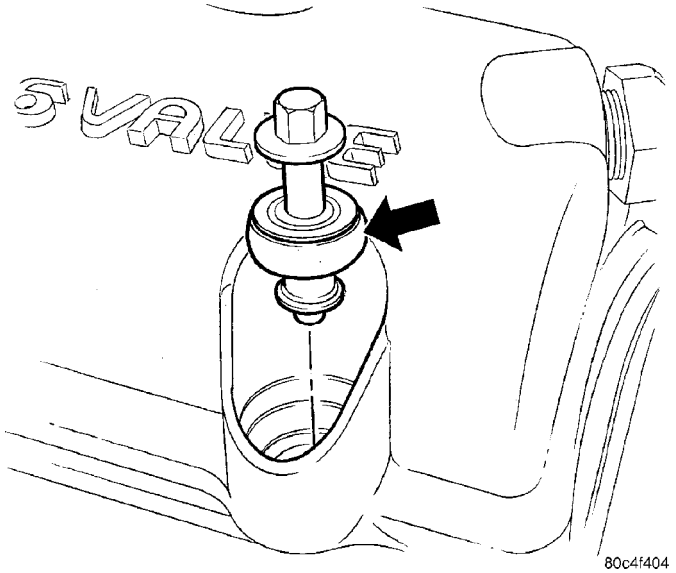

Fig. 25 Cylinder Head Cover Bolt Assembly

CAUTION: Do not allow oil or solvents to contact the timing belt as they can deteriorate the rubber and cause tooth skipping.

(3) Apply Mopar® Engine RTV GEN II at the camshaft cap corners and at the top edges of the 1/2 round seal (Fig. 26).

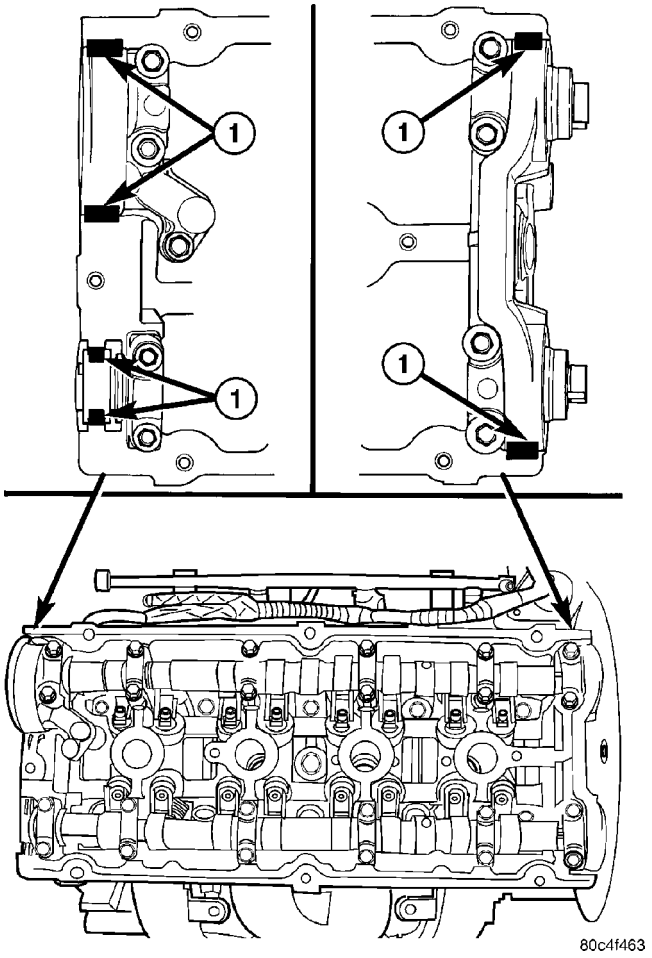

Fig. 26 Sealer Locations - Typical

1 – SEALER LOCATION