CRANKSHAFT (Continued)

(11) Remove all connecting rod bolts and caps. Care should be taken not to damage the fracture rod and cap surfaces.

NOTE: Do not reuse connecting rod bolts.

(12) Remove all bedplate bolts from the engine block (Fig. 44).

(13) Using a mallet gently tap the bedplate loose from the engine block dowel pins.

CAUTION: Do not pry up on one side of the bedplate. Damage may occur to cylinder block to bedplate alignment and thrust bearing.

(14) Bedplate should be removed evenly from the cylinder block dowel pins to prevent damage to the dowel pins and thrust bearing.

(15) Lift out crankshaft from cylinder block. Do not damage the main bearings or journals when removing the crankshaft.

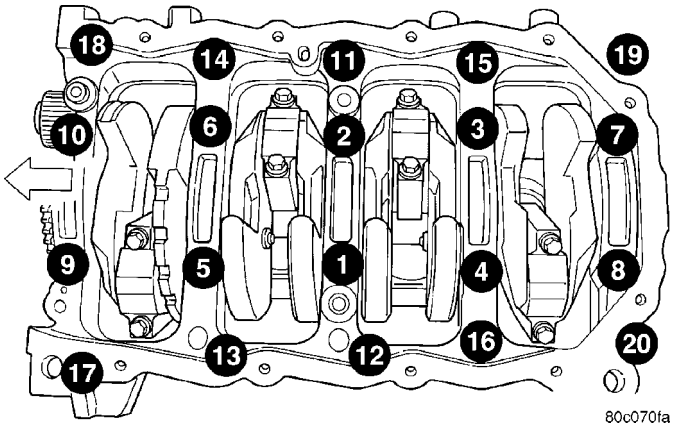

Fig. 44 Bedplate Bolt Tightening Sequence

(16) Remove the target ring mounting screws and discard.

(17) Remove the target ring from the crankshaft.

INSPECTION

The crankshaft journals should be checked for excessive wear, taper and scoring (Fig. 45). Limits of taper or out of round on any crankshaft journals should within specitifications. (Refer to 9 - ENGINE - SPECIFICATIONS) Journal grinding should not exceed 0.305 mm (0.012 in.) under the standard journal diameter. DO NOT grind thrust faces of No. 3 main bearing. DO NOT nick crank pin or bearing fillets. After grinding, remove rough edges from crankshaft oil holes and clean out all passages.

CAUTION: With the nodular cast iron crankshafts, it is important that the final paper or cloth polish be in the same direction as normal rotation in the engine.

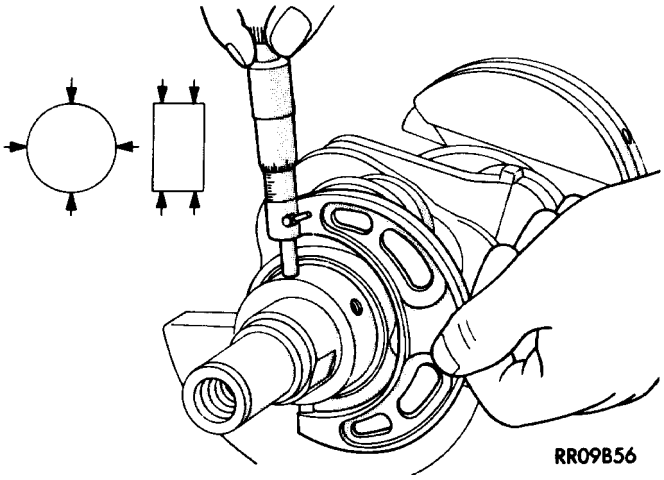

Fig. 45 Crankshaft Journal Measurements

INSTALLATION

(1) Install the main bearing shells with the lubrication groove in the cylinder block (Fig. 46).

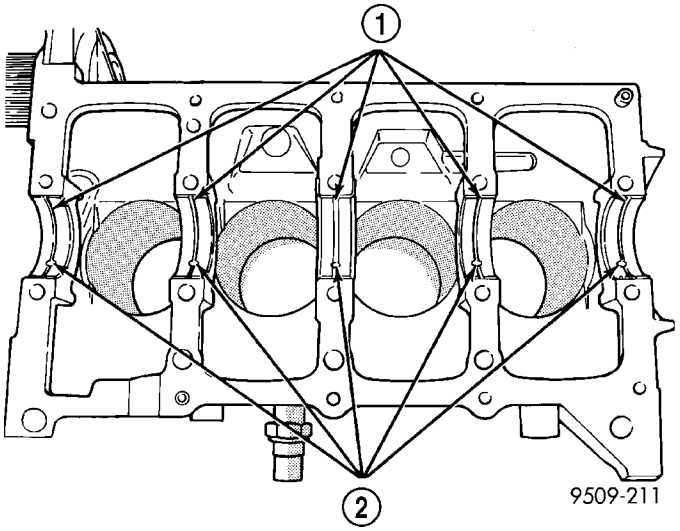

Fig. 46 Installing Main Bearing Upper Shell

1 - LUBRICATION GROOVES
2 - OIL HOLES

(2) Make certain oil holes in block line up with oil hole in bearings and bearing tabs seat in the block tab slots.

CAUTION: Do not get oil on the bedplate mating surface. It will affect the sealer ability to seal the bedplate to cylinder block.

NOTE: If the crankshaft is sent out for machine work, it must be balenced as an assembly with the target ring installed.

(3) Clean crankshaft and target ring with MOPAR® brake parts cleaner and dry with com-