CRANKSHAFT (Continued)

pressed air to ensure that the crankshaft mating surface and target ring mounting holes are free from oil and lock patch debris.

NOTE: Always use NEW mounting screws whether installing original or new target ring.

(4) Install **NEW** mounting screws finger tight starting with the #1 location. (Fig. 47) Make sure engagment occurs with the shoulder of the screw and mounting hole before starting all other screws.

(5) Torque all mounting screws with T30 torx bit to 13 Nm (110 in-lbs) following the torque sequence.

CAUTION: Use extreme care when handling crankshaft. Tone wheel damage can occur if crankshaft is mis-handled.

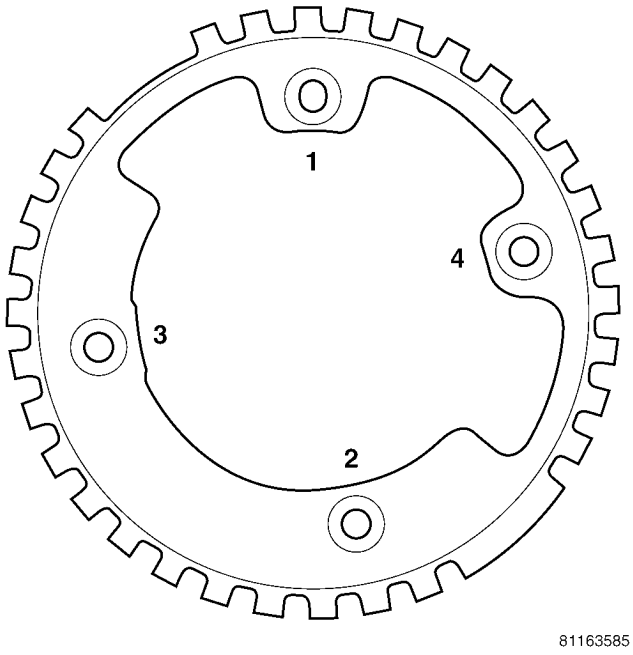

Fig. 47 Target Ring Torque Sequence

(6) Oil the bearings and journals. Install crankshaft.

CAUTION: Use only the specified anaerobic sealer on the bedplate or damage may occur to the engine.

(7) Apply 1.5 to 2.0 mm (0.059 to 0.078 in.) bead of Mopar® Bed Plate Sealant to cylinder block as shown in (Fig. 48).

(8) Install lower main bearings into main bearing cap/bedplate. Make certain the bearing tabs are seated into the bedplate slots. Install the main bearing/bedplate into engine block.

(9) Before installing the bolts the threads should be oiled with clean engine oil, wipe off any excess oil.

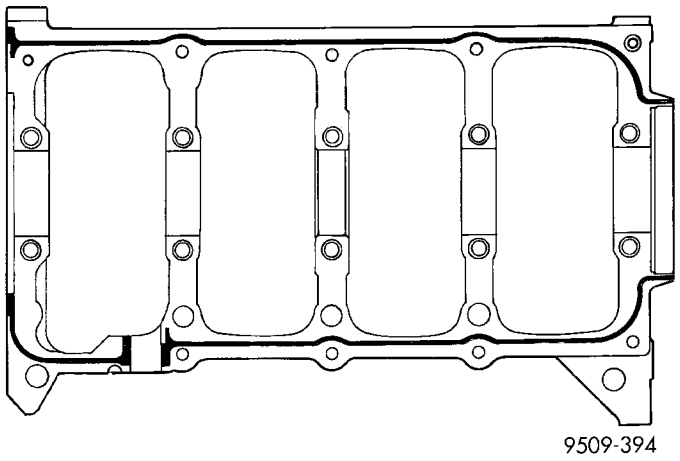

Fig. 48 Bedplate Sealing

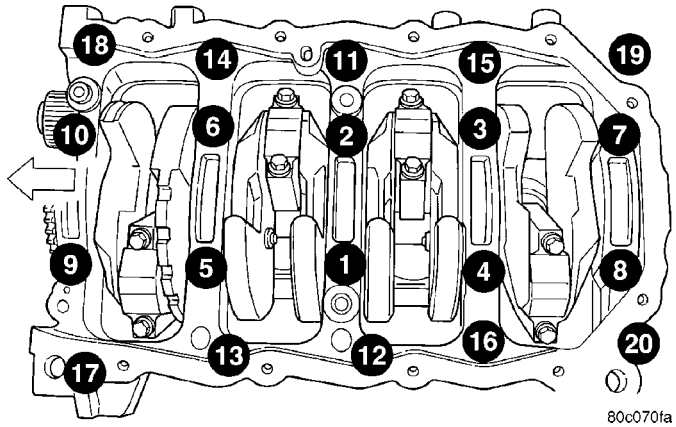

Fig. 49 Bedplate Bolt Torque Sequence

(10) Install main bearing bedplate to engine block bolts 11, 17, and 20 finger tight. Tighten these bolts down together until the bedplate contacts the cylinder block.

(11) To ensure correct thrust bearing alignment, perform the following steps:

- Step 1: Rotate crankshaft until number 4 piston is at TDC.
- Step 2: Move crankshaft rearward to limits of travel.
- Step 3: Then, move crankshaft forward to limits of travel.
- Step 4: Wedge an appropriate tool between the rear of the cylinder block **(NOT BED PLATE)** and the rear crankshaft counterweight. This will hold the crankshaft in it's furthest forward position.
- Step 5: Install and tighten bolts (1–10) in sequence shown in (Fig. 49) to 41 N·m (30 ft. lbs.).
- Step 6: Remove wedge tool used to hold crankshaft.

(12) Tighten bolts (1–10) again to 41 N·m (30 ft. lbs.) +1/4 turn in sequence shown in (Fig. 49).