CRANKSHAFT OIL SEAL - FRONT (Continued)

(2) Remove timing belt. (Refer to 9 - ENGINE/ VALVE TIMING/TIMING BELT/CHAIN AND SPROCKETS - REMOVAL)

(3) Remove crankshaft sprocket using Special Tool 6793 and insert C-4685-C2 (Fig. 55).

CAUTION: Do not nick shaft seal surface or seal bore.

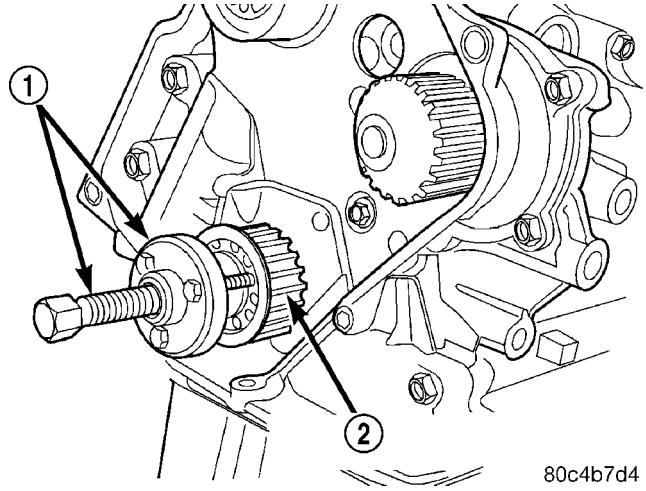

Fig. 55 Crankshaft Sprocket - Removal

1 - SPECIAL TOOL 6793
2 - CRANKSHAFT SPROCKET

(4) Using Tool 6771 to remove front crankshaft oil seal (Fig. 56). Be careful not to damage the seal surface of cover.

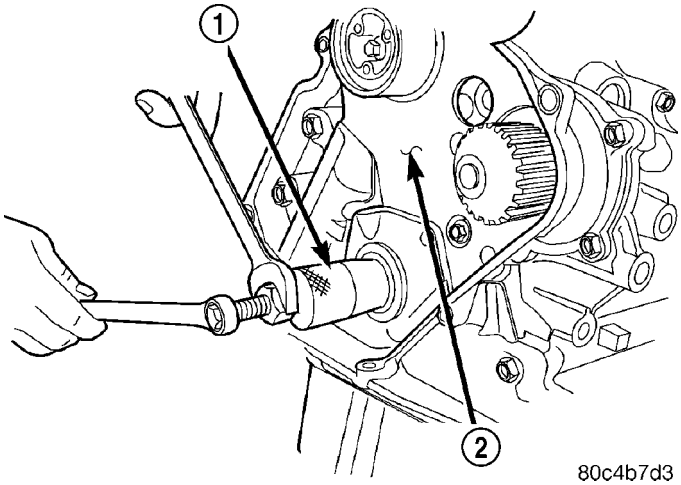

Fig. 56 Front Crankshaft Oil Seal - Removal

1 - SPECIAL TOOL 6771
2 - REAR TIMING BELT COVER

INSTALLATION

(1) Install new seal by using Special Tool 6780 (Fig. 57).

(2) Place seal into opening with seal spring towards the inside of engine. Install seal until flush with cover.

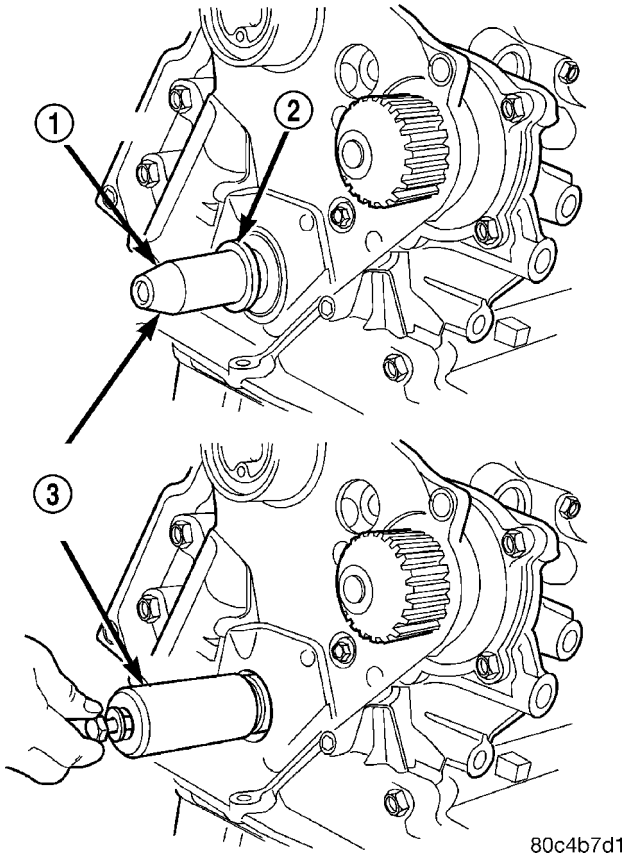

Fig. 57 Crankshaft Front Oil Seal - Installation

1 - PROTECTOR
2 - SEAL
3 - SPECIAL TOOL 6780