CRANKSHAFT OIL SEAL - REAR (Continued)

CAUTION: If the seal is driven into the block past flush, this may cause an oil leak.

(4) Drive the seal into the block using Special Tool 6926-2 and handle C-4171 (Fig. 62) until the tool bottoms out against the block (Fig. 63).

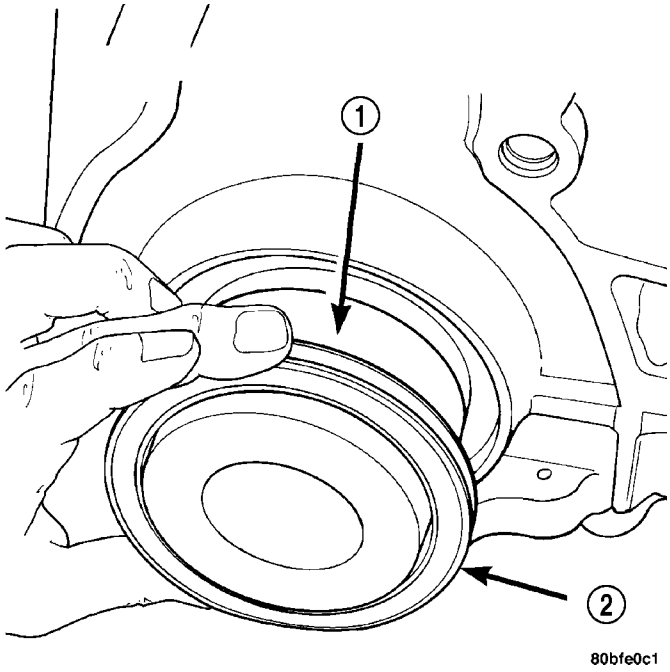

Fig. 61 Rear Crankshaft Seal and Special Tool 6926-1

1 - SPECIAL TOOL 6926–1 PILOT
2 - SEAL

(5) Install flex plate. Apply Mopar® Lock & Seal Adhesive to bolt threads and tighten bolts to 95 N·m (70 ft. lbs.).

(6) Install the transmission.

PISTON & CONNECTING ROD

DESCRIPTION

The pistons are made of a cast aluminum alloy. The pistons have pressed-in pins attached to forged powdered metal connecting rods. The pistons pin is offset 1 mm (0.0394 in.) towards the thrust side of the piston. The connecting rods are a cracked cap design and are not repairable. Hex head cap screws are used to provide alignment and durability in the assembly. The pistons and connecting rods are serviced as an assembly.

OPERATION

The piston and connecting rod is the link between the combustion force to the crankshaft.

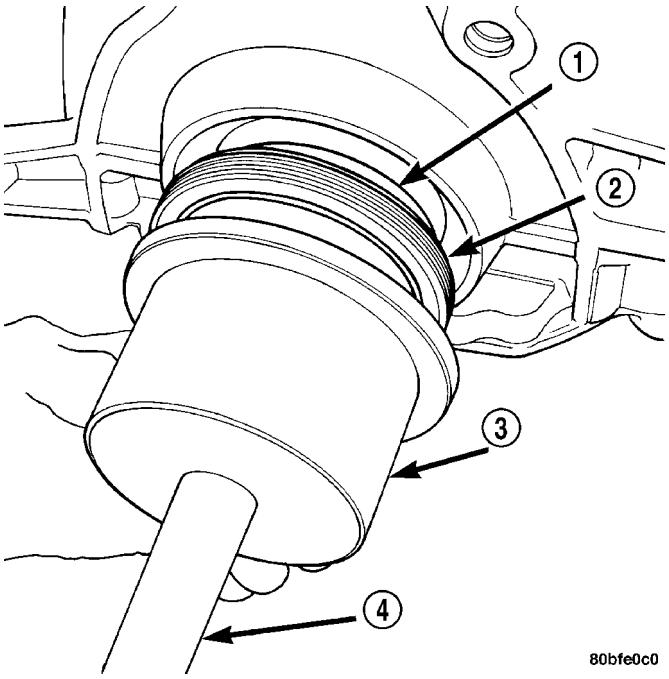

Fig. 62 Crankshaft Seal and Special Tools 6926-2 & C-4171

1 - SPECIAL TOOL 6926–1 PILOT
2 - SEAL
3 - SPECIAL TOOL 6926–2 INSTALLER
4 - SPECIAL TOOL C-4171

REMOVAL

NOTE: Cylinder Head must be removed before Pistons and Rods. Refer to Cylinder Head Removal in this section.

(1) Remove top ridge of cylinder bores with a reliable ridge reamer before removing pistons from cylinder block. **Be sure to keep tops of pistons covered during this operation**. Mark piston with matching cylinder number (Fig. 64).

(2) Remove oil pan. Scribe the cylinder number on the side of the rod and cap (Fig. 65) for identification.

(3) Pistons have a directional stamping in the front half of the piston facing towards the **front** of engine.

(4) Pistons and connecting rods must be removed from top of cylinder block. Rotate crankshaft so that each connecting rod is centered in cylinder bore.

(5) Remove Balance Shaft Assembly. Refer to Balance Shaft Removal in this section.

(6) Remove connecting rod cap bolts. Push each piston and rod assembly out of cylinder bore.

NOTE: Be careful not to nick crankshaft journals.

(7) After removal, install bearing cap on the mating rod.

(8) Piston and Rods are serviced as an assembly.