PISTON & CONNECTING ROD (Continued)

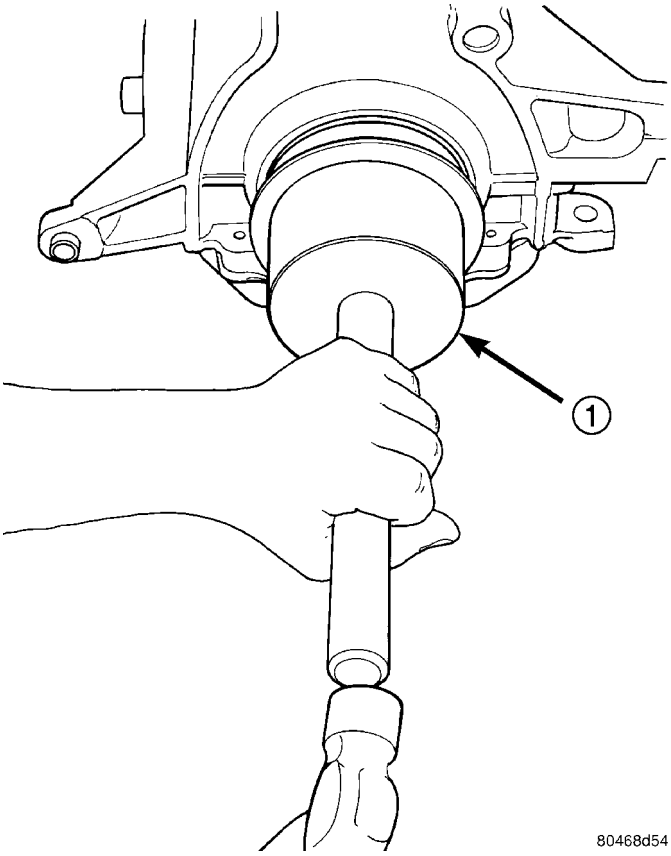

Fig. 63 Rear Crankshaft Seal - Installation

1 - SPECIAL TOOL 6926–2 INSTALLER

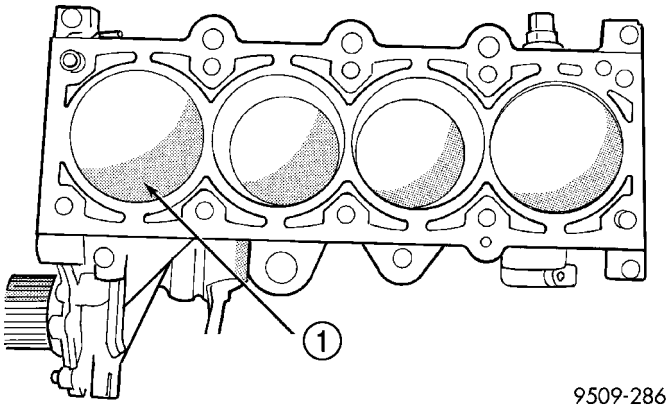

Fig. 64 Piston Markings

1 - DIRECTIONAL ARROW WILL BE IMPRINTED IN THIS AREA

INSTALLATION

(1) Before installing pistons and connecting rod assemblies into the bore, be sure that compression ring gaps are staggered so that neither is in line with oil ring rail gap.

(2) Before installing the ring compressor, make sure the oil ring expander ends are butted and the rail gaps located as shown in (Fig. 66). As viewed from top.

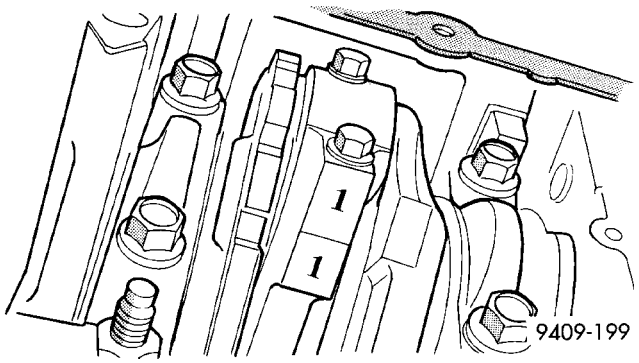

Fig. 65 Identify Connecting Rod to Cylinder

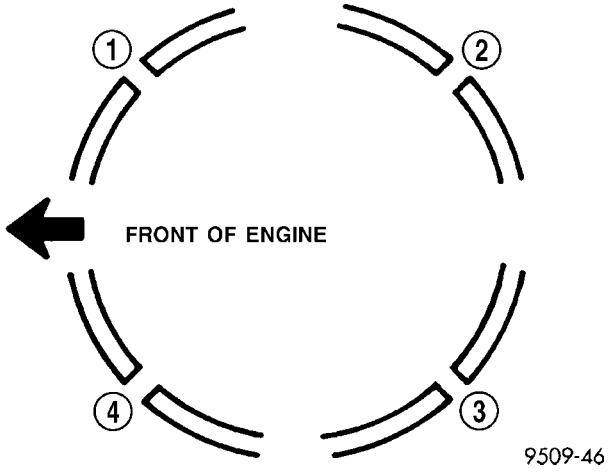

Fig. 66 Piston Ring End Gap Position

1 - GAP OF LOWER SIDE RAIL
2 - NO. 1 RING GAP
3 - GAP OF UPPER SIDE RAIL
4 - NO. 2 RING GAP AND SPACER EXPANDER GAP

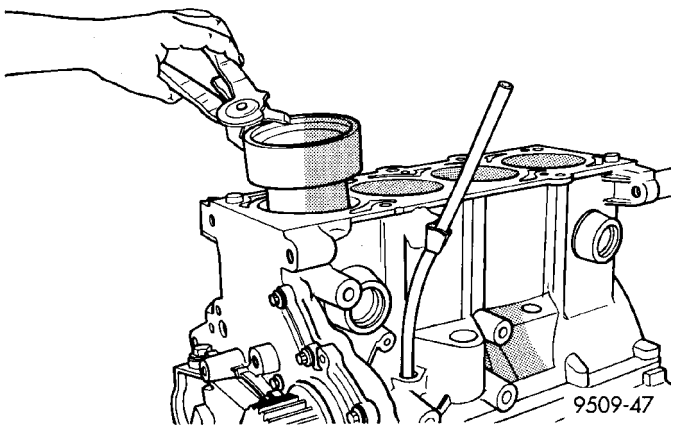

Fig. 67 Piston - Installation

(3) Immerse the piston head and rings in clean engine oil, slide the ring compressor, over the piston (Fig. 67). **Be sure position of rings does not change during this operation** .

(4) The directional stamp on the piston should face toward the front of the engine.