PISTON & CONNECTING ROD (Continued)

(5) Rotate crankshaft so that the connecting rod journal is on the center of the cylinder bore. Insert rod and piston assembly into cylinder bore and guide rod over the crankshaft journal.

(6) Tap the piston down in cylinder bore, using a hammer handle. At the same time, guide connecting rod into position on connecting rod journal.

NOTE: The connecting rod cap bolts should not be reused.

(7) Before installing the **NEW** bolts the threads should be coated with clean engine oil.

(8) Install each bolt finger tight than alternately torque each bolt to assemble the cap properly.

CAUTION: Do not use a torque wrench for second part of last step.

(9) Tighten the bolts to 54 N·m PLUS 1/4 turn (40 ft. lbs. PLUS 1/4 turn).

(10) Using a feeler gauge, check connecting rod side clearance (Fig. 68).

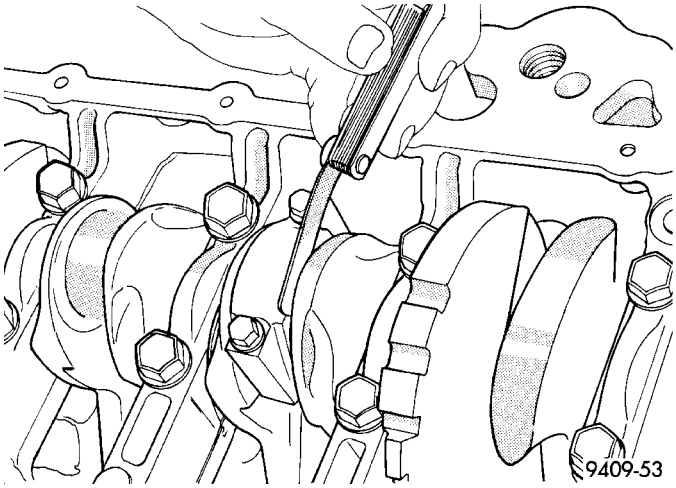

Fig. 68 Checking Connecting Rod Side Clearance

PISTON RINGS

STANDARD PROCEDURE

PISTON RING - FITTING

(1) Wipe cylinder bore clean. Insert ring and push down with piston to ensure it is square in bore. The ring gap measurement must be made with the ring positioning at least 12 mm (0.50 inch) from bottom of cylinder bore. Check gap with feeler gauge (Fig. 69). Refer to Engine Specifications.

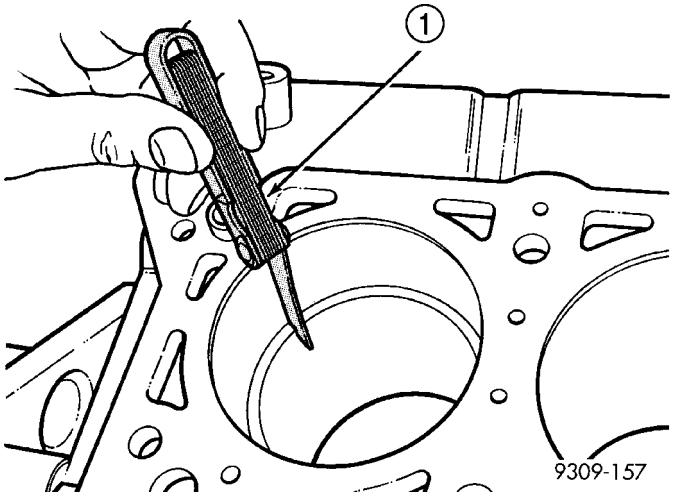

Fig. 69 Piston Ring Gap

1 - FEELER GAUGE

(2) Check piston ring to groove side clearance (Fig. 70). Refer to Engine Specifications.

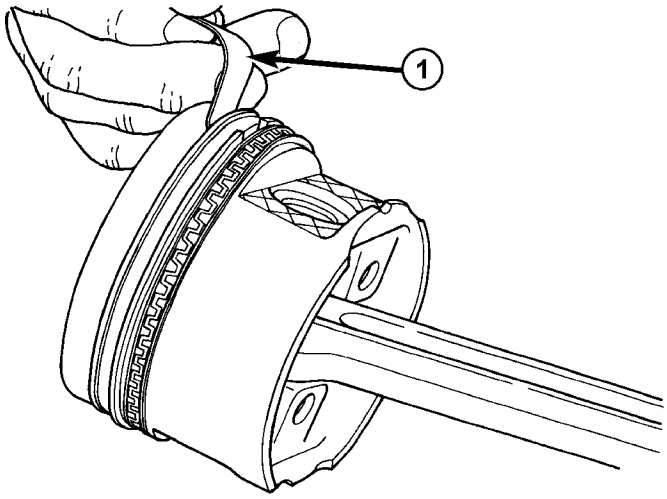

Fig. 70 Piston Ring Side Clearance

1 - FEELER GAUGE