VIBRATION DAMPER

REMOVAL

(1) Remove accesory drive belts. (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL)

(2) Remove crankshaft damper bolt.

(3) Remove damper using Special Tool 3-Jaw Puller 1026 and Insert 6827–A (Fig. 74).

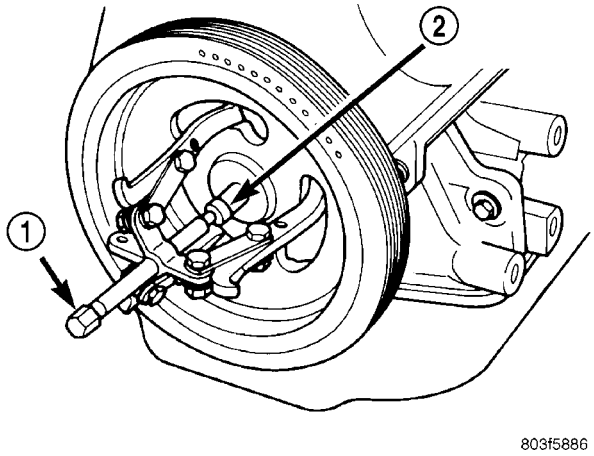

Fig. 74 Crankshaft Vibration Damper - Removal - Typical

1 - SPECIAL TOOL 1026 3-JAW PULLER
2 - SPECIAL TOOL 6827–A INSERT

INSTALLATION

(1) Install crankshaft vibration damper using M12 1.75 x 150 mm bolt, washer, thrust bearing and nut from Special Tool 6792 (Fig. 75).

(2) Install crankshaft vibration damper bolt and tighten to 142 N·m (105 ft. lbs.).

(3) Install accessory drive belts. (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION)

STRUCTURAL COLLAR

REMOVAL

(1) Raise vehicle on hoist.

(2) Remove structural collar attaching bolts.

(3) Remove collar.

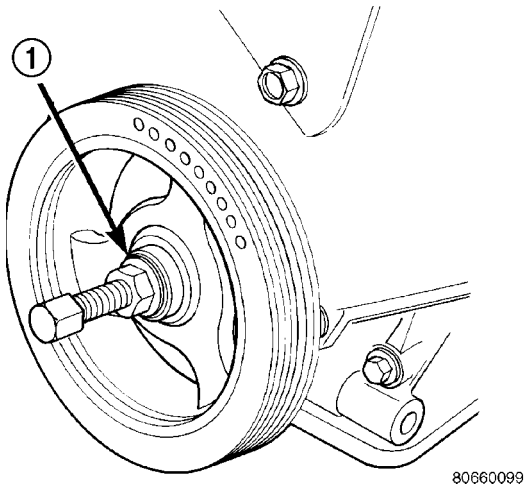

Fig. 75 Crankshaft Vibration Damper - Installation - Typical

1 - M12–1.75 × 150 MM BOLT, WASHER AND THRUST BEARING FROM SPECIAL TOOL 6792

INSTALLATION

CAUTION: Torque procedure for the structural collar must be followed or damage could occur to oil pan and collar.

(1) Perform the following steps for installing structural collar.

- Step 1: Position collar between transmission and oil pan. Install collar to transmission bolts, **hand start only**.
- Step 2: Install collar to oil pan bolts, **hand snug only.**
- Step 3: Tighten collar to transmission bolts.
- Step 4: Tighten collar to oil pan bolts.

(2) Lower vehicle.

ENGINE MOUNTING

DESCRIPTION

The engine mounting system consist of three mounts; right and a left side support the powertrain, and rear mount to control powertrain torque. The mounts are of molded rubber material.