REAR MOUNT

REMOVAL

NOTE: A resilient rubber cushion supports the transmission at the rear between the transmission extension housing and the rear support crossmember or skid plate.

(1) Disconnect negative cable from battery.
(2) Raise the vehicle and support the transmission.
(3) Remove the nuts holding the support cushion to the crossmember. Remove the crossmember.
(4) Remove the support cushion nuts and remove the cushion.
(5) Remove the transmission support bracket bolts and remove the bracket from the transmission.

INSTALLATION

(1) Install the support cushion to the transmission (Fig. 78)or (Fig. 79). Install the bolts and tighten.

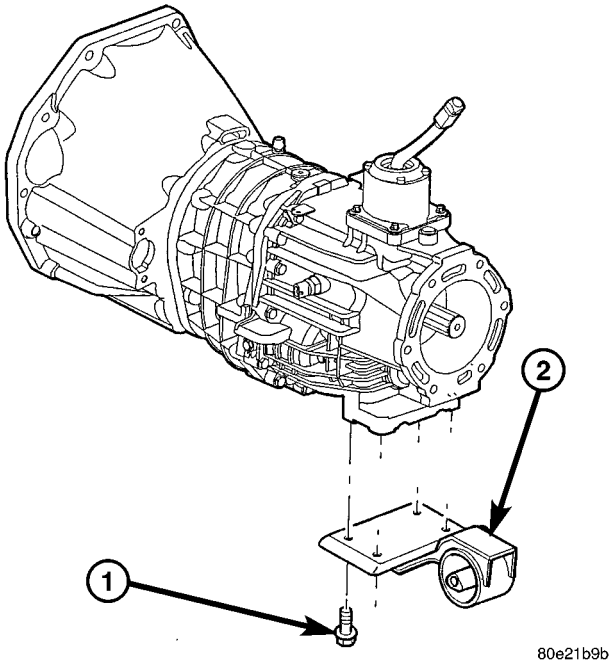

Fig. 78 TRANSMISSION MOUNT - 2.4L MANUAL TRANS

1 - TRANSMISSION MOUNT
2 - MOUNTING BOLT

(2) Position the crossmember in the vehicle. Install the crossmember to mount through bolt and nut.
(3) Install crossmember-to-sill bolts and tighten to 41 N·m (30 ft. lbs.) torque.
(4) Remove the transmission support.
(5) Lower the vehicle.
(6) Connect negative cable to battery.

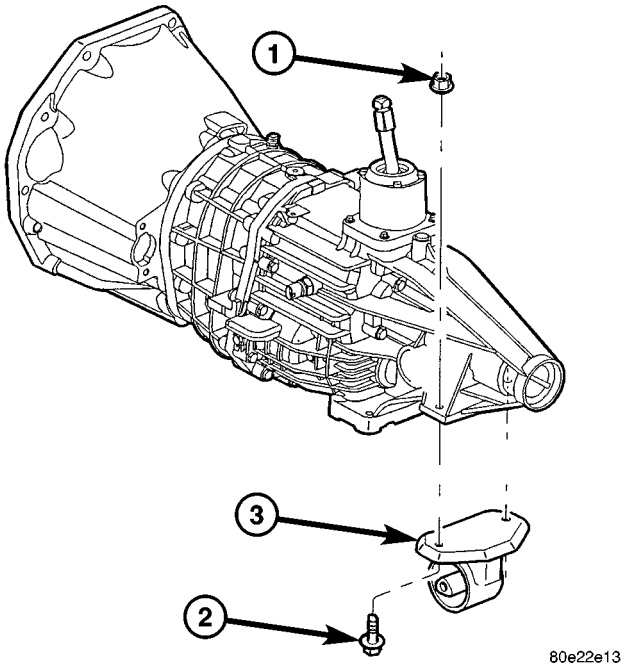

Fig. 79 TRANSMISSION MOUNT - 3.7L MANUAL TRANS 2WD

1 - NUT
2 - BOLT
3 - TRANS MOUNT

LUBRICATION

DESCRIPTION

The lubrication system is a full-flow filtration, pressure feed type. The oil pump is mounted in the front engine cover and driven by the crankshaft.

OPERATION

Engine oil drawn up through the pickup tube and is pressurized by the oil pump and routed through the full-flow filter to the main oil gallery running the length of the cylinder block. A diagonal hole in each bulkhead feeds oil to each main bearing. Drilled passages within the crankshaft route oil from main bearing journals to connecting rod journals. Balance shaft lubrication is provided through an oil passage from the number one main bearing cap through the balance shaft carrier support leg. This passage directly supplies oil to the front bearings and internal machined passages in the shafts that routes oil from front to the rear shaft bearing journals. A vertical hole at the number five bulkhead routes pressurized oil through a restrictor (integral to the cylinder head gasket) up past a cylinder head bolt to an oil gallery running the length of the cylinder head. The camshaft journals are partially slotted to allow a predetermined amount of pressurized oil to pass into the bearing cap cavities. Lubrication of the camshaft