OIL PUMP (Continued)

(4) If inner rotor measures 9.40 mm (0.370 in.) or less replace inner rotor (Fig. 88).

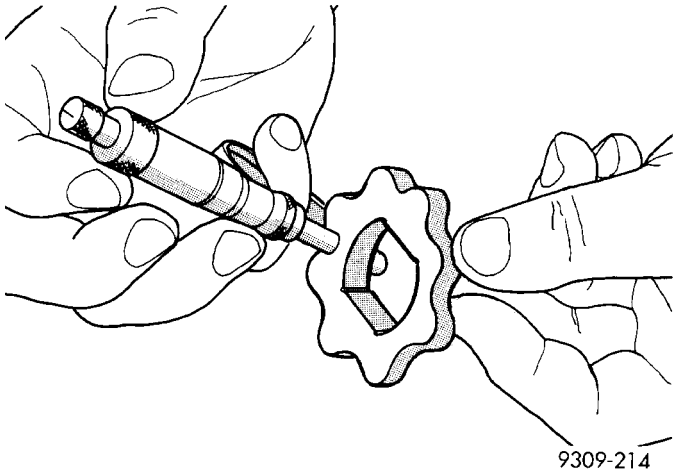

Fig. 88 Measuring Inner Rotor Thickness

ASSEMBLY

(1) Assemble pump, using new parts as required. **Install the inner rotor with chamfer facing the cast iron oil pump cover.**

(2) Prime oil pump before installation by filling rotor cavity with engine oil.

(3) Install cover and tighten fasteners to 12 N·m (105 in. lbs.).

CAUTION: Oil pump pressure relief valve must be installed correctly or serious engine damage may occur.

(4) Install relief valve, spring, gasket and cap. Tighten cap to 41 N·m (30 ft. lbs.).

INSTALLATION

(1) Make sure all surfaces are clean and free of oil and dirt.

(2) Apply Mopar® Gasket Maker to oil pump as shown in (Fig. 89). Install O-ring into oil pump body discharge passage.

(3) Prime oil pump with engine oil before installation.

(4) Align oil pump rotor flats with flats on crankshaft. Install the oil pump to the block.

CAUTION: To align, the front crankshaft seal MUST be out of pump, or damage may result.

(5) Install new front crankshaft seal using Special Tool 6780 (Fig. 90).

(6) Install crankshaft key (Fig. 84).

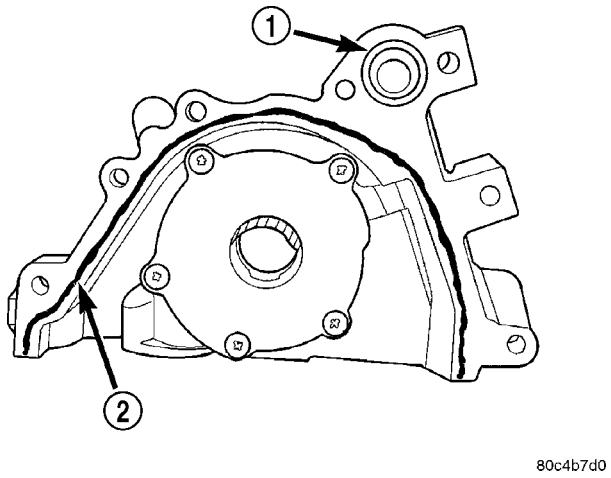

Fig. 89 Oil Pump Sealing - Typical

1 - O-RING
2 - SEALER LOCATION

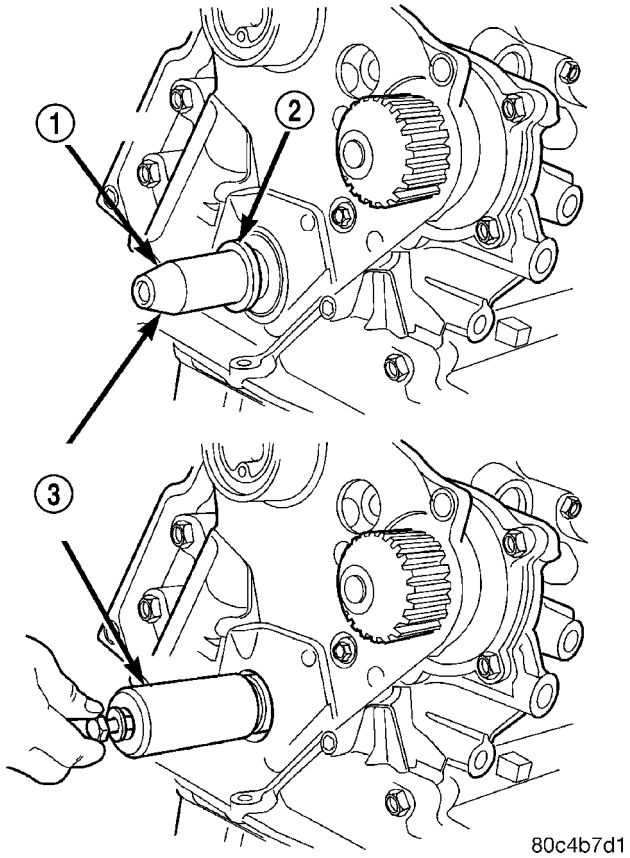

Fig. 90 Front Crankshaft Seal - Installation

1 - PROTECTOR
2 - SEAL
3 - SPECIAL TOOL 6780