TIMING BELT COVER(S) (Continued)

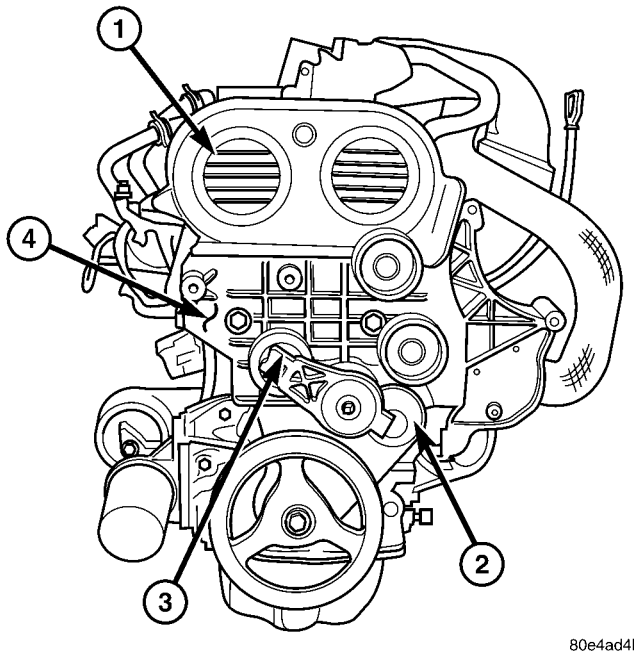

Fig. 95 ACCESSORY DRIVE BRACKET

1- UPPER TIMING BELT COVER
2- LOWER TIMING BELT COVER
3- BELT TENSIONER
4- ACCESSORY DRIVE BRACKET

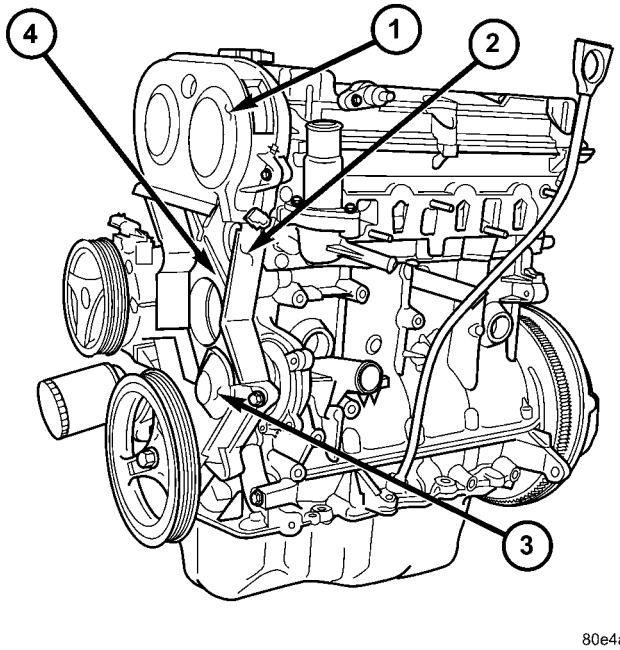

Fig. 96 TIMING BELT COVERS

1- UPPER TIMING BELT COVER
2- REAR TIMING BELT COVER
3- LOWER TIMING BELT COVER
4- ACCESSORY DRIVE BRACKET NOT SHOWN

(2) Install generator drive belt tensioner. (Refer to 7 - COOLING/ACCESSORY DRIVE/BELT TENSIONERS - INSTALLATION)

(3) Install crankshaft vibration damper. (Refer to 9 - ENGINE/ENGINE BLOCK/VIBRATION DAMPER - INSTALLATION)

TIMING BELT AND SPROCKET(S)

REMOVAL

TIMING BELT

(1) Remove air cleaner upper cover, housing, and clean air tube.

(2) Raise vehicle on hoist.

(3) Remove accessory drive belts. (Refer to 7 - COOLING/ACCESSORY DRIVE/BELT TENSIONERS - REMOVAL)

(4) Remove crankshaft vibration damper. (Refer to 9 - ENGINE/ENGINE BLOCK/VIBRATION DAMPER - REMOVAL)

(5) Remove air conditioner/generator belt tensioner and pulley assembly. (Refer to 7 - COOLING/ACCESSORY DRIVE/BELT TENSIONERS - REMOVAL)

(6) Remove timing belt lower front cover bolts and remove cover. (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT / CHAIN COVER(S) - REMOVAL)

(7) Lower vehicle.

(8) Remove bolts attaching timing belt upper front cover and remove cover. (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT / CHAIN COVER(S) - REMOVAL)

CAUTION: When aligning crankshaft and camshaft timing marks always rotate engine from crankshaft. Camshaft should not be rotated after timing belt is removed. Damage to valve components may occur. Always align timing marks before removing timing belt.

(9) Before the removal of the timing belt, rotate crankshaft until the TDC mark on oil pump housing aligns with the TDC mark on crankshaft sprocket (trailing edge of sprocket tooth) (Fig. 97).

NOTE: The crankshaft sprocket TDC mark is located on the trailing edge of the sprocket tooth. Failure to align trailing edge of sprocket tooth to TDC mark on oil pump housing will cause the camshaft timing marks to be misaligned.