TIMING BELT AND SPROCKET(S) (Continued)

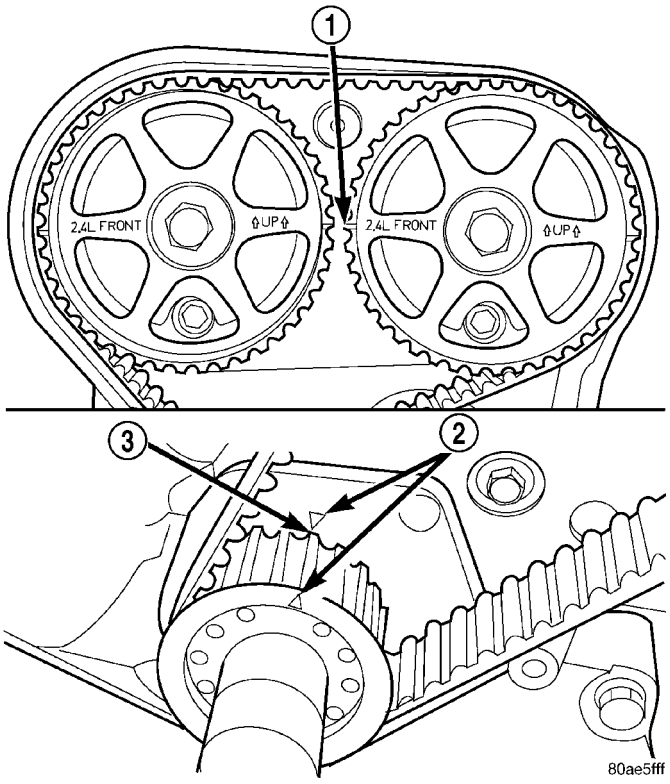

Fig. 97 Crankshaft and Camshaft Timing

1 - CAMSHAFT TIMING MARKS
2 - CRANKSHAFT TDC MARKS
3 - TRAILING EDGE OF SPROCKET TOOTH

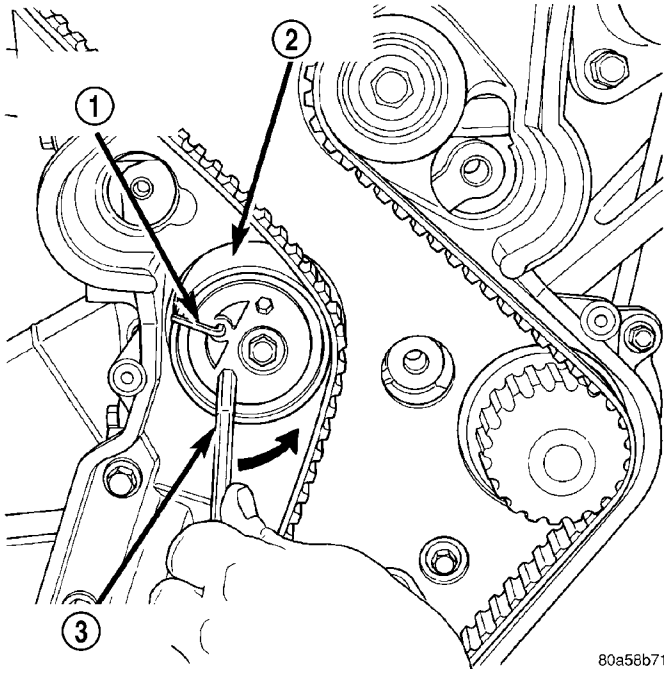

Fig. 98 Locking Timing Tensioner

1 - 1/8 OR 3mm ALLEN WRENCH
2 - BELT TENSIONER
3 - 6mm ALLEN WRENCH

(10) Install 6 mm Allen wrench into belt tensioner. Before rotating the tensioner, insert the long end of a 1/8" or 3 mm Allen wrench into the pin hole on the front of the tensioner (Fig. 98). While rotating the tensioner counterclockwise, push in lightly on the 1/8" or 3 mm Allen wrench, until it slides into the locking hole.

(11) Remove timing belt.

CRANKSHAFT SPROCKET

(1) Disconnect negative battery cable.

(2) Remove timing belt (Refer to 9 - ENGINE/ VALVE TIMING/TIMING BELT/CHAIN AND SPROCKETS - REMOVAL).

(3) Remove crankshaft sprocket using Special Tools 6793 and insert C-4685-C2 (Fig. 99).

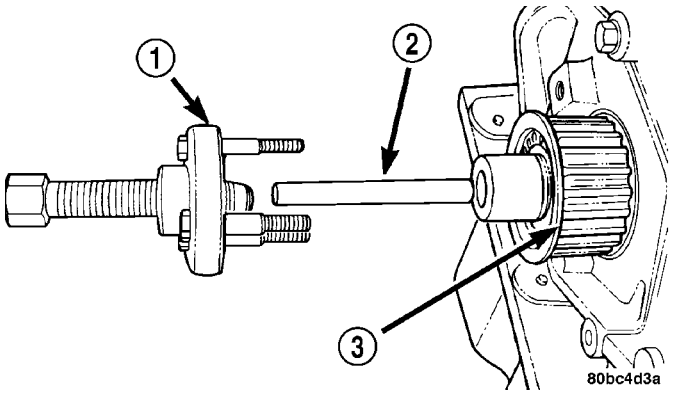

Fig. 99 Crankshaft Sprocket - Removal

1 - SPECIAL TOOL 6793
2 - SPECIAL TOOL C-4685–C2
3 - CRANKSHAFT SPROCKET

CLEANING

Do Not attempt to clean a timing belt. If contamination from oil, grease, or coolants have occurred, the timing belt should be replaced.

Clean all sprockets using a suitable solvent. Clean all sprocket grooves of any debris.

INSTALLATION

CRANKSHAFT SPROCKET

CAUTION: The crankshaft sprocket is set to a predetermined depth from the factory for correct timing belt tracking. If removed, use of Special Tool 6792 is required to set the sprocket to original installation depth. An incorrectly installed sprocket will result in timing belt and engine damage.