TIMING BELT AND SPROCKET(S) (Continued)

(9) Install timing belt front covers and bolts. (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT / CHAIN COVER(S) - INSTALLATION)

(10) Install air conditioning/generator belt tensioner and pulley. (Refer to 7 - COOLING/ACCESSORY DRIVE/BELT TENSIONERS - INSTALLATION)

(11) Install crankshaft vibration damper. (Refer to 9 - ENGINE/ENGINE BLOCK/VIBRATION DAMPER - INSTALLATION)

(12) Install accessory drive belts. (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION)

(13) Install drive belt splash shield.

(14) Install air cleaner housing, upper cover, and clean air tube.

# TIMING BELT TENSIONER & PULLEY

## REMOVAL

(1) Remove the timing belt. (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT/CHAIN AND SPROCKETS - REMOVAL)

(2) Remove timing belt idler pulley.

(3) Hold camshaft sprocket with Special Tool 6847 while removing bolt (Fig. 106). Remove both cam sprockets.

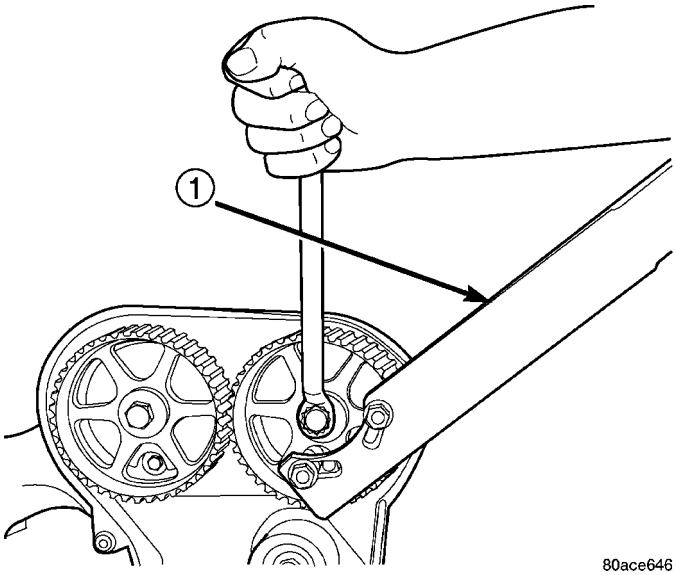


***Fig. 106 Camshaft Sprocket - Removal/Installation***

1 - SPECIAL TOOL 6847

(4) Remove rear timing belt cover fasteners and remove cover from engine (Fig. 107).

(5) Remove lower bolt attaching timing belt tensioner assembly to engine and remove tensioner **as an assembly**.

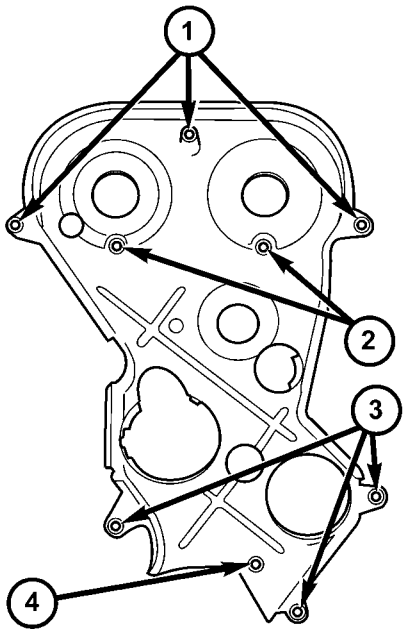


***Fig. 107 TIMING BELT REAR COVER FASTENERS***

1 - OUTER COVER TO REAR COVER FASTENERS (3)
2 - REAR COVER TO CYLINDER HEAD FASTENERS
3 - OUTER COVER TO REAR COVER FASTENERS (3)
4 - INNER COVER TO BLOCK FASTENERS

## INSTALLATION

(1) Align timing belt tensioner assembly to engine and install lower mounting bolt **but do not tighten**. To properly align tensioner assembly—install one of the engine bracket mounting bolts (M10) 5 to 7 turns into the tensioner's upper mounting location.

(2) Torque the tensioner's lower mounting bolt to 61 N·m (45 ft. lbs.). Remove the upper bolt used for tensioner alignment.

(3) Install rear timing belt cover and fasteners.

(4) Install timing belt idler pulley and torque mounting bolt to 61 N·m (45 ft. lbs.).

(5) Install camshaft sprockets. Use Special Tool 6847 to hold sprockets, torque bolts to 101 N·m (75 ft. lbs.).

(6) Install the timing belt. (Refer to 9 - ENGINE/VALVE TIMING/TIMING BELT/CHAIN AND SPROCKETS - INSTALLATION)